

## GROWNSY 916

# Growsy Bottle Sterilizer and Dryer Model 916 - Instruction Manual

Model: 916

## 1. INTRODUCTION AND PRODUCT OVERVIEW

---

This manual provides essential information for the safe and efficient operation of your Growsy Electric Steam Sterilizer and Dryer, Model 916. This appliance is designed to sterilize and dry baby bottles, pacifiers, breast pump parts, and other baby accessories using high-temperature steam and a 360-degree drying system.

Key features include:

- **Fast Sterilization:** Eliminates 99.9% of bacteria in just 8 minutes.
- **Efficient Drying:** Dries bottles up to 31% faster with a 360-degree drying design.
- **Space-Saving Design:** 20% more space-efficient than traditional models, accommodating essential feeding items.
- **Sterile Storage:** Integrated filter prevents air contamination, maintaining sterility for up to 24 hours.
- **5-in-1 Functionality:** Offers Sterilize, Dry, Quick Sterilization + Drying, Deep Sterilization + Drying, and Sterile Storage modes.
- **Universal Compatibility:** Suitable for major bottle brands, pacifiers, breast pump parts, and teething toys.
- **Safety Features:** Automatic shut-off for excessive pressure or low water levels.



Figure 1: Growsy Bottle Sterilizer and Dryer, Model 916.

## 2. PRODUCT COMPONENTS

Familiarize yourself with the various parts of your Growsy sterilizer and dryer:

- **Lid:** Top cover for the sterilizer.
- **Upper Basket:** For smaller items like pacifiers, nipples, and breast pump parts.
- **Lower Basket:** For larger items such as baby bottles.
- **Main Body/Base:** Contains the heating plate and control panel.
- **Control Panel:** Buttons for various functions (Sterilize, Dry, Sterilize+Dry, Sterile Storage).
- **Measuring Cup:** For adding the correct amount of water.
- **Tongs:** For safely handling hot sterilized items.

# Design di asciugatura a 360°

Garantisce che i biberon si asciughino rapidamente dentro e fuori

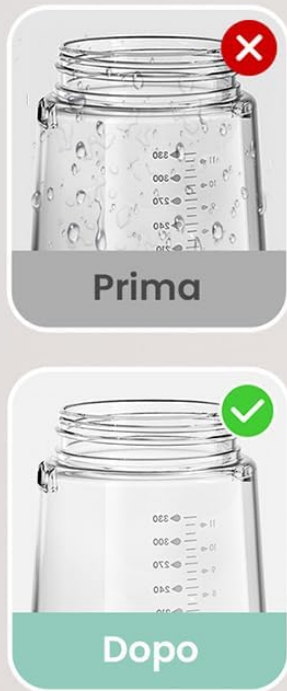


Figure 2: Exploded view of the Growsy Sterilizer showing its main components and capacity for various items.

## 3. SETUP AND INITIAL USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash all removable parts (baskets, lid) with warm soapy water and rinse thoroughly. Wipe the main body with a damp cloth. Do not immerse the main body in water.
3. **Assemble:** Place the lower basket onto the main body, then the upper basket (if needed), and finally the lid.
4. **Water Filling:** Using the provided measuring cup, add 90-100ml of distilled water to the heating plate in the main

body. Using distilled water helps prevent limescale buildup.

5. **Placement:** Place bottles upside down in the lower basket. Place nipples, pacifiers, and other small accessories in the upper basket. Ensure items are arranged to allow steam circulation.

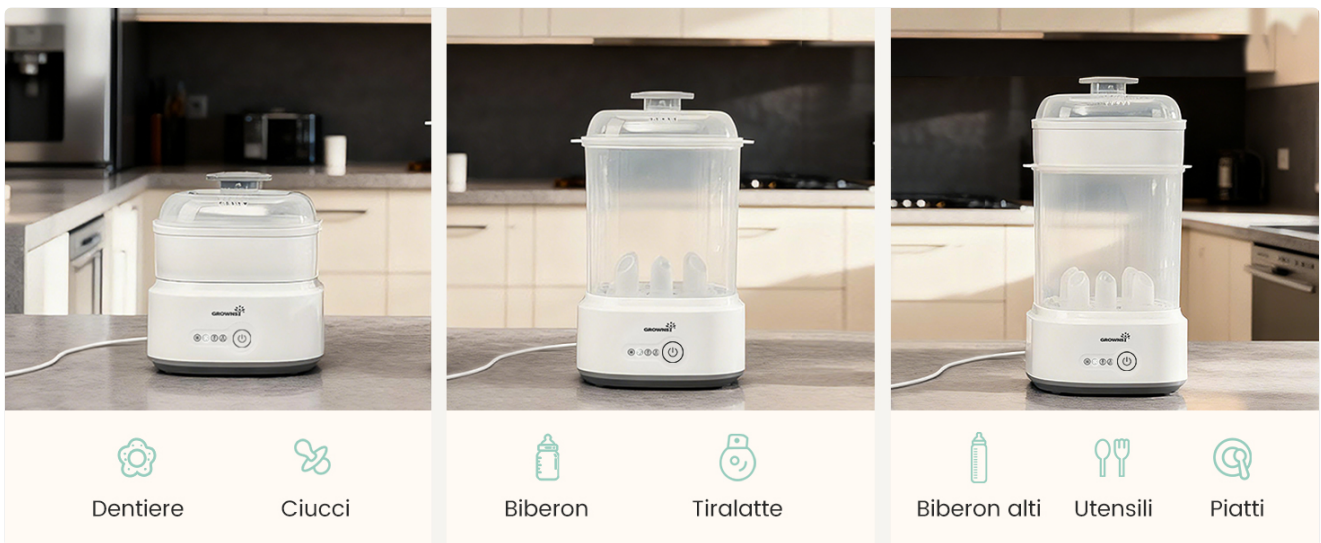


Figure 3: Various configurations for placing items in the sterilizer, from small pacifiers to tall bottles.

## 4. OPERATING INSTRUCTIONS

The Growsy sterilizer offers 5 automatic functions:

### 1. Sterilize:

- Add 90-100ml of distilled water to the heating plate.
- Place items in the baskets and close the lid.
- Press the "Sterilize" button. The cycle takes approximately 8 minutes.
- The unit will automatically shut off when the cycle is complete.

### 2. Dry:

- Ensure items are clean and placed in the baskets.
- Press the "Dry" button. Drying time varies (e.g., 30, 60, or 80 minutes depending on model/settings).
- The unit will automatically shut off when the cycle is complete.

### 3. Sterilize + Dry (Quick):

- Add 90-100ml of distilled water.
- Place items and close the lid.
- Press the "Sterilize + Dry" button for the quick cycle (e.g., 60 minutes total).
- This mode combines sterilization and drying for immediate use.

### 4. Sterilize + Dry (Deep):

- Add 90-100ml of distilled water.
- Place items and close the lid.
- Press the "Sterilize + Dry" button for the deep cycle (e.g., 80 minutes total).
- This mode provides extended drying for thorough results.

### 5. Sterile Storage:

- After a Sterilize + Dry cycle, the unit can maintain items in a sterile condition for up to 24 hours.
- The integrated filter helps prevent re-contamination from airborne particles.

Always use the provided tongs to remove hot items after sterilization or drying.



Figure 4: Illustration of the rapid sterilization process, eliminating 99.99% of germs.

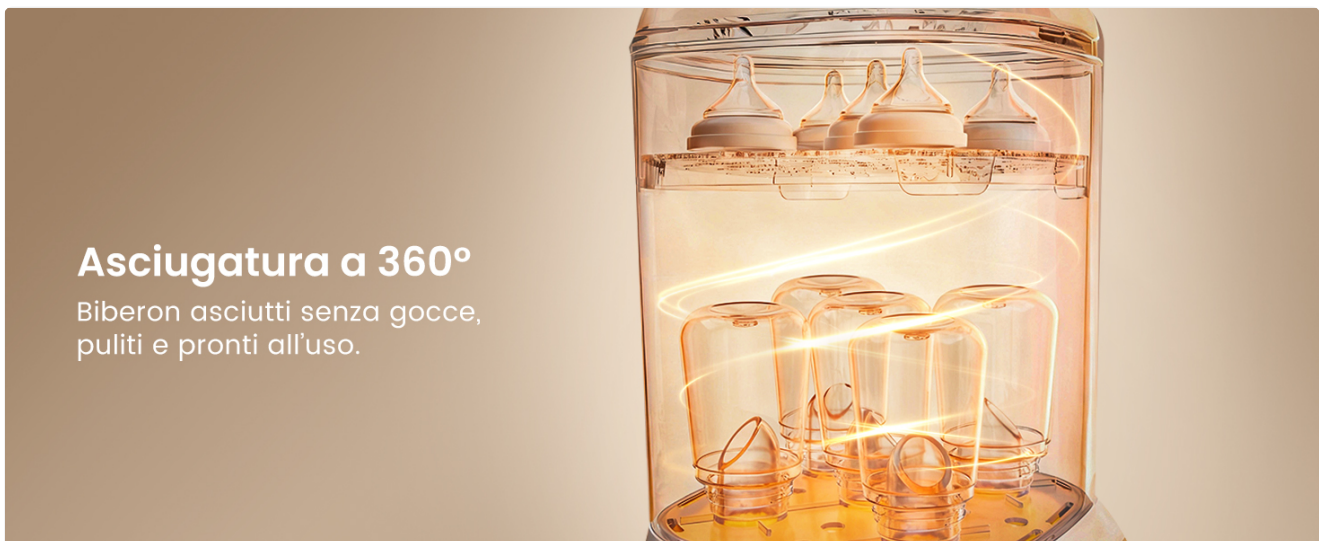


Figure 5: Visual representation of the 360-degree drying function, ensuring bottles are dry and ready for use.

## 5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your sterilizer.

- **Daily Cleaning:** After each use, unplug the unit and allow it to cool. Remove the baskets and lid. Wipe the heating plate and interior of the main body with a damp cloth to remove any water residue. Wash baskets and lid with warm soapy water and rinse.
- **Descaling:** Limescale buildup can occur on the heating plate, especially if tap water is used. To descale, mix 50ml of white vinegar with 100ml of water. Pour the solution onto the heating plate and let it sit for 30 minutes to an hour. Do not turn on the unit. Scrub gently with a soft brush or sponge, then rinse thoroughly. Repeat if necessary. Using distilled water for operation significantly reduces limescale.
- **Filter Maintenance:** The integrated air filter helps maintain sterility. Refer to the full product manual for specific instructions on cleaning or replacing the filter. Ensure the filter is clean and unobstructed for effective sterile storage.
- **Storage:** When not in use, ensure the unit is clean and dry. Store it in a cool, dry place away from direct sunlight.

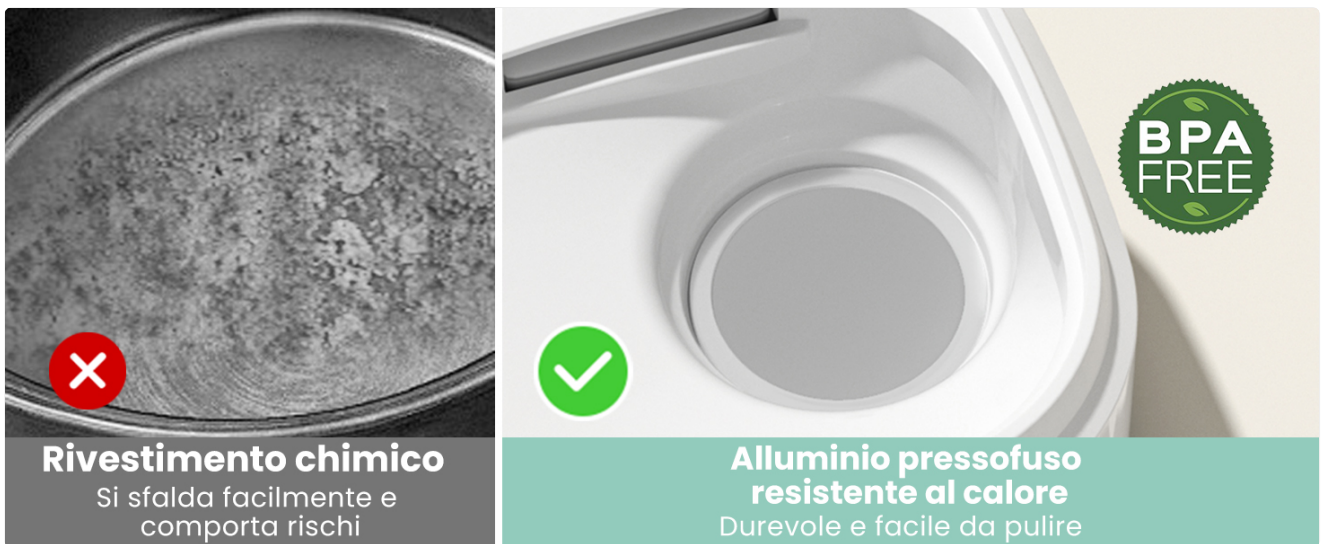


Figure 6: The sterilizer features a heat-resistant die-cast aluminum base, which is durable and easy to clean, unlike chemical coatings that can flake.



Figure 7: The advanced dual HEPA filter system removes 99.99% of airborne particles, ensuring a safer feeding environment.

## 6. TROUBLESHOOTING

If you encounter issues with your Grownsy sterilizer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet issue; unit malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Sterilization cycle does not start or stops prematurely.	Insufficient water; lid not properly closed; overheating.	Ensure the correct amount of distilled water is added. Check that the lid is securely closed. Allow the unit to cool down if it has been used recently.
Items are not completely dry after drying cycle.	Overloaded unit; items not properly arranged; drying cycle too short.	Do not overload the baskets. Arrange items to allow air circulation. Select a longer drying cycle if available (e.g., Deep Sterilization + Drying).

Problem	Possible Cause	Solution
Brown stains or residue on the heating plate.	Limescale buildup from tap water.	Descale the heating plate as described in the "Cleaning and Maintenance" section. Always use distilled water to prevent this.
Unpleasant odor during operation.	New unit odor; residue from previous use.	For first use, run a sterilization cycle with only water. Ensure all items are thoroughly cleaned before placing them in the sterilizer.

If the problem persists after attempting these solutions, please contact Growsny customer support.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Number	916
Dimensions	31.8 x 21.3 x 19.7 cm (12.5 x 8.4 x 7.8 inches)
Item Weight	1.67 kg (3.68 lbs)
Material	PP (Polypropylene)
Power Source	Electric (No batteries required)
Sterilization Method	High-temperature steam
Drying Method	360-degree hot air drying
Sterile Storage Duration	Up to 24 hours

## 8. WARRANTY AND SUPPORT

---

For warranty information, product registration, or technical support, please refer to the official Growsny website or contact their customer service department. Keep your purchase receipt as proof of purchase.

You can typically find contact information on the manufacturer's website or on the product packaging.

**Online Support:** [Visit the GROWNSY Store on Amazon](#)