

SomosBeds Elite Adjustable Bed Base Remote

Generic Remote Control Instruction Manual

For SomosBeds Elite Adjustable Bed Base

INTRODUCTION AND COMPATIBILITY

This manual provides instructions for the Generic replacement remote control designed for specific adjustable bed bases, including the SomosBeds Elite model. It is crucial to verify compatibility before use.

Important Note: This remote is not universal. It is specifically designed to work with control boxes identified by model numbers such as JLDP.15.012.001. To ensure correct functionality, please compare your existing remote and control box with the images and information provided.

Important Note:

Before placing your order please provide us with clear pictures of your control box and old remote (front & back) in order to match the correct remote to your bed, like this:

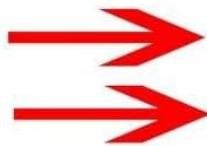


Image: Front and back view of the Generic remote control. Ensure your old remote is identical in appearance.

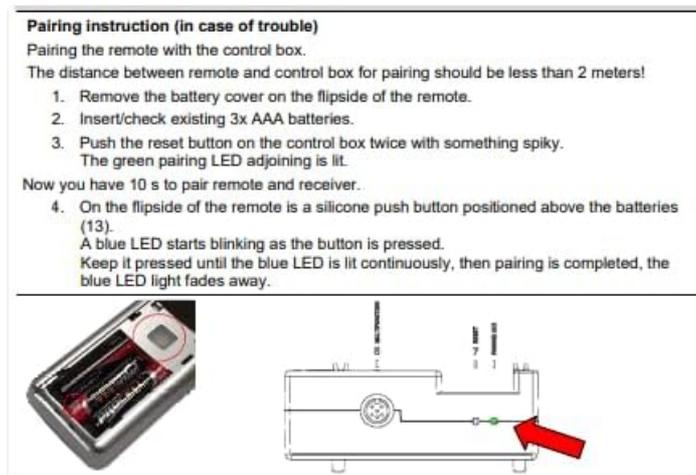


Image: Example of an adjustable bed control box. Locate your control box, typically mounted under the bed, and verify its model number for compatibility.

Before attempting to pair or use this remote, it is highly recommended to send clear photos of your bed's control box (including any labels with model numbers) and your old remote control (front and back) to the supplier for confirmation of compatibility.

SETUP AND PAIRING

1. Battery Installation

The remote control requires 2 AAA batteries (not included). Follow these steps to install them:

1. Remove the battery cover from the back of the remote control.
2. Insert 2 AAA batteries, ensuring correct polarity (+/-).
3. Replace the battery cover securely.



Image: Back of the remote control with the battery compartment open, showing where to insert AAA batteries.

2. Pairing the Remote Control

The remote control must be paired with your adjustable bed's control box to function. The pairing distance should be less than 2 meters (approximately 6.5 feet).

Method 1: Standard Pairing Process

1. Locate the black control box mounted under your bed.
2. Double-click the black **PAIR** button on the control box. The indicator light on the control box will change to blue, and any under-bed lights may flash. This indicates the control box is in pairing mode.
3. Within 10 seconds, press the **PAIR** button on your new remote control. The backlight of the remote control will flash.
4. Continue holding the **PAIR** button on the remote until its backlight stops flashing and remains constant. Simultaneously, the indicator light on the control box should change from blue to green and remain constant, or the under-bed lights will stop flashing and turn off.
5. The remote is now paired. Test functionality by pressing the Head Up, Foot Up, and Flat buttons.



Image: Back of the remote control, showing the location of the PAIR button (often a small button under the battery cover or on the back panel).

Method 2: Alternative Pairing Process (if Method 1 fails)

1. Unplug the power cord of your adjustable bed from the wall outlet.
2. Wait approximately 5 seconds.
3. Plug the power cord back into the outlet.
4. Within 10 seconds of plugging in the power cord, press and hold the **PAIR** button on the back of the remote control. The PAIR button's indicator light will illuminate blue and start flashing.
5. Release the **PAIR** button when its light stops flashing and the LED light on the control box goes out.
6. The remote should now be paired. Test all remote functions.

OPERATING THE REMOTE CONTROL

Familiarize yourself with the buttons on your remote control to operate your adjustable bed base.

Remote Pairing

The original remote that comes in the box is already paired to the adjustable base. No further action is required. In the event that the remote is not paired with the base, follow the steps below.

STEP 1

Locate the battery backup box and press the button TWICE. A light on the battery backup box will illuminate.

Battery backup box button



STEP 2

Remove the back cover of the remote, press and hold down the PAIR button. The PAIR button will illuminate blue and start flashing. When the PAIR button stops flashing, the illuminated light on the battery backup box will go out. Release the PAIR button. The remote is now paired to the adjustable base.

PAIR Button



STEP 3

Test all remote functions. If the remote buttons do not impact the adjustable base movements, please repeat the process again or call Tempur-Pedic customer service: U.S. 1-800-821-6621 | Canada : 1-800-887-4321 | México: 01-722-273-1810

*ALTERNATE REMOTE PAIRING PROCESS

Locate the control box (see parts list on page 4) and press the button twice. A green LED light will illuminate on the control box. On the back of the remote, press and hold the PAIR button. The PAIR button will illuminate blue and start flashing. When the PAIR button stops flashing, the green LED light on the control box will go out. Release the PAIR button. The remote is now paired to the adjustable base.

Child Lock Feature

Activate Child Lock



Press and hold HEAD UP and HEAD DOWN buttons together for approximately six (6) seconds. The remote backlight will flash twice. When the backlight light goes away, the remote is now in Child Lock. Pressing any buttons while in Child Lock will yield no movement to your adjustable base.

Deactivate Child Lock



Press and hold FOOT UP and FOOT DOWN buttons together for approximately six (6) seconds. The remote backlight will flash twice. When the backlight light goes away, the remote is no longer in Child Lock. The remote and adjustable base will work normally.

10

Image: Front view of the remote control, displaying various function buttons.

- **Head Up/Down:** Adjusts the head section of the bed.
- **Foot Up/Down:** Adjusts the foot section of the bed.
- **Flat:** Returns the bed to a completely flat position.
- **Zero Gravity / Anti-Snore / Lounge (if present):** Pre-set positions for comfort.
- **Memory Presets (M1, M2, etc.):** Saves and recalls your favorite bed positions.
- **Massage (if present):** Activates and adjusts massage functions.
- **Under-bed Light (if present):** Controls the under-bed lighting.

Refer to your adjustable bed base's original manual for specific details on pre-set positions and advanced features, as remote button labels may vary slightly.

MAINTENANCE

Battery Replacement

When the remote control's performance degrades or the indicator lights dim, it's time to replace the batteries. Follow the battery installation steps outlined in the "Setup and Pairing" section.

- Always use 2 new AAA batteries.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

If your remote control is not functioning correctly, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are correctly installed and not depleted. Replace them if necessary.

- Ensure there are no obstructions between the remote and the bed base's control box.
- Confirm you are within the effective range (less than 2 meters) for pairing and operation.

- **Pairing Failure:**

- Repeat the pairing process (Method 1 or Method 2) carefully, ensuring all steps are followed within the specified timeframes.
- Ensure the control box is receiving power.
- Verify that your control box model is compatible with this remote. Refer to the "Introduction and Compatibility" section.

- **Intermittent Operation:**

- Weak batteries can cause intermittent operation. Replace them.
- Check for any loose connections in the bed base's power supply or control box.

If problems persist after attempting these steps, contact your product supplier for further assistance, providing details of your bed base and control box.

SPECIFICATIONS

Model Compatibility:	For SomosBeds Elite Adjustable Bed Base (and other compatible control boxes like JLDP.15.012.001)
Power Source:	2 x AAA Batteries (not included)
Color:	Black
Max Supported Devices:	1 (per remote)
Manufacturer:	SZHKHXD

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your original adjustable bed base or contact the retailer from whom you purchased this replacement remote control. It is recommended to have your purchase details and photos of your control box and remote available when seeking support.