

## TODIMART T3

# TODIMART T3 Electric Scooter User Manual

Model: T3

## 1. INTRODUCTION

Thank you for choosing the TODIMART T3 Electric Scooter. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your scooter. Please read it thoroughly before your first ride to ensure optimal performance and safety.

The TODIMART T3 is designed for daily commutes, featuring a powerful 350W brushless motor, a 36V 7.8Ah lithium-ion battery for a range of 30-35 km, and a top speed of 25 km/h. It includes an intelligent app control system, dual braking for enhanced safety, and 8.5-inch solid honeycomb tires for a maintenance-free experience. Its lightweight and foldable design makes it highly portable.

## 2. SAFETY INFORMATION

Your safety is paramount. Always adhere to the following guidelines:

- **Wear Protective Gear:** Always wear a helmet and other protective gear (knee pads, elbow pads) when riding.
- **Observe Traffic Laws:** Follow all local traffic laws and regulations. Ride responsibly and be aware of your surroundings.
- **Weather Conditions:** Avoid riding in heavy rain, snow, or icy conditions. Wet surfaces can reduce traction and braking effectiveness.
- **Weight Limit:** Do not exceed the maximum load capacity of 120 kg.
- **Pre-Ride Check:** Before each ride, inspect the brakes, tires, and ensure the battery is sufficiently charged.
- **Age Recommendation:** This scooter is suitable for adults. While the manufacturer states it may be suitable for children aged 12-15, adult supervision and adherence to local age restrictions are strongly advised.

### 3. PACKAGE CONTENTS

---

Upon opening your TODIMART T3 Electric Scooter package, please verify that all the following items are included:

- TODIMART T3 Electric Scooter
- Power Charger
- Assembly Tools
- User Manual (this document)

### 4. SETUP AND FIRST USE

---

#### 4.1 Unfolding the Scooter

The TODIMART T3 is designed for quick and easy folding. To unfold:

1. Place the scooter on a flat surface.
2. Release the folding mechanism latch, typically located near the base of the handlebar stem.
3. Carefully lift the handlebar stem until it locks into an upright position. Ensure the locking mechanism is fully engaged and secure.



**TODIMART**

The TODIMART T3 scooter is ultra-lightweight and portable, folding in 3 seconds for easy transport and storage.

#### 4.2 Initial Charging

Before your first ride, fully charge the scooter's battery. Connect the charger to the charging port on the scooter and then to a power outlet. The charging indicator on the charger will change color (e.g., red to green) when fully charged.

#### 4.3 App Connection

The TODIMART T3 features intelligent app control via Bluetooth. Download the official TODIMART app from your smartphone's app store. Enable Bluetooth on your phone, open the app, and follow the on-screen instructions to pair with your scooter. This allows access to features like locking, speed customization, and cruise control.



The TODIMART T3 features app control and an LED display for monitoring speed, battery, and other functions.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Powering On/Off

To power on the scooter, press and hold the power button on the display for a few seconds. The display will light up. To power off, press and hold the power button again until the display turns off.

### 5.2 Riding Modes and Speed Control

The scooter offers three speed modes: 10 km/h, 20 km/h, and 25 km/h. You can cycle through these modes using the button on the display. The current speed mode will be indicated on the LCD screen. You can also customize the maximum speed via the mobile app.

### 5.3 Acceleration and Braking

To accelerate, gently press the thumb throttle. Release the throttle to slow down. The TODIMART T3 is equipped with a dual braking system: an electronic brake on the front wheel and a mechanical disc brake on the rear wheel. Apply both brake levers simultaneously for effective and safe stopping.



The scooter features a bright headlight, rear brake light, and a reliable dual braking system.

### 5.4 Lighting System

The scooter is equipped with an anti-glare front headlight and a rear safety brake light to ensure visibility during night riding. Activate the lights using the designated button on the handlebar or via the app.




Illuminate your path with the anti-glare front light and ensure safety with the rear brake light.

### 5.5 App Functions

The TODIMART app provides several smart features:

- **Lock/Unlock:** Secure your scooter with a tap.
- **Speed Customization:** Adjust maximum speed settings to your preference.

- **Cruise Control:** Activate for a consistent speed during long rides.
- **Fault Detection:** Monitor the scooter's status and receive alerts for potential issues.
- **Location Search:** Track your scooter's location.

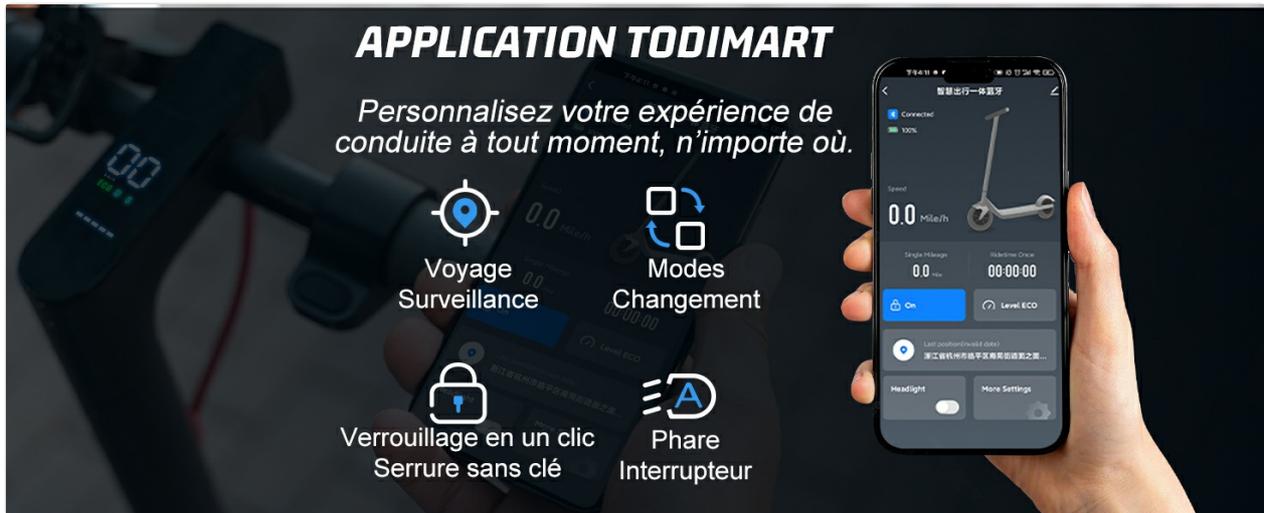

The TODIMART app allows you to personalize your riding experience with various control features.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TODIMART T3 Electric Scooter.

### 6.1 Battery Care

- Charge the battery regularly, even if the scooter is not in use for extended periods.
- Avoid completely discharging the battery.
- Store the scooter and battery in a cool, dry place, away from direct sunlight and extreme temperatures.

### 6.2 Tire Inspection

The TODIMART T3 is equipped with 8.5-inch solid honeycomb tires, which are puncture-proof and require no inflation. However, regularly inspect them for signs of wear, cracks, or embedded debris to ensure optimal grip and safety.



The 8.5-inch solid honeycomb tires are maintenance-free and puncture-resistant.

### 6.3 Cleaning

Wipe the scooter with a damp cloth to remove dirt and dust. Do not use high-pressure water jets or immerse the scooter in water, as this can damage electrical components.

## 6.4 Brake System Check

Periodically check the brake levers for proper tension and ensure the mechanical disc brake and electronic brake respond effectively. If you notice any issues, consult a qualified technician.

## 7. TROUBLESHOOTING

This section addresses common issues you might encounter with your TODIMART T3 Electric Scooter.

Problem	Possible Cause	Solution
Scooter does not turn on	Low battery; Power button not pressed correctly; Internal fault	Charge the battery; Press and hold the power button firmly; Contact support if issue persists.
Reduced range or speed	Low battery charge; Riding uphill frequently; Heavy load; Tire wear	Ensure full charge; Adjust riding style; Check tire condition.
App connectivity issues	Bluetooth off; App not updated; Scooter not in pairing mode	Ensure Bluetooth is enabled on phone; Restart app and scooter; Update app to latest version.
Brakes feel loose or ineffective	Brake cable tension; Worn brake pads; Disc brake misalignment	Inspect brake cables and pads; Adjust brake tension; Consult a technician for complex brake issues.

## 8. SPECIFICATIONS

Key technical specifications for the TODIMART T3 Electric Scooter:



Overview of the TODIMART T3's core performance specifications.

Feature	Specification
---------	---------------

Feature	Specification
Model	T3
Motor Power	350W (Peak 650W) Brushless DC Motor
Battery Type	36V 7.8Ah (280.8Wh) Lithium-ion
Max Range	30-35 km
Max Speed	25 km/h
Climbing Capacity	Up to 25°
Max Load	120 kg
Tire Size	8.5 inches
Tire Type	Solid Honeycomb (Puncture-proof)
Braking System	Front Electronic Brake, Rear Mechanical Disc Brake
Net Weight	11.8 kg
Frame Material	Aluminum Alloy
Unfolded Dimensions (L x W x H)	108 x 43 x 114 cm
Folded Dimensions (L x W x H)	108 x 43 x 49 cm
Special Features	Digital Display, Speedometer, Foldable, Anti-slip Surface, App Control

## 9. WARRANTY AND SUPPORT

---

TODIMART provides a commitment to quality and customer satisfaction. Spare parts availability is guaranteed for 3 years from the date of purchase.

For any questions, technical assistance, or warranty claims, please contact TODIMART customer support through the retailer where you purchased the product or visit the official TODIMART website for contact information. Please have your purchase receipt and scooter model number (T3) ready when contacting support.

## 10. PRODUCT VIDEOS

---

### 10.1 TODIMART T3 Electric Scooter Overview

Your browser does not support the video tag.

This video provides a general overview of the TODIMART T3 Electric Scooter, showcasing its design and key features.

### 10.2 TODIMART T3 Features Demonstration

Your browser does not support the video tag.

Watch this video for a demonstration of the TODIMART T3's various features, including its folding mechanism and app connectivity.