

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bear](#) /
- › [Bear Portable Bottle Warmer User Manual \(Model B0FD9ZY6YR\)](#)

Bear B0FD9ZY6YR

Bear Portable Bottle Warmer User Manual

Model: B0FD9ZY6YR

Brand: Bear

1. INTRODUCTION

The Bear Portable Bottle Warmer is designed to provide warm milk or water for your baby anytime, anywhere. Featuring precise temperature control, fast heating, and a long-lasting battery, this device is ideal for travel, night feedings, and daily use. Its compact and leak-proof design ensures convenience and safety.

2. IMPORTANT SAFETY INFORMATION

- Do not use the bottle warmer while charging to ensure optimal heating efficiency and device longevity.
- Always check the temperature of the liquid before feeding your baby to prevent burns.
- Keep the device out of reach of children when not in use.
- Ensure the child-safety lock is engaged when transporting the warmer to prevent leaks.
- Only use the provided USB-C cable for charging.
- Do not immerse the main unit in water. Refer to the cleaning section for proper maintenance.
- This product is designed for warming milk or water. Do not use it for other liquids or purposes.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Portable Milk & Water Warmer (x1)
- USB-C Cable (x1)
- User Manual (x1)



Figure 1: What's in the Box - Portable Milk & Water Warmer, USB-C Cable, and User Manual.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the device. Connect the provided USB-C cable to the charging port on the warmer and to a power adapter (18W or higher recommended for fast charging). An 80% charge can be achieved in approximately 1.5 hours, with a full charge taking about 2 hours. The LED display will indicate the battery level.

4.2 First Use Cleaning

Before adding any liquid, clean the inner stainless steel container and the lid components thoroughly with warm water and mild soap. Rinse well and ensure all parts are dry before reassembling.

5. OPERATING INSTRUCTIONS

5.1 Filling the Warmer

Unscrew the top lid. Pour up to 17 ounces of breastmilk, formula, or water into the food-grade 316 stainless steel inner container. Ensure the liquid level does not exceed the maximum fill line. Securely screw the lid back on.

Large Capacity 170z

Ideal for large families or big-appetite babies



Figure 2: The 17oz large capacity is suitable for multiple feedings.

5.2 Setting Temperature and Heating

1. Press and hold the power button (circle icon) on the base to turn on the device. The LED display will illuminate.
2. Use the '+' and '-' buttons to adjust the desired temperature. The warmer offers precise temperature control.
3. Once the desired temperature is set, the device will begin heating. For example, 5oz of milk or formula can reach 104°F in approximately 3 minutes. The LED display will show the current temperature as it rises.
4. When the target temperature is reached, the device will beep and automatically switch to the 'Keep

Warm' mode.

Fast Warming 50z of Water to 104°F in Just 3 Mins

Instant comfort for your little one



Figure 3: Fast heating capability of the warmer.

5.3 Keep Warm Function

The automatic keep-warm function maintains your set temperature for up to 17 hours, ensuring milk or water is ready for night feedings or extended outings.

5.4 Child-Safety Lock

The warmer features a child-safety lock on the lid to prevent accidental spills. Slide the lock mechanism to the closed position to secure the lid, making it safe for transport in diaper bags or during travel.



Figure 4: The child-safety lock prevents accidental leaks.

6. CHARGING

The Bear Portable Bottle Warmer is equipped with a 10000mAh battery, allowing it to warm up to 7 bottles (5oz each) on a full charge. It supports USB-C fast charging. Use an 18W or higher fast-charging adapter for optimal charging speed. The charging port has a dust cover for protection.

Long-Lasting Battery Performance




10000mAh
High Capacity Battery


Warm up 17 Oz
milk/water
(≥4 times)



Warm up 5 Oz
milk/water
(≥7times)

Figure 5: High capacity battery for extended use.

High-Speed Charging

80% 1.5h

100% 2h

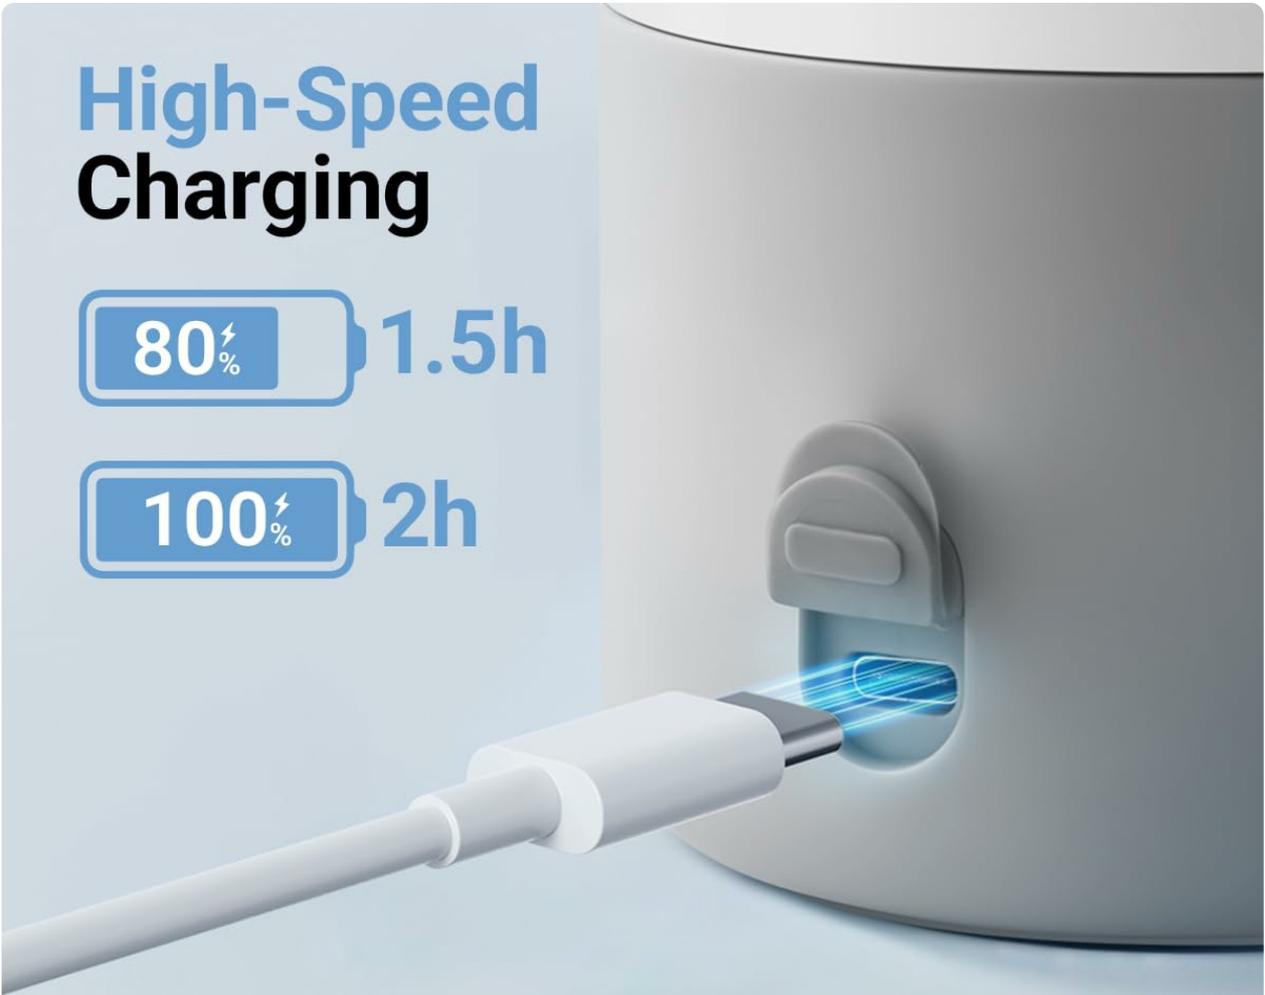

*Note: A fast-charging adapter of 18W or higher is required.

VS

100% 4-5h

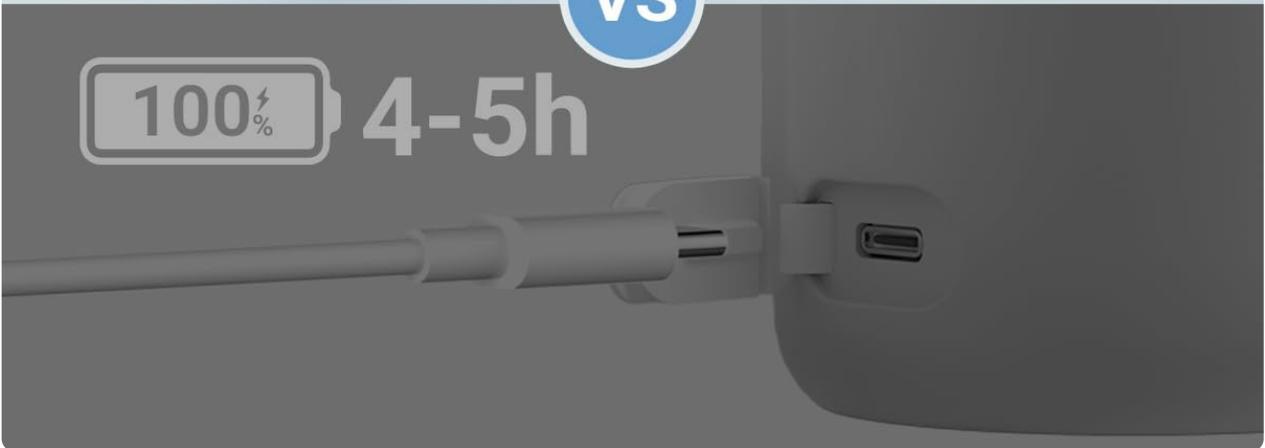


Figure 6: Fast charging with USB-C.

What's in the Box?

Portable Milk & Water Warmer *1



USB-C Cable *1



User Manual *1

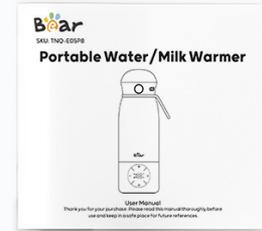


Figure 7: Multiple charging methods for convenience.

7. MAINTENANCE AND CLEANING

7.1 Cleaning

The warmer features a 1.85-inch wide mouth, making it easy to clean. Separate the lid and silicone ring from the main unit. Hand wash all components with warm water and mild soap. Rinse thoroughly and allow to air dry completely before reassembling. Ensure the charging port is dry before closing its cover.

Easy to Clean



Bear



Wide mouth



Removable lid and silicone ring

Other brand



Narrow mouth



Figure 8: Wide mouth design for easy cleaning.

7.2 Pasteurization Function

The warmer includes a built-in pasteurization function (149°F) to eliminate 99% of bacteria, helping to protect your baby's digestive health. To activate, press and hold the '+' and '-' buttons simultaneously for 2 seconds. This feature ensures a hygienic environment inside the cup.

Best Care for Baby

Built-in cleaning and sterilization maintain a hygienic environment inside the cup



65°C/149°F
pasteurization



Eliminates 99%
of bacteria



Helping protect
your baby's digestive health



Figure 9: Pasteurization for enhanced hygiene.

7.3 Dry-Burn Protection

The device is equipped with dry-burn protection, which automatically shuts off the heating element if there is insufficient liquid, preventing damage to the warmer.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or no charge.	Charge the device fully using the provided USB-C cable and an 18W+ adapter.
Liquid is not heating up.	Insufficient liquid, device not properly sealed, or not in heating mode.	Ensure adequate liquid, check lid for proper seal, and confirm device is in heating mode (not just 'Keep Warm'). Avoid using while charging.
Device leaks.	Lid not properly secured or child-safety lock disengaged.	Ensure the lid is tightly screwed on and the child-safety lock is engaged. Check silicone ring for proper placement.
Battery life is shorter than expected.	Frequent use, very cold initial liquid temperature, or aging battery.	Ensure full charge before use. For very cold liquids, heating takes more energy. If issues persist, contact customer service.

If you encounter any issues not listed here, please refer to the warranty and support section for assistance.

9. SPECIFICATIONS

- **Product Dimensions:** 3.43 x 3.43 x 9.92 inches
- **Item Weight:** 1.65 pounds
- **Battery:** 1 Lithium Ion battery (included), 10000mAh
- **Material Composition:** 45% stainless steel, 35% plastic, 20% silicone (Food-grade 316 stainless steel inner)
- **Charging:** USB-C, compatible with 18W or higher fast-charging adapters
- **Heating Power:** 100W
- **Heating Time:** Approximately 3 minutes for 5oz to 104°F
- **Keep Warm Duration:** Up to 17 hours
- **Special Features:** Built-in 65°C/149°F Pasteurization Function, Dry-Burn Protection, Child-Safety Lock
- **Care Instructions:** Hand wash

10. WARRANTY AND SUPPORT

Bear provides a 1-year warranty for this product. For any questions, technical support, or warranty claims, please contact our customer service team. We offer 24/7 customer service and lifetime technical support to ensure your satisfaction.

Contact Information: [Please refer to your product packaging or the official Bear website for specific contact details.]

11. PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video 1: Official product video demonstrating the Bear Portable Bottle Warmer for travel, highlighting its features and ease of use.