

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Miady](#) /
- › [Miady LED Desk Lamp Model LDL08 User Manual](#)

Miady LDL08

Miady LED Desk Lamp Model LDL08 User Manual

Comprehensive instructions for setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the Miady LED Desk Lamp Model LDL08. This manual provides detailed instructions to help you set up, operate, and maintain your new desk lamp. Designed for comfort and versatility, this lamp features adjustable brightness, an auto-off timer, and eye-caring illumination suitable for various tasks such as working, studying, reading, drawing, and crafting.





Image 1.1: Miady LED Desk Lamp Model LDL08, showcasing its sleek, foldable design.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- (1) Miady LED Desk Lamp
- (1) USB Charging Cable
- (2) AAA Batteries (for clock/display function)

3. PRODUCT OVERVIEW


The Miady LED Desk Lamp is designed with user convenience and eye comfort in mind. Key features include:

- **Adjustable Brightness:** 6 brightness levels and stepless dimming.

- **Auto-Off Timer:** 15, 30, or 45-minute timer options.
- **Memory Function:** Recalls the last used brightness setting.
- **Eye Protection:** 5000K warm white light, flicker-free, glare-free, with a Color Rendering Index (CRI) of over 90.
- **Flexible Design:** 135° adjustable arm, 90° rotating axis base, and 270° swivel lamp head.
- **Power Options:** Built-in 3600mAh rechargeable battery and USB power supply.

6 Adjustable Brightness

Create any brightness you want

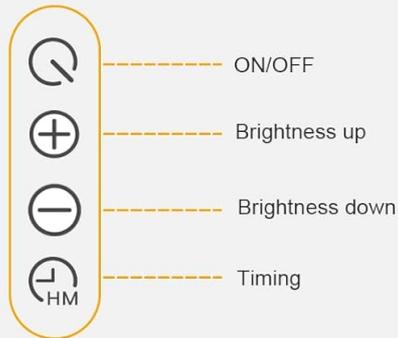

Touch the button +/_ to change your Brightness
Long press the button +/_ to Stepless dimming



6 Adjustable Brightness

10%  100%

Image 3.1: Close-up of the lamp's control panel, showing touch buttons for power, brightness adjustment, and timer.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the lamp on a stable, flat surface.
3. **Adjust Arm:** Adjust the lamp arm and head to your desired position. The arm is 135° adjustable, the base has a 90° rotating axis, and the lamp head swivels 270°.
4. **Initial Charge:** Before first use, it is recommended to fully charge the lamp. Connect the provided USB charging cable to the lamp's charging port and a 5V/2A USB power source (not included), such as a laptop, power bank, or AC adapter. The display on the lamp will blink until fully charged (approximately 4-5 hours).

Multiple ways of powering



Image 4.1: Illustration of various USB power sources for the lamp, including laptop, computer, wall socket, and power bank.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- Touch the **Power button** on the base to turn the lamp on or off.
- The lamp will automatically resume the last used brightness setting due to its memory function.

5.2 Adjusting Brightness

- **Brightness Levels:** Short touch the '+' or '-' buttons to cycle through 6 preset brightness levels.
- **Stepless Dimming:** Long press the '+' or '-' buttons for continuous, stepless brightness adjustment. Release the button when the desired brightness is reached.

6 BRIGHTNESS LEVELS

ShortTouch Control



STEPLESS DIMMING

Long Touch(100%)



Image 5.1: Visual representation of the 6 brightness levels and the stepless dimming function.

5.3 Auto-Off Timer

- Touch the **Timer button** to activate the auto-off timer.
- Each touch cycles through 15, 30, and 45-minute timer settings. The selected time will be displayed on the lamp's base.
- The lamp will automatically turn off after the set duration.

AUTO-OFF TIMER DESIGN



Image 5.2: The lamp with its auto-off timer function active, showing the timer display on the base.

5.4 Memory Function

- The lamp retains your last used brightness setting. When turned on again, it will automatically revert to that setting.

Memory Function

conveniently and automatically remember your settings



Flicker Free



Super Bright



Power Efficient



Smart Memory



Image 5.3: Depiction of the memory function, showing the lamp returning to previous settings after being turned off and on.

6. CHARGING THE LAMP

The lamp features a built-in 3600mAh rechargeable battery, allowing for cordless operation. To charge:

1. Connect the provided USB charging cable to the lamp's charging port.
2. Connect the other end of the USB cable to a 5V/2A USB power adapter (not included), a computer USB port, or a power bank.
3. The display on the lamp's base will indicate charging status. It takes approximately 4-5 hours for a full charge.
4. A full charge provides up to 4 hours of use at high brightness or 4-6 hours continuously depending on the brightness level.

Note: For optimal battery life, ensure the lamp is fully charged before its first use.

7. ADJUSTABILITY

The Miady LED Desk Lamp offers extensive adjustability to direct light precisely where needed:

- The lamp arm can be adjusted up to 135°.
- The base features a 90° rotating axis.
- The lamp head can swivel 270°.

These adjustments allow for a broader lighting range and help save desktop space when folded.



Image 7.1: Demonstrates the lamp's flexible design with various adjustable angles for the arm and head.

8. EYE PROTECTION FEATURES

This desk lamp is engineered to provide comfortable and safe illumination:

- **Flicker-Free:** Emits a stable light to prevent eye strain.
- **Glare-Free:** Designed to reduce harsh reflections and glare.
- **High CRI:** With a Color Rendering Index (CRI) of over 90, the lamp produces light close to natural daylight, ensuring accurate color representation.
- **Reduced Blue Light Hazard:** Minimizes harmful blue light emissions.



Image 8.1: Highlights the lamp's eye protection benefits, including flicker-free and glare-free illumination with high CRI.

9. MAINTENANCE

- **Cleaning:** Disconnect the lamp from power before cleaning. Use a soft, dry cloth to wipe the lamp. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the lamp in a cool, dry place. Ensure the battery is partially charged (around 50%) before storage to prolong its lifespan.
- **Battery Care:** Avoid fully discharging the main rechargeable battery frequently. Recharge the lamp regularly, even if not in constant use.

10. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not turn on.	Main rechargeable battery is depleted or not charged. Power cable is not connected properly.	Connect the lamp to a power source using the USB cable and allow it to charge for 4-5 hours. Ensure the USB cable is securely connected to both the lamp and the power adapter.
Lamp does not hold a charge for long.	Main rechargeable battery not fully charged initially. Battery degradation over time.	Ensure the lamp is fully charged for 4-5 hours before first use. If the issue persists after prolonged use, battery capacity may have decreased.
Brightness adjustment not working.	Controls unresponsive.	Ensure your finger makes full contact with the touch buttons. If unresponsive, try turning the lamp off and on again.
Timer function not activating.	Incorrect button press.	Ensure you are pressing the dedicated Timer button. Each press should cycle through the timer options (15/30/45 minutes).

11. SPECIFICATIONS

Feature	Detail
Model Name	LDL08
Brand	Miady
Light Source Type	LED
Number of LED Bulbs	48
Brightness	48 Lumens (Max)
Light Color Temperature	5000K Warm White
Color Rendering Index (CRI)	>90
Power Source	Built-in 3600mAh Rechargeable Battery / USB Powered
Charging Time	Approx. 4-5 hours
Battery Life (Rechargeable)	Up to 4 hours (high brightness), 4-6 hours (continuous, depending on level)
Switch Type	Touch Control
Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions (Folded/Base)	2"D x 2"W x 3"H

Feature	Detail
Item Weight	2.09 pounds
Adjustability	135° arm, 90° base rotation, 270° head swivel
Included Components	LED Desk Lamp, USB Charging Cable, 2 AAA Batteries

12. WARRANTY AND SUPPORT

For any questions or support regarding your Miady LED Desk Lamp, please contact Miady customer service. You can typically find contact information by visiting the Miady storefront on the platform where you purchased the product and looking for an "Ask a question" link or customer support details. Please retain your proof of purchase for warranty claims.