

Rolipo GT01

Rolipo GT01 Ultrasonic Cleaner User Manual

1. INTRODUCTION

Thank you for choosing the Rolipo GT01 Ultrasonic Cleaner. This device combines 45 kHz ultrasonic technology with powerful UV light to provide a thorough and hygienic cleaning solution for various items, including dental appliances, jewelry, and small accessories. Please read this manual carefully before use to ensure proper operation and maintenance.



Figure 1: The Rolipo GT01 Ultrasonic Cleaner is a compact and efficient device designed for thorough cleaning of various items.

2. SAFETY INFORMATION

- Ensure the device is placed on a stable, dry, and level surface.
- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children.
- Each unit is equipped with overheating protection and automatic shut-off to prevent damage.
- The UV light activates automatically when the lid is closed and turns off immediately upon opening. Avoid direct exposure to UV light.
- Use only the provided power adapter.
- Do not operate the device if it is damaged or malfunctioning.

3. PACKAGE CONTENTS

- Rolipo GT01 Ultrasonic Cleaner Unit
- Power Adapter
- Tweezer for easy item removal
- User Manual

4. PRODUCT FEATURES

- **Dual Cleaning Technology:** Combines 45 kHz ultrasonic vibration for deep cleaning and powerful UV light for disinfection.
- **Enhanced UV Lamps:** Four UV light sources ensure comprehensive disinfection, reaching all areas of your items.
- **Quick Deep Cleaning:** A 5-minute cleaning cycle provides efficient and effective results.
- **Large Tank Capacity:** Features a spacious 320 ml tank made of durable 304 stainless steel.
- **Multi-functional Use:** Ideal for cleaning dental appliances (dentures, aligners, retainers, mouthguards), jewelry, toothbrush heads, pacifiers, and other small personal items.
- **User-Friendly Design:** Simple one-touch operation and compact, quiet design suitable for home or travel.
- **Safety Features:** Includes overheating protection and automatic UV light shut-off when the lid is opened.

VERBESSERTE FUNKTION EFFEKTIVER



4 UV-Lampen
99.99%
Sterilisationsrate



One TouchSchalter
5-Minuten Modus



Hinweis: Zum Einschalten den Schalter länger als 2 Sekunden berühren.
Zum Ausschalten den Schalter kurz betätigen.

Figure 2: This image demonstrates the dual cleaning action of the Rolipo GT01. It highlights UV disinfection, 360-degree effective descaling, and 45kHz ultrasonic vibration, which work together to clean dental appliances thoroughly.



Überhitzungsschutzprogramm



Umweltfreundlicher
Edelstahl 304



Automatische
Abschaltung
des UV-Lichts



SICHERER UND AUFMERKSAMER

Figure 3: The Rolipo GT01 features four enhanced UV lamps for effective sterilization and a simple one-touch switch to activate the 5-minute cleaning cycle. To power on, press and hold the switch for over 2 seconds. To power off, briefly touch the switch.

MULTIFUNKTIONEN

Für verschiedene tägliche Bedürfnisse



Figure 4: Safety is a priority with the Rolipo GT01. It includes an overheating protection program, is constructed from environmentally friendly 304 stainless steel, and features automatic UV light shut-off when the lid is opened, ensuring safe operation.

REINIGUNGSTIPPS

Vor




Bei leichten Flecken mit Wasser und Reinigungstabletten reinigen. Bitte beachten Sie, dass die Reinigungstablette nicht im Lieferumfang enthalten ist.

Nach



Vor

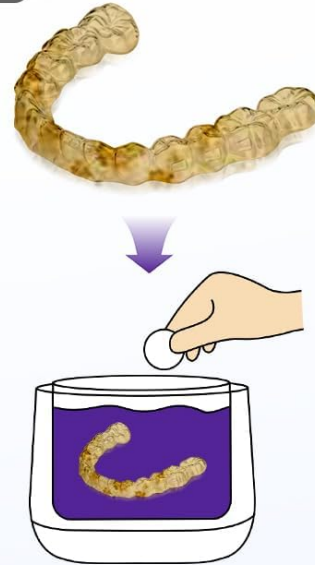

Geben Sie bei hartnäckigeren Flecken eine Reinigungstablette hinzu und wechseln Sie das Wasser 2–3 Mal, um eine gründliche Reinigung zu erzielen.

Nach



Figure 5: The Rolipo GT01 is versatile, designed for various daily cleaning needs. Its 320ml tank can accommodate dental appliances like dentures, aligners, and retainers, as well as jewelry, toothbrush heads, and other small personal items.

5. SETUP

1. Unpack the Rolipo GT01 Ultrasonic Cleaner and all accessories.
2. Place the unit on a flat, stable, and dry surface, away from heat sources or direct sunlight.
3. Connect the power adapter to the DC input port on the back of the unit, then plug the adapter into a standard electrical outlet.
4. Ensure the lid is closed before powering on.

6. OPERATING INSTRUCTIONS

Basic Cleaning Procedure:

1. **Fill the Tank:** Open the lid and fill the stainless steel tank with water. Ensure the water level covers the items to be cleaned but does not exceed the MAX fill line.
2. **Place Items:** Carefully place your dental appliances, jewelry, or other items into the water. Use the included tweezer for easy handling.
3. **Close the Lid:** Close the lid securely. The UV light will activate automatically once the lid is closed.
4. **Power On:** Touch and hold the power switch for more than 2 seconds to turn on the device.
5. **Start Cleaning:** Briefly touch the power switch to start the 5-minute cleaning cycle. The indicator light will illuminate.
6. **Cycle Completion:** The device will automatically shut off after 5 minutes.
7. **Remove Items:** Open the lid (UV light will turn off) and carefully remove your cleaned items using the tweezer.
8. **Empty and Rinse:** Empty the water from the tank and rinse the tank thoroughly with clean water.

For Stubborn Stains:

For heavily soiled items, you may repeat the cleaning cycle once or twice. For optimal results with stubborn stains, consider using a non-abrasive cleaning tablet specifically designed for dental appliances (not included) along with water. Change the water after each cycle when dealing with heavy residue.

7. MAINTENANCE

- **Cleaning the Tank:** After each use, empty the water and rinse the stainless steel tank with clean water. Wipe it dry with a soft cloth.
- **Exterior Cleaning:** Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the device in a cool, dry place when not in use.
- **Descaling:** If mineral deposits accumulate in the tank, use a mild descaling solution or white vinegar diluted with water. Run a short cycle, then rinse thoroughly.

8. TROUBLESHOOTING

- **Device does not turn on:** Ensure the power adapter is securely connected to both the unit and the electrical outlet. Check if the outlet is functional. Press and hold the power switch for more than 2 seconds to power on.
- **No ultrasonic vibration:** Ensure the tank is filled with water and the lid is closed. If the issue persists, contact customer support.
- **UV light not working:** The UV light only activates when the lid is closed. If the lid is closed and the light is still off, contact customer support.
- **Poor cleaning results:** Ensure items are fully submerged. For stubborn stains, repeat the cleaning cycle or use a specialized cleaning tablet. Ensure the water is clean.

9. SPECIFICATIONS

Feature	Specification
Model Number	GT01
Brand	Rolipo

Tank Capacity	320 ml
Ultrasonic Frequency	45 kHz
UV Lamps	4
Cleaning Cycle	5 minutes (automatic shut-off)
Material	304 Stainless Steel (tank)
Dimensions (L x W x H)	16.1 x 13.6 x 13.4 cm
Weight	620 grams

10. WARRANTY AND SUPPORT

The Rolipo GT01 Ultrasonic Cleaner comes with a **12-month warranty** from the date of purchase. Rolipo is committed to providing lifetime technical support and prompt customer service for all its products.

If you encounter any issues or have questions regarding your device, please contact our customer support team. Please have your purchase information and model number (GT01) ready when contacting support.

© 2026 Rolipo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question