

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Healthkeep](#) /
- › [Healthkeep Digital Bathroom Scale T107 User Manual](#)

Healthkeep T107

Healthkeep Digital Bathroom Scale T107 User Manual

INTRODUCTION

Thank you for choosing the Healthkeep Digital Bathroom Scale T107. This manual provides essential information for the safe and effective use of your new scale. Please read it thoroughly before operation and retain it for future reference.



The Healthkeep Digital Bathroom Scale T107 features a sleek black tempered glass surface and a clear LED display for easy weight readings.

SAFETY INFORMATION

- Always place the scale on a hard, flat surface. Using it on soft surfaces like carpet may affect accuracy.
- The scale's surface is made of tempered glass. Ensure it is dry before stepping on it to prevent slipping.
- Do not jump on the scale or use it for purposes other than weighing.
- Keep the scale away from water and extreme temperatures.
- This scale is designed for personal use and is not intended for commercial or medical purposes.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Healthkeep Digital Bathroom Scale T107
- 2 x AA Batteries
- User Manual (this document)

PRODUCT FEATURES

- **High-Precision Sensors:** Equipped with 4 upgraded G sensors for accurate measurements within ± 0.2 lb (0.1 kg).
- **Unit Switching:** Easily switch between kilograms (kg), pounds (lb), and stones (st).
- **Step-On Technology:** Provides instant readings without tapping or manual activation.
- **Auto-Calibration:** Automatically calibrates for consistent and reliable results.
- **Bright LED Display:** Backlit display ensures clear readability in various lighting conditions.
- **Durable Design:** Features 5mm shatter-resistant tempered glass, rounded corners, and an anti-slip base.
- **Compact Size:** Measures 10.2 x 10.2 x 0.87 inches (26 x 26 x 2.2 cm) for easy storage.



An internal view illustrating the scale's robust construction, including its tempered glass platform, LED display, four high-precision sensors, and safety features like anti-slip padding and rounded corners.



Contemporary Design

The scale's minimalist design complements any style of home.

The scale's 5mm thick tempered glass provides a sturdy and reliable weighing surface, capable of supporting weights up to 180 kg or 400 lbs.

SETUP

1. **Install Batteries:** Open the battery compartment on the underside of the scale. Insert the two included AA batteries, ensuring correct polarity (+/-). Close the compartment securely.
2. **Placement:** Place the scale on a hard, flat, and stable surface. Avoid carpets, rugs, or uneven flooring, as this can affect accuracy.
3. **Initial Calibration:** For the first use or after moving the scale, step on it briefly until the display shows '0.0' or a reading, then step off. The scale will automatically calibrate to zero.

OPERATING INSTRUCTIONS

Taking a Measurement

1. Ensure the scale is on a hard, flat surface.
2. Gently step onto the scale with bare feet or with shoes, distributing your weight evenly.
3. Stand still until your weight is displayed and stabilizes. The reading will flash a few times before locking.
4. Step off the scale. The display will turn off automatically after a few seconds.




The scale's minimalist design allows for easy measurement, even with shoes on, and highlights its compact 26 cm by 26 cm footprint.

Switching Weight Units

The unit button is located on the underside of the scale. Press this button to cycle through the available units: kilograms (kg), pounds (lb), and stones (st).

Easy to Read

Bright backlight ensures easy day and night usage, even in dim light

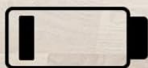

Low Battery
Indication




400lb/
180 kg Max



The bright backlit LED display ensures clear readability in various lighting conditions, showing weight, low battery warnings, and the selected unit (kilograms or pounds).

MAINTENANCE AND CARE

- **Cleaning:** Wipe the scale's surface with a damp cloth and mild detergent. Avoid abrasive cleaners or submerging the scale in water.
- **Storage:** Store the scale in a cool, dry place. Avoid placing heavy objects on it when not in use.
- **Battery Replacement:** If the display shows a 'Lo' indicator, replace the batteries with new AA batteries.

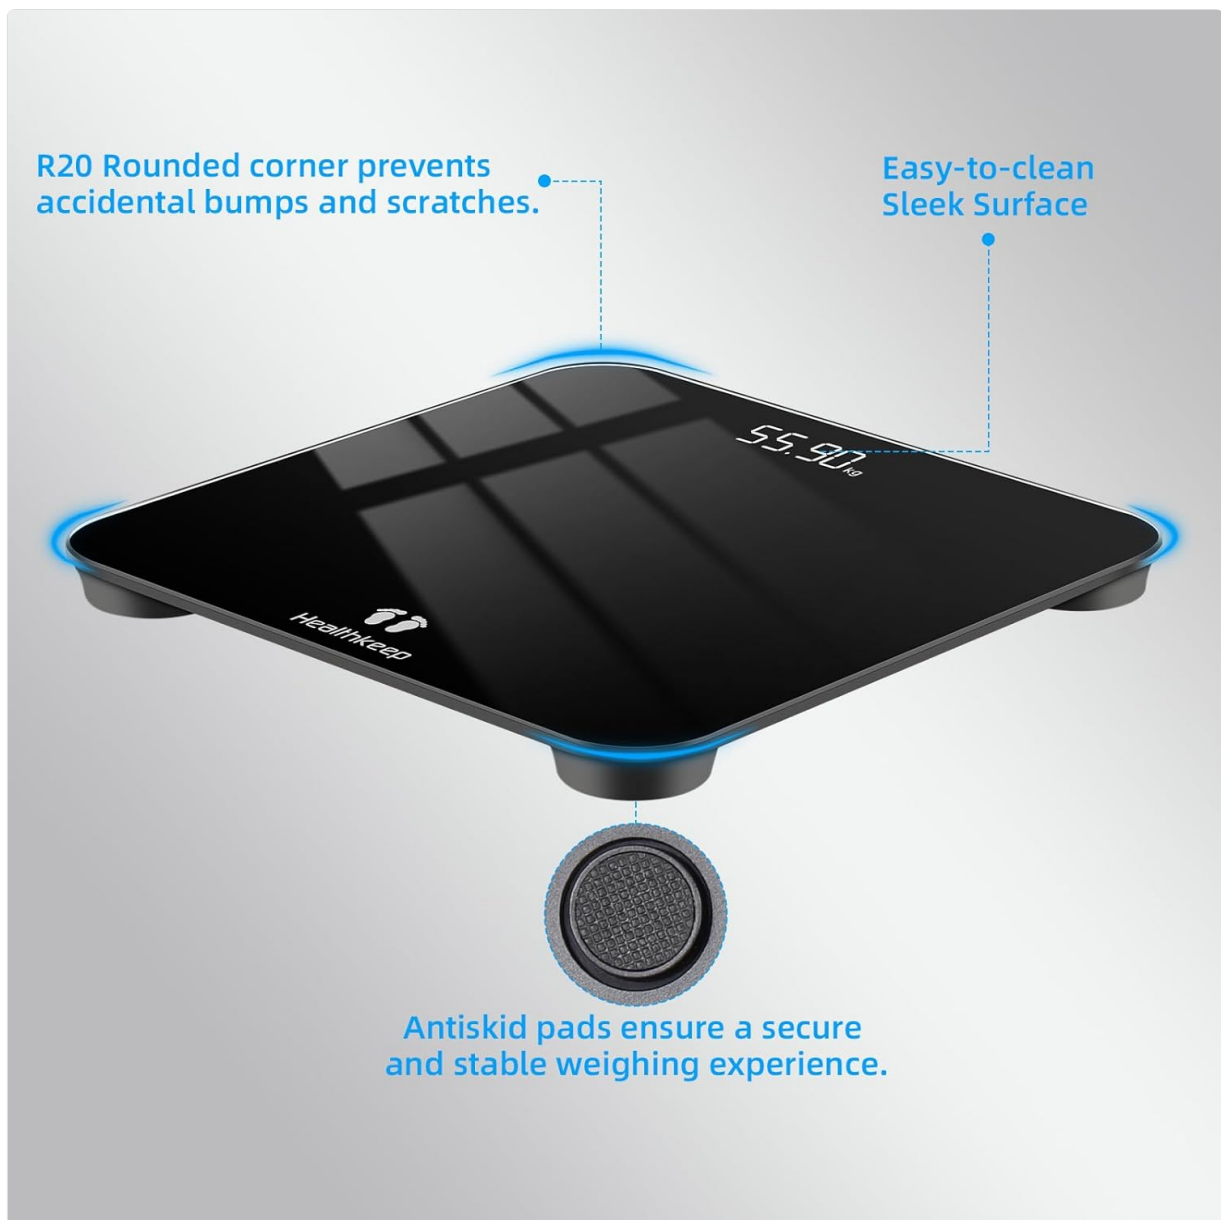

Designed for safety and stability, the scale features R20 rounded corners to prevent accidental bumps, a sleek, easy-to-clean surface, and antiskid pads for secure placement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No display / 'Lo'	Batteries are low or incorrectly installed.	Replace batteries with new AA batteries, ensuring correct polarity.
'Err' or Inaccurate readings	Scale is on an uneven surface, overloaded, or needs re-calibration.	Place scale on a hard, flat surface. Step off, wait for '0.0', then re-weigh. Ensure weight does not exceed 400 lbs (180 kg).
Display shows 'OL'	Scale is overloaded.	The maximum weight capacity is 400 lbs (180 kg). Remove excess weight.

SPECIFICATIONS

- **Model:** T107

- **Brand:** Healthkeep
- **Product Dimensions:** 11.02 x 11.02 x 1.57 inches (28 x 28 x 4 cm)
- **Weight Limit:** 400 lbs / 180 kg / 28 st
- **Display Type:** LED
- **Power Source:** 2 x AA Batteries
- **Material:** 5mm Tempered Glass

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the manufacturer's official website or contact Healthkeep customer service directly. Keep your purchase receipt as proof of purchase.

You can also find additional information and a downloadable PDF version of the instructions for use here: [Healthkeep Digital Bathroom Scale T107 Instructions for Use \(PDF\)](#)