

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [COMHOMA](#) /

› [COMHOMA Small Standing Desk \(CO-DH005\) User Manual](#)

COMHOMA CO-DH005

COMHOMA Small Standing Desk (Model: CO-DH005) User Manual

Adjustable Height & Tilttable Tabletop Mobile Stand Up Desk

[Safety Information](#)

[Components List](#)

[Setup Instructions](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. SAFETY INFORMATION

Important safety guidelines for using your COMHOMA Small Standing Desk:


- Do not exceed the weight limit of 176 pounds.
- Ensure the desk is properly anchored to prevent tipping.
- Use caution in noise-sensitive environments due to rolling wheels.
- Keep hands clear of moving parts during height and tilt adjustments.
- Ensure all screws and fasteners are tightened before use.

2. COMPONENTS LIST

Verify all parts are present before assembly:

- Desktop (Part 1)
- Side Brackets (Part 2)
- Connecting Rods (Part 3)
- Connecting Bracket (Part 4)
- Barrier Strip (Part 5)
- Angle Adjusters (Part 6)

- Brake Casters (Part E)
- Standard Casters (Part F)
- Star Head Screws (Part G, H)
- Assembly Tools (Allen wrench, wrench)

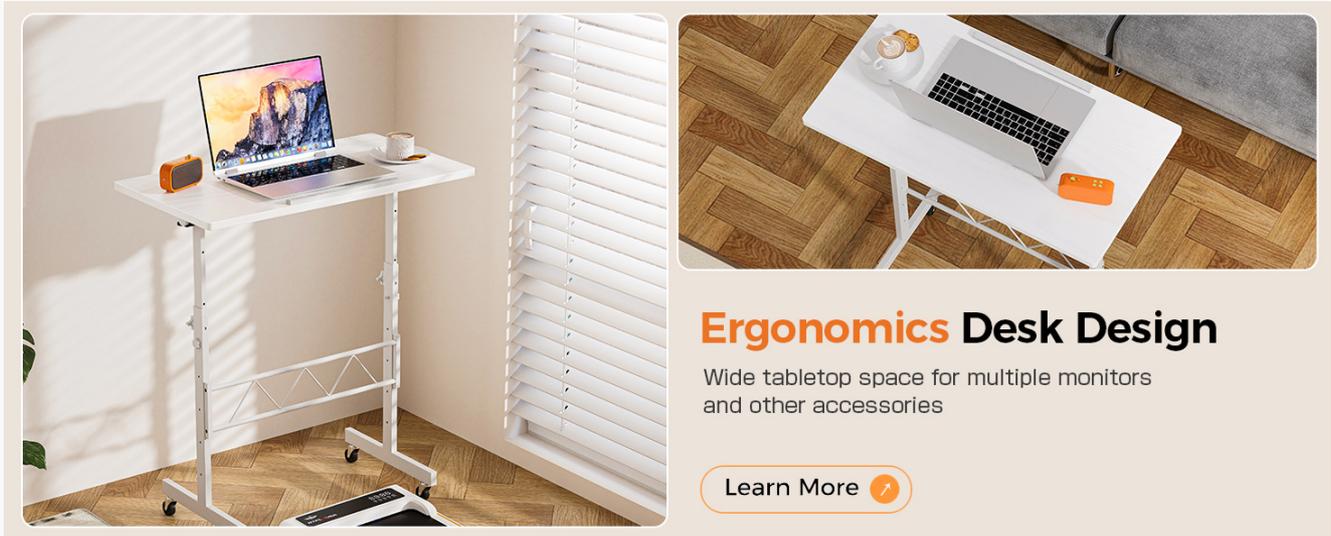

Ergonomics Desk Design

Wide tabletop space for multiple monitors and other accessories

[Learn More](#)

Image: Key components of the COMHOMA Small Standing Desk, including the barrier strip, lockable wheels, rotating handles, tilting tabletop knob, and double balance bar.

3. SETUP INSTRUCTIONS

3.1 Assembly

1. **Install Connecting Bracket:** Attach the connecting bracket (Part 4) to the main vertical supports using the provided screws. Ensure it is securely fastened.
2. **Install Casters:** Attach the brake casters (Part E) and standard casters (Part F) to the bottom of the desk legs. Use the provided wrench to tighten them.
3. **Install Angle Adjusters:** First, remove the caps from the connecting rods. Then, install the angle adjusters (Part 6) onto the connecting rods.
4. **Attach Connecting Rods to Side Brackets:** Insert the connecting rods (Part 3) into the side brackets (Part 2) and secure them with the star head screws (Part H).
5. **Attach Desktop:** Place the desktop (Part 1) onto the assembled frame. Ensure the installation direction is correct. Secure the desktop using the remaining screws.
6. **Install Barrier Strip:** Attach the barrier strip (Part 5) to the front edge of the desktop to prevent items from sliding off when tilted.

Recommended number of people for assembly: 1. All assembly tools are included.

4. OPERATING INSTRUCTIONS

4.1 Height Adjustment

The desk offers five gear adjustment options, allowing the height to be adjusted from 30.7 inches to 46.4 inches. To adjust the height, loosen the rotating handles on the side brackets, set the desk to your desired height, and then securely tighten the handles.

Height Adjustment

Sit and stand alternately to relax



Image: The desk's height can be adjusted between 30.71 inches and 46.46 inches, accommodating both sitting and standing positions.



Image: Visual representation of the desk's adjustable height range, highlighting its versatility.

4.2 Tiltable Tabletop

The innovative flip-up design allows for smooth 0-90° adjustment of the tabletop. To tilt the tabletop, loosen the tilting tabletop knob, adjust to the desired angle, and then tighten the knob to secure it. The premium anti-slip edge and barrier strip protect your devices from sliding.



Image: The desk's tabletop can be tilted from 0 to 90 degrees, suitable for various activities like drawing or reading.

COMHOAM Standing Desk 0-90° flip-up design

Revolutionize your work from home experience



Image: The flip-up design of the desk allows for a 0-90 degree tilt, enhancing ergonomic use.

4.3 Mobility and Stability

The desk is equipped with smooth PU rubber wheels for easy movement. Two of the wheels are brake casters, allowing you to lock the desk in place for stability during use. To move the desk, unlock the brake casters. To secure it, engage the brake casters.

One Table, Endless Possibilities



Treadmill Desk



Drafting Table



Overbed Table



Standing Desk

Image: The desk features wheels for easy mobility, allowing it to be moved between different locations like a sofa or bed.

Maximum

110 lbs

Load Capacity

Impressive weight capacity
No worries about unexpected strain



Image: The desk is designed for smooth movement and stability, making it a mobile workstation.

5. MAINTENANCE

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Fasteners:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain stability.
- **Casters:** Keep casters free of debris to ensure smooth rolling. Lubricate if needed.
- **Weight Limit:** Do not exceed the maximum weight recommendation of 176 pounds to prevent damage or instability.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk is wobbly.	Loose fasteners. Uneven surface.	Ensure all screws and bolts are tightened. Move desk to a flat, even surface.
Difficulty adjusting height.	Handles not fully loosened. Obstruction in adjustment mechanism.	Ensure rotating handles are completely loosened. Check for any obstructions and clear them.
Tabletop does not tilt smoothly.	Tilting knob too tight. Mechanism dirty.	Loosen the tilting tabletop knob. Clean the tilting mechanism if dirt or debris is present.
Casters not rolling smoothly.	Debris in casters. Brakes engaged.	Remove any debris from the casters. Ensure brake casters are disengaged.

7. SPECIFICATIONS

Brand: COMHOMA

Model Number: CO-DH005

Color: Pure-white

Material: Wood (Top Material Type), Metal (Base Material)

Product Dimensions (D x W x H): 15.75"D x 31.5"W x 30.71"H

Adjustable Height Range: 30.7" - 46.4"

Maximum Tilt Angle: 90 Degrees

Maximum Weight Recommendation: 176 Pounds

Item Weight: 12.88 Pounds

Included Components: Wheel

Assembly Required: Yes

Lifting Mechanism: Manual

8. WARRANTY & SUPPORT

Warranty: Free replacement or refund within 30 days. Free replacement or repair within 1 year.

Support: If you have any questions or suggestions, please feel free to contact COMHOMA customer service. We are committed to ensuring customer satisfaction.

For further assistance, please visit the [COMHOMA Store](#).

