

[Manuals.plus](#) /

› [COMHOMA](#) /

› COMHOMA Ergonomic Office Chair CH231-NEW User Manual

COMHOMA CH231-NEW

COMHOMA Ergonomic Office Chair CH231-NEW User Manual

Model: CH231-NEW

INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and troubleshooting of your COMHOMA Ergonomic Office Chair, model CH231-NEW. Please read this manual carefully before assembly and use to ensure proper function and longevity of your chair.



Image: The COMHOMA Ergonomic Office Chair CH231-NEW in a modern office setting.

PRODUCT DIMENSIONS

Understanding the chair's dimensions is crucial for ensuring it fits your workspace and body type.

SIZE(CM):

Fits various heights and body types.



Image: Diagram showing the dimensions of the COMHOMA office chair in centimeters. Key measurements include total height (122cm), backrest width (65cm), seat width (50cm), seat depth (59cm), and seat height range (45cm-55cm).

SETUP AND ASSEMBLY

The COMHOMA office chair is designed for easy assembly. All necessary tools and fully illustrated instructions are included in the package. One person can typically assemble the chair within 30 minutes.

Key Components:

- Seat cushion and frame (FSC certified wood)
- Gas lift (SGS Class 3 certified)
- Sturdy metal base (BIFMA certified)
- Casters
- Backrest with integrated coat hook
- Adjustable headrest

- Adjustable lumbar support
- Flip-up armrests

Follow the step-by-step instructions provided in the box for detailed assembly. Ensure all screws are tightened securely before use.

Accessoires Haut de Gamme pour Sécurité et Confort



Cylindre gaz classe 3 certifié SGS



Roulettes
silencieuses



Capacité de
charge élevée

Image: Illustration of the chair's high-quality components, including the SGS Class 3 certified gas lift, silent 360-degree casters, and the robust metal base with a load capacity of up to 150 kg.

OPERATING INSTRUCTIONS


1. Seat Height Adjustment

To adjust the seat height, pull the lever located under the seat upwards while applying or releasing body weight. Release the lever at the desired height.




Réglage de la Hauteur & Fonction de bascule

Pour ajuster la hauteur, tirez le levier vers le haut.

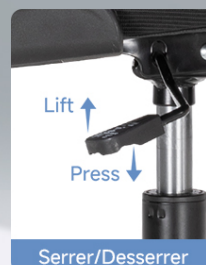

Serrer/Desserrer

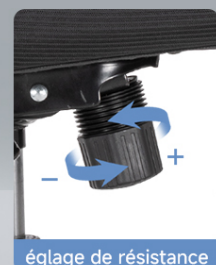

églage de résistance

Image: Illustration showing the seat height adjustment lever and the knob for adjusting backrest tension. The chair can recline from 90 to 135 degrees.

2. Backrest Recline and Tension

The chair features a multi-level tilting function. Pull the handle to recline the backrest. Rotate the knob under the seat to adjust the backrest tension, allowing you to customize the recline resistance from 90° to 135°.

3. Headrest Adjustment

The 3D headrest can be adjusted in both height (up to 8cm) and angle to provide optimal neck support.

4. Lumbar Support Adjustment

The lumbar support is height-adjustable over multiple levels to conform to your body's natural curve and promote a healthy sitting posture.



Image: Close-up view of the adjustable headrest (height and tilt) and the adjustable lumbar support mechanism.

5. Flip-Up Armrests

The armrests can be flipped up by 90 degrees, allowing the chair to be pushed closer to a desk or stored compactly, saving space in tight workspaces.

90° Flip-Up Armrest

Space-saving design for tight workspaces

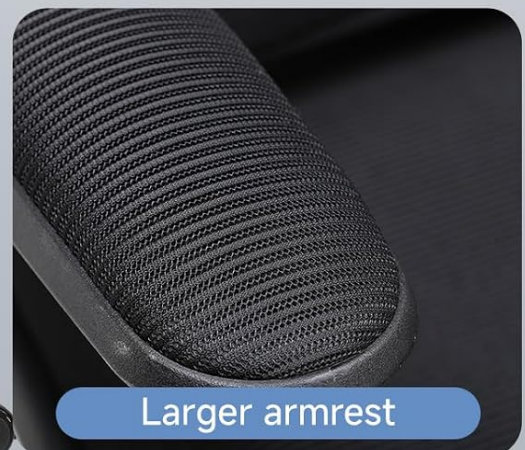


Image: Illustration demonstrating the 90-degree flip-up armrests, showing how they allow the chair to be stored under a desk for space-saving.

6. Integrated Coat Hook

The backrest features integrated anti-slip grip points, ideal for hanging coats or bags, preventing clothes from piling up.

Multifunctional backrest with integrated coat hook



Image: Close-up of the chair's backrest showing the integrated coat hook and anti-slip grip points.

MAINTENANCE

To ensure the longevity and optimal performance of your COMHOMA office chair, follow these maintenance guidelines:

- **Cleaning:** The manufacturer recommends dry cleaning for the chair's fabric and mesh components. For the metal and plastic parts, wipe with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Regular Checks:** Periodically check all screws and bolts to ensure they are tight. Re-tighten if necessary.
- **Caster Care:** Keep the casters clean from hair and debris to ensure smooth movement.
- **Gas Lift:** The SGS Class 3 gas lift is designed for long-term, trouble-free operation. Avoid applying excessive force beyond its rated capacity.

TROUBLESHOOTING

If you encounter any issues with your COMHOMA office chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair does not adjust height	Gas lift malfunction or lever not engaged properly.	Ensure the height adjustment lever is fully engaged. If the issue persists, the gas lift may need replacement.
Chair wobbles	Loose screws or uneven floor.	Check and tighten all assembly screws. Ensure the chair is on a flat, even surface.
Casters do not roll smoothly	Debris caught in casters.	Clean any hair, dust, or debris from the caster wheels.
Backrest does not recline or is too stiff/loose	Recline mechanism locked or tension knob incorrectly set.	Ensure the recline lock is disengaged. Adjust the backrest tension knob (under the seat) to your preference.

SPECIFICATIONS

Feature	Detail
Brand	COMHOMA
Model Number	CH231-NEW
Color	Black
Product Dimensions (L x W x H)	59 x 65 x 122 cm
Material	Metal, Mesh
Item Weight	20 Kilograms
Special Features	Adjustable Headrest, Adjustable Lumbar Support, Flip-up Armrests, Integrated Coat Hook
Back Style	Full Back
Frame Material	Metal
Care Instructions	Dry cleaning recommended for fabric/mesh.
Gas Lift Certification	SGS Class 3
Base Certification	BIFMA
Max Static Pressure Capacity	136 kg (BIFMA certified)

WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contact details may be found on the COMHOMA official website or within the product packaging. Please retain your proof of purchase for warranty claims. For further assistance, please contact COMHOMA customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FG7CMCQ4>

More documents and user manuals: <https://manuals.plus/>