

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [YUENZEE](#) /

› [YUENZEE Smart Ring SY-02 User Manual](#)

YUENZEE SY-02

YUENZEE Smart Ring SY-02 User Manual

Model: SY-02

1. INTRODUCTION

Thank you for choosing the YUENZEE Smart Ring SY-02. This device is designed to seamlessly integrate into your daily life, offering advanced health monitoring and activity tracking capabilities. Please read this manual carefully to ensure proper use and to fully benefit from all its features.



Image 1: YUENZEE Smart Ring SY-02. A sleek, black smart ring with internal sensors visible, designed for discreet wear.

2. SETUP GUIDE

Follow these three simple steps to set up your YUENZEE Smart Ring SY-02.


簡単3ステップで使える



1

アプリのダウンロード

ご使用前に、専用アプリ「RWFIT」をスマートフォンにダウンロードしてください。

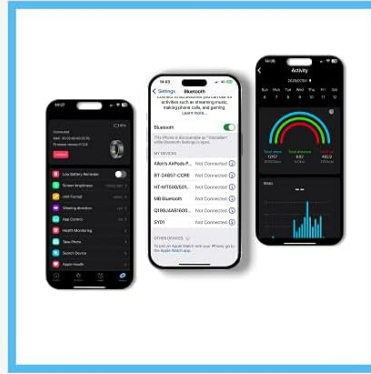

2

アプリの設定

アプリを起動し、「新規登録」または「ログインせずに使用する」を選択し、「スキップ」をタップしてください。
スマートフォンの通信機能をオンにした状態で、アプリ内の「マイデバイス」から「SY01」または「SY02」を選択してください。



3

リングの装着

スマートリングを適切な指に装着してください。指に付けるだけで、自動的に健康データの測定が開始されます。

Image 2: Visual guide showing the three setup steps: App download, App settings, and Ring wearing.

2.1. App Download

Before use, download the dedicated application, "RWFIT", to your smartphone. The app is compatible with both Android (5.1 and above) and iOS (8.0 and above) devices.

2.2. App Settings

1. Launch the RWFIT application.
2. Select "New Registration" or "Login to use". If you wish to skip, tap "Skip".
3. Ensure your smartphone's communication function (Bluetooth) is enabled.
4. From "My Devices" within the app, select "SY01" or "SY02" to pair your smart ring.

2.3. Wearing the Ring

Wear the smart ring on the appropriate finger. Once worn, automatic measurement of your health data will begin. For optimal accuracy, ensure the ring fits snugly but comfortably.

スマートリング 2025

新モデル SY-02 登場!

- ✓ 最新チップ搭載
- ✓ 計測精度がさらに進化
- ✓ 睡眠・運動・回復をフルモニタリング



Image 3: The YUENZEE Smart Ring SY-02 worn on a finger, demonstrating its discreet design.

3. OPERATING INSTRUCTIONS


3.1. 24-Hour Health Monitoring

The YUENZEE Smart Ring SY-02 provides continuous health monitoring to keep you informed about your physical condition.

- **Sleep Cycle Analysis:** Detailed analysis of your sleep cycles (deep sleep, light sleep, REM sleep) to maximize your refreshed feeling upon waking.
- **Blood Oxygen Saturation (SpO2):** Real-time tracking of blood oxygen levels.
- **Heart Rate:** Real-time monitoring of your heart rate.
- **Stress Level:** Visualization of your daily stress levels to support improvements in healthy habits.

睡眠モニタリング 睡眠構造をしっかりと記録

自分の睡眠状態を可視化。浅い睡眠、深い睡眠の割合を把握することで、より良い睡眠習慣と健康的な生活へつなげます。

 08H30M

深い睡眠 03H10M

浅い睡眠 04H05M

覚醒 01H15M

Image 4: Screenshot of the RWFIT app displaying detailed sleep monitoring data, including deep sleep, light sleep, and awake times.

3.2. Activity Tracking

The smart ring accurately records your exercise data in real-time, supporting an efficient fitness routine.

- **Steps:** Counts your daily steps.
- **Calories:** Estimates calories burned.
- **Distance:** Measures the distance covered.
- **Multiple Sports Modes:** Records exercise volume in 8 different sports modes, including running and yoga.



Image 5: App interface showing real-time activity data, including steps, calories, and distance, with various sports icons.

3.3. Smart Gesture Control

The smart ring offers convenient gesture controls for various smartphone functions.

- **Camera Shutter:** Control your smartphone's camera shutter with a simple gesture.
- **SNS Operation:** Perform actions on social media applications.
- **Video Switching:** Double-tap with your fingertip to switch videos.

YUENZEE

指先のダブルタップで 動画を切り替え!



Image 6: A hand wearing the smart ring, demonstrating how a double-tap gesture can control a smartphone application, such as switching videos on TikTok.

3.4. Water Resistance

The YUENZEE Smart Ring SY-02 features IP68 and 5ATM water resistance, allowing for worry-free use in various situations.

- **Water Depth:** Resistant up to 50 meters.
- **Usage:** Suitable for swimming in pools, showering, and bathing in hot springs.
- **Daily Activities:** Functions reliably during daily water-related tasks and in adverse weather conditions.



Image 7: The smart ring submerged in water, illustrating its IP68+5ATM waterproof rating, with additional images showing use during dishwashing, hand washing, and swimming.

4. MAINTENANCE

4.1. Charging

The smart ring features a long-lasting battery, significantly reducing the hassle of frequent charging.

- **Battery Life:** Approximately 5 days of use on a single charge (may vary depending on usage conditions).
- **Charging Time:** Approximately 1.5 hours.
- **Charging Method:** USB magnetic charging.

This extended battery life ensures continuous health management even during travel or business trips, without the need to carry a charger.

4.2. Cleaning

To maintain hygiene and optimal performance, regularly clean your smart ring.

- Wipe the ring with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive materials, as these may damage the finish or sensors.
- Ensure the charging contacts are clean and dry before charging.

5. TROUBLESHOOTING

If you encounter any issues with your YUENZEE Smart Ring SY-02, please refer to the following common solutions:

- **Device Not Connecting:**

- Ensure Bluetooth is enabled on your smartphone.
- Check if the ring is sufficiently charged.
- Restart both your smartphone and the RWFIT app.
- Try re-pairing the device through the RWFIT app's "My Devices" section.

- **Inaccurate Data:**

- Ensure the ring is worn snugly on your finger. A loose fit can affect sensor readings.
- Clean the sensor area on the inside of the ring.
- Calibrate the device through the app if a calibration option is available.

- **App Not Responding:**

- Close and reopen the RWFIT app.
- Check for app updates in your smartphone's app store.
- Ensure your smartphone's operating system is up to date.

- **Short Battery Life:**

- Ensure the ring is fully charged.
- Reduce the frequency of real-time monitoring if possible, as continuous data collection consumes more power.
- Check for any background apps on your phone that might be excessively communicating with the ring.

If the problem persists, please contact YUENZEE customer support for further assistance.

6. SPECIFICATIONS

本体

製品仕様

重量

約3.3g (#10)

材質

ステンレス+エポキシ樹脂

Bluetooth

ver 5.2

バッテリー

15~18mAh / 充電時間: 約1.5h

防水等級

IP68+5ATM (最大50m)

対応OS

Android 5.1~ / iOS 8.0~

サイズ

サイズ

内径 (mm)

指回り (mm)

#7

17.4mm

54.3mm



#9

19mm

59.6mm



Image 8: A table summarizing the YUENZEE Smart Ring SY-02's key specifications and available sizes.

YUENZEE Smart Ring SY-02 Technical Specifications

Feature	Detail
Brand	YUENZEE
Model Number	YZ-006.2B
Color	Black (other colors may be available)
Material	Stainless Steel + Epoxy Resin
Weight	Approx. 3.3g (ring) / 112g (package)
Connectivity	Bluetooth ver 5.2
Water Resistance	IP68 + 5ATM (Max 50m)

Feature	Detail
Battery Type	Lithium Polymer
Battery Capacity	15-18 mAh
Charging Time	Approx. 1.5 hours
Continuous Use Time	Up to 1 week (approx. 5 days typical use)
Compatible OS	Android 5.1~ / iOS 8.0~
Other Functions	Gesture Control
Included Accessories	USB-C Cable, User Manual, Charging Cable

6.1. Sizing Information

The YUENZEE Smart Ring SY-02 is available in various sizes to ensure a comfortable and accurate fit.

Size	Inner Diameter (mm)	Circumference (mm)
#7	17.4mm	54.3mm
#9	19.0mm	59.6mm

Note: This product is not a medical device. It is intended for general health management and reference purposes only.

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official YUENZEE website.

If you require assistance with setup, operation, or troubleshooting that is not covered in this manual, please contact YUENZEE customer service.