

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VINGLI](#) /

› [VINGLI 60 x 36 Inch Extra Large Lighted Bathroom Medicine Cabinet Instruction Manual](#)

## VINGLI MC0AL3D

# VINGLI 60 x 36 Inch Extra Large Lighted Bathroom Medicine Cabinet Instruction Manual

Brand: VINGLI | Model: MC0AL3D

## 1. INTRODUCTION

Thank you for choosing the VINGLI 60 x 36 Inch Extra Large Lighted Bathroom Medicine Cabinet. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new medicine cabinet. Please read all instructions carefully before assembly and use, and retain this manual for future reference.


## 2. SAFETY INFORMATION

- Always disconnect power before installation, maintenance, or cleaning.
- This product is heavy (approximately 108 lbs). Assembly and installation require at least two adults to prevent injury.
- Ensure the mounting surface is structurally sound and capable of supporting the cabinet's weight. It is highly recommended to mount into wall studs.
- Follow all local electrical codes and regulations. If you are unsure about electrical connections, consult a qualified electrician.
- Do not use abrasive cleaners or sharp objects on the mirror surface or cabinet finish.
- Keep water and moisture away from electrical components, except for the anti-fog function area.

## 3. PACKAGE CONTENTS

Your VINGLI medicine cabinet is shipped in **two separate packages**, which may arrive on different days. Please ensure you have received both packages and all components before beginning assembly.

## LED Medicine Cabinet Comes in 2 Packages Maybe Delivered on Different Day

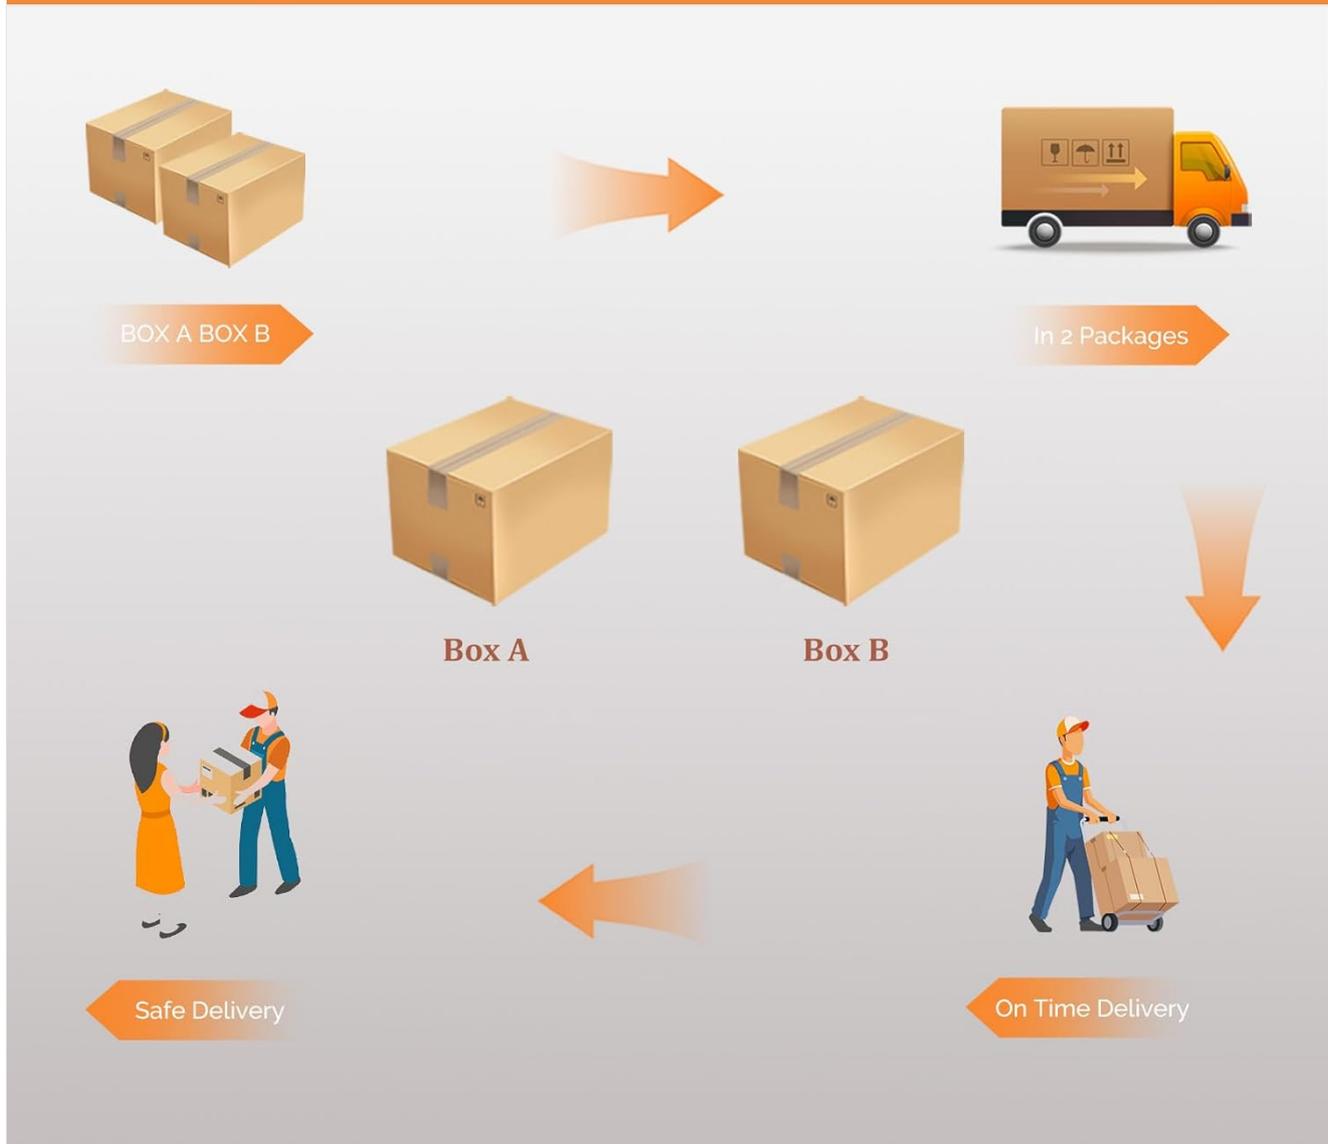

**Image:** The VINGLI medicine cabinet is delivered in two separate packages to ensure safe transport of all components.

Verify that all parts listed in your product's specific assembly instructions are present. Common components include:

- Cabinet body panels
- Mirrored doors (3)
- Adjustable glass shelves
- Hinges and mounting hardware
- Built-in power strip with outlet and USB ports
- Assembly screws and tools (screwdriver may be included)
- Instruction manual

## 4. SETUP AND INSTALLATION

Assembly is necessary for this product. Please follow the detailed instructions provided in the package. Below are general guidelines and visual aids for key steps.

## 4.1 Pre-Installation Checks

- Measure your space carefully to ensure the cabinet (60"W x 5.9"D x 36"H) fits.
- Identify wall studs for secure mounting.
- Gather necessary tools: screwdriver, drill, level, measuring tape, stud finder.

## 4.2 Hinge Installation

Proper hinge installation is crucial for door alignment and smooth operation. The cabinet features soft-close hinges for quiet use.

Your browser does not support the video tag.

**Video:** This video demonstrates the hinge installation process for VINGLI cabinets, ensuring proper alignment and function of the doors.

## 4.3 Three-in-One Connector & Wooden Dowel Installation

Follow the specific instructions for assembling the cabinet panels using the three-in-one connectors and wooden dowels. Ensure all connections are secure.

Your browser does not support the video tag.

**Video:** This video illustrates the installation of three-in-one connectors and wooden dowels, critical for assembling the cabinet structure.

## 4.4 Wall Mounting

The cabinet is designed for wall-mounted installation. Use appropriate anchors and screws for your wall type, preferably securing into wall studs for maximum stability.

Your browser does not support the video tag.

**Video:** This video demonstrates the suspension fitting installation for LED medicine cabinets, showing how to securely mount the unit to the wall.

## 4.5 Electrical Connection

The cabinet can be plugged into a standard outlet or hardwired. If hardwiring, ensure the power is off at the circuit breaker and consult a qualified electrician.

---

# 5. OPERATING INSTRUCTIONS

Your VINGLI medicine cabinet features intuitive touch controls for its advanced functions.

## 5.1 LED Lighting Control

## 3-Color LED Light & Adjustable Brightness



Cold Light (6000K)



Natural Light (4000K)



Warm Light (3000K)



Short press to change color temperature



Long press to adjust light brightness



6000K

4500K

3000K



100%

50%

10%



**Image:** The mirror features adjustable LED lighting with three color temperatures and dimmable brightness.

- **Power On/Off & Color Temperature:** Short press the center touch switch to turn the LED lights on or off. Long press the right switch to cycle through 3 color temperatures: 6000K (Cold Light), 4500K (Natural Light), and 3000K (Warm Light).
- **Brightness Adjustment:** Long press the center touch switch to adjust the LED light brightness steplessly from 10% to 100%.
- **Memory Function:** The LED lighting system includes a memory function that remembers your last used brightness and color temperature settings. When you turn the mirror back on, it will automatically return to the previously set mode.

### 5.2 Anti-Fog Function

The anti-fog function ensures a clear reflection even after a hot shower.

- **Activate Anti-Fog:** Lightly press the left touch switch to activate the defogger. The defogger will clear the mirror surface in seconds.

### 5.3 Built-in Charging Station

The cabinet includes a built-in outlet and USB ports for convenient charging of your devices.

## Thoughtful Design with Human-Centered Care



**Built-in Outlet & USB**



**Soft Close Metal Hinge**



**Tissue Slot Design**



**Double Sided Mirror**

**Image:** The cabinet features a built-in outlet and USB ports for charging small electronic devices.

- Simply plug your devices into the available outlet or USB ports inside the cabinet.

## 6. MAINTENANCE

Regular cleaning and care will keep your medicine cabinet looking new.

- **Mirror Cleaning:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray the cleaner onto the cloth, not directly onto the mirror, to avoid liquid seeping into the electrical components.
- **Cabinet Cleaning:** Wipe the aluminum frame and engineered wood surfaces with a soft, damp cloth. Avoid harsh chemicals.
- **Adjustable Shelves:** The tempered glass shelves can be removed for cleaning. Wash with mild soap and water, then dry thoroughly before reinserting.

## 7. TROUBLESHOOTING

If you encounter issues with your medicine cabinet, refer to the following common solutions:

- **LED Lights Not Working:** Check all electrical connections. Ensure the power switch is on and the circuit breaker has not tripped. If hardwired, verify wiring is correct.
- **Anti-Fog Not Activating:** Ensure the mirror is powered on and the anti-fog touch switch is pressed.
- **Doors Not Aligning Properly:** The soft-close hinges are adjustable. Refer to the hinge adjustment guide in your detailed assembly instructions to fine-tune door alignment.
- **Bluetooth Connectivity Issues (if applicable):** Ensure your device's Bluetooth is enabled and the mirror is in pairing mode (if a Bluetooth feature is present in your specific model). Consult your device's manual for pairing instructions.

## 8. SPECIFICATIONS

<b>Brand</b>	VINGLI
<b>Model Number</b>	MC0AL3D
<b>Dimensions (W x D x H)</b>	60" x 5.9" x 36"
<b>Item Weight</b>	108 Pounds
<b>Material</b>	Aluminum Frame, Engineered Wood
<b>Mounting Type</b>	Wall-Mounted
<b>Lighting Features</b>	3 Color Temperatures (6000K, 4500K, 3000K), Stepless Dimmable LED
<b>Special Features</b>	Anti-Fog, Memory Function, Built-in Outlet & USB, Adjustable Shelves, Soft-Close Hinges, Tissue Slot, HD Mirror, 3 Mirrored Doors with 3 Inside Mirrors
<b>Assembly Required</b>	Yes

# Product Dimensions



**Image:** Product dimensions for the VINGLI 60x36 inch medicine cabinet.



**Image:** The VINGLI medicine cabinet offers ample storage space with adjustable shelves.

---

## 9. WARRANTY AND SUPPORT

VINGLI products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or contact VINGLI customer support. If you have any questions or require assistance with your medicine cabinet, please reach out to VINGLI-Direct customer service.

---