

TODIMART T3

TODIMART T3 Electric Scooter User Manual

Model: T3
Brand: TODIMART

1. INTRODUCTION

Thank you for choosing the TODIMART T3 Electric Scooter. This manual provides essential information for the safe operation, assembly, and maintenance of your scooter. Please read it thoroughly before your first ride to ensure optimal performance and safety.

2. SAFETY INFORMATION

Your safety is paramount. Always wear a helmet and appropriate protective gear (knee pads, elbow pads) when riding. Adhere to local traffic laws and regulations. Do not ride in adverse weather conditions or on slippery surfaces. Avoid riding under the influence of alcohol or drugs. This scooter is designed for one rider only and has a maximum load capacity of 120 kg.

- Always check the scooter before each ride for any loose parts, tire pressure (if applicable), and brake functionality.
- Maintain a safe distance from other vehicles and pedestrians.
- Do not perform stunts or sudden maneuvers.
- Children aged 12-15 may use the scooter under strict adult supervision and with appropriate safety measures.

3. PACKAGE CONTENTS

Upon opening the box, please verify that all the following items are included:

- TODIMART T3 Electric Scooter
- Charger
- Tools (for assembly)
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your TODIMART T3 Electric Scooter.



Figure 4.1: The TODIMART T3 Electric Scooter, showcasing its sleek design and the accompanying mobile application interface.

Assure la stabilité

Puissance du moteur 350 W



36V7.8Ah

Capacité de la batterie



20-30 km

Autonomie



25 km/h

Vitesse maximale



Figure 4.2: An exploded view highlighting the 36V 7.8Ah battery pack and the 350W motor, indicating the scooter's power and range capabilities.

Vérifiez l'écran LED dans l'application mobile.



Figure 4.3: Detail of the handlebars, showing the integrated LCD display for speed and battery level, and the acceleration button for control.



Figure 4.4: Key safety and performance features: bright LED headlight, rear brake light, efficient rear disc brake, and durable 8.5-inch solid honeycomb tires.

5. SETUP

The TODIMART T3 Electric Scooter comes mostly pre-assembled. Follow these steps for final setup:

1. **Unfolding the Scooter:** Carefully lift the handlebar stem until it clicks into place. Ensure the folding mechanism is securely locked.
2. **Handlebar Assembly:** Insert the handlebars into the stem and tighten any screws using the provided tools. Ensure they are firm and do not wobble.
3. **Initial Charge:** Before first use, fully charge the scooter's battery. Refer to the 'Charging' section for detailed instructions.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press and hold the power button on the display to turn the scooter on or off.

6.2 Riding the Scooter

1. Place one foot on the deck and push off with the other foot to gain some initial speed.
2. Once moving, gently press the acceleration button (throttle) on the right handlebar.
3. To slow down or stop, release the throttle and apply the rear mechanical disc brake.

6.3 Speed Modes

The T3 offers three speed modes. Cycle through them by short-pressing the power button while the scooter is on. The current mode will be indicated on the LCD display.

6.4 Cruise Control

To activate cruise control, maintain a consistent speed for a few seconds. The scooter will beep, and cruise control will engage. To disengage, press the brake lever or the throttle.

6.5 Mobile App Connectivity

Connect your TODIMART T3 to the dedicated mobile app via Bluetooth for enhanced features:

- Lock/Unlock the scooter
- Customize maximum speed settings
- Monitor battery capacity, speed, and mileage
- Activate/deactivate cruise control

7. CHARGING

To charge your TODIMART T3 Electric Scooter:

1. Ensure the scooter is turned off.
2. Locate the charging port, usually covered by a rubber flap, on the scooter's frame.
3. Connect the charger to the charging port, then plug the charger into a standard wall outlet.
4. The indicator light on the charger will typically turn red during charging and green when fully charged.
5. Disconnect the charger once charging is complete and secure the charging port flap.

Note:

- Charging time is approximately 4-5 hours for a full charge.
- Do not leave the scooter charging unattended for extended periods.
- Only use the original charger provided with your scooter.

8. MAINTENANCE

Regular maintenance will prolong the life of your scooter and ensure safe operation.

8.1 Cleaning

Wipe the scooter with a damp cloth. Do not use high-pressure water jets or corrosive cleaning agents. Ensure the charging port is dry before charging.

8.2 Tire Care

The TODIMART T3 uses 8.5-inch solid honeycomb tires, which are puncture-proof and require no inflation. Regularly inspect them for wear and tear.

8.3 Brake Adjustment

Periodically check the effectiveness of the rear mechanical disc brake. If braking performance degrades, consult a qualified technician for adjustment or replacement of brake pads.

8.4 Storage

Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is charged to approximately 50-70% and recharge it every 30-60 days to prevent deep discharge.

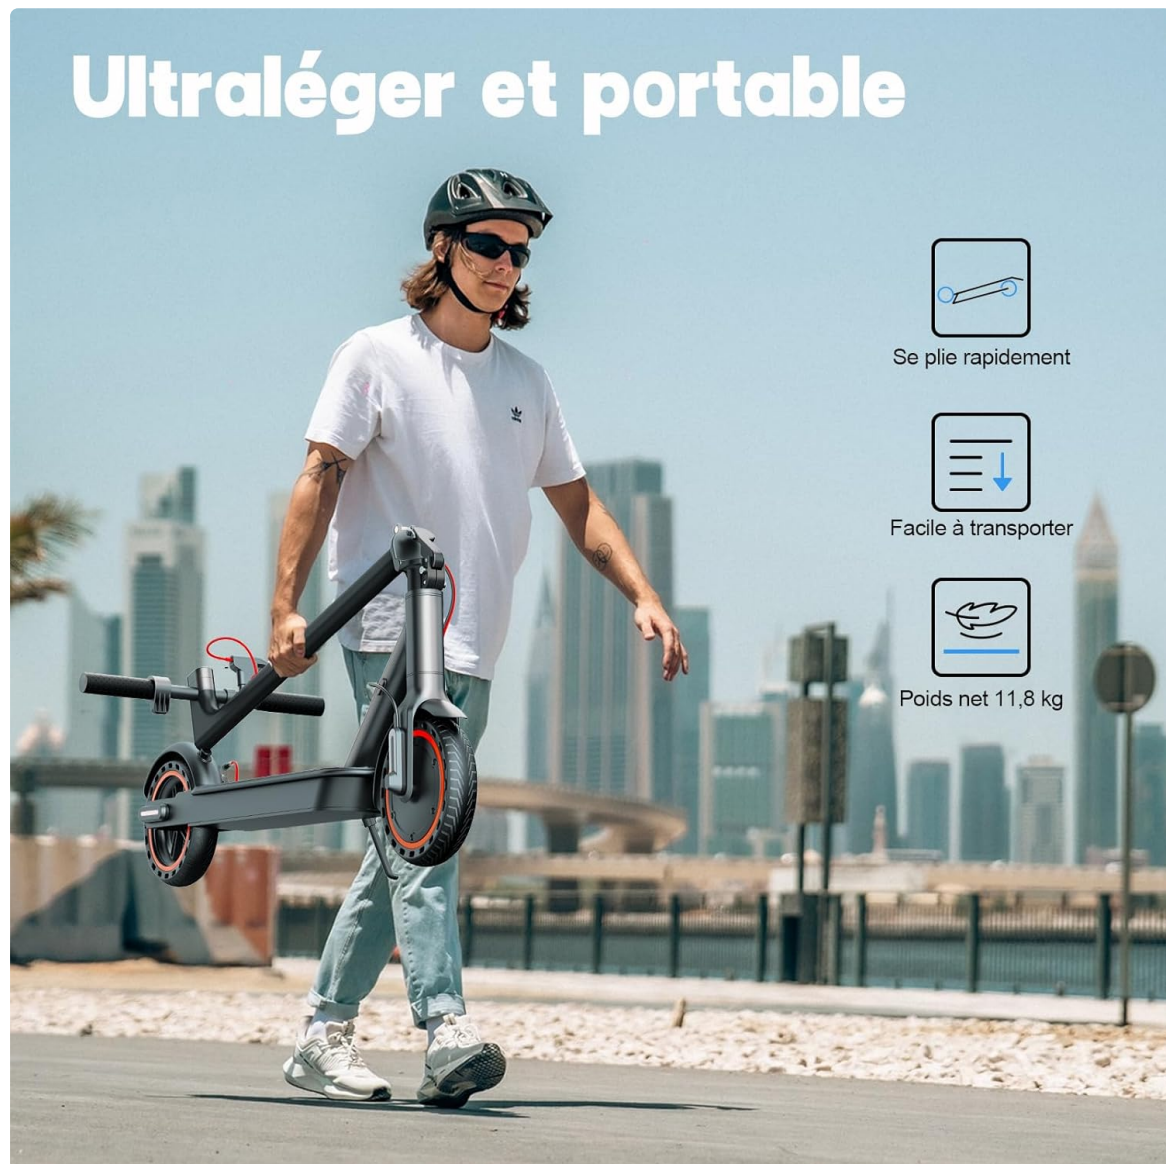


Figure 8.1: The TODIMART T3 scooter in its folded state, demonstrating its portability and ease of storage.

9. TROUBLESHOOTING

This section addresses common issues you might encounter with your TODIMART T3 Electric Scooter.

Problem	Possible Cause	Solution
Scooter does not turn on	Low battery; Loose connections	Charge the battery; Check all cable connections.
Motor not engaging	Throttle issue; Brake engaged; Motor fault	Ensure throttle is pressed correctly; Release brake; Contact support if issue persists.
Reduced range/speed	Low battery; Overload; Tire wear	Fully charge battery; Ensure rider weight is within limits; Inspect tires.
Brakes feel weak	Brake pads worn; Cable loose	Adjust brake cable tension; Replace brake pads if necessary (professional service recommended).

10. SPECIFICATIONS

Model	T3
Motor Power	350W Brushless Motor
Battery Capacity	36V 7.8Ah (280.8Wh) Lithium Battery
Max Range	30-35 KM (depending on conditions)
Max Speed	25 km/h
Climbing Capacity	Up to 25°
Tire Type	8.5-inch Solid Honeycomb Tires
Brake System	Rear Mechanical Disc Brake
Max Load Capacity	120 kg
Net Weight	11.8 kg
Folded Dimensions (L x W x H)	108 x 43 x 49 cm
Unfolded Dimensions (L x W x H)	108 x 43 x 114 cm

Frame Material	Aluminum
Features	Digital Display, Speedometer, Lightweight, Foldable, Anti-slip surface, Bluetooth App Connectivity





11. WARRANTY AND SUPPORT

TODIMART provides a strong after-sales service team to address any concerns you may have. Spare parts are available for 3 years from the date of purchase.

For technical support, warranty claims, or any other inquiries, please contact your retailer or the TODIMART customer service directly. Refer to your purchase documentation for specific contact details.

© 2025 TODIMART. All rights reserved.

Related Documents

 TODIMART User Manual for Electric Scooter-EH	TODIMART Electric Scooter User Manual: Operation, Safety, and Maintenance Guide Comprehensive user manual for the TODIMART electric scooter, detailing setup, safe operation, maintenance procedures, and troubleshooting tips for optimal performance and longevity.
 User Manual for Electric Scooter	Electric Scooter User Manual Comprehensive user manual for the electric scooter, covering product overview, assembly, riding basics, display operation, safety instructions, maintenance, troubleshooting, and after-sales services.
 T3 CURLWRAP User Guide Guide de l'utilisateur Manual del usuario T3 automatic rotating curling iron Fer à boucler rotatif automatique à 360° Rizador giratorio automático de 360° Model No. / N° de modelo / N° de modelo 3008P-U, 3008B-U, 3008S-U, 3008T-U, 3008F-U, 3008M-U, 3008L-U, 3008H-U, 3008V-U, 3008W-U, 3008X-U, 3008Y-U, 3008Z-U	T3 CurlWrap Automatic Rotating Curling Iron User Guide Comprehensive user guide for the T3 CurlWrap automatic rotating curling iron, covering safety instructions, operating procedures, maintenance, temperature settings, and warranty information.
 T3 SINGLEPASS CURL X User Guide Guide de l'utilisateur Manual del usuario T3 professional curling iron with auto long barrel Fer à boucler professionnel avec baril auto long de 38 mm, 50 mm, 58 mm, 66 mm Rizador profesional con baril automático de 38 mm, 50 mm, 58 mm, 66 mm Model No. / N° de modelo / N° de modelo 3008P-U, 3008B-U, 3008S-U, 3008T-U, 3008F-U, 3008M-U, 3008L-U, 3008H-U, 3008V-U, 3008W-U, 3008X-U, 3008Y-U, 3008Z-U	T3 SinglePass Curl X User Guide User guide for the T3 SinglePass Curl X professional curling iron, including safety instructions, operating instructions, maintenance, and warranty information.

