



[Manuals.plus](#) /

> [VIAIM](#) /

> VIAIM Nano+ AI Transcribe&Translation Earbuds (Model XF-A01) User Manual

VIAIM XF-A01

VIAIM Nano+ AI Transcribe&Translation Earbuds User Manual

Model: XF-A01 | Brand: VIAIM

INTRODUCTION

The VIAIM Nano+ AI Transcribe&Translation Earbuds (Model XF-A01) offer a versatile audio experience combined with advanced artificial intelligence functionalities. These earbuds are designed to enhance productivity and communication through features such as real-time translation, voice-to-text transcription, and intelligent noise cancellation. This manual provides essential information for setting up, operating, and maintaining your device.



Image: VIAIM Nano+ AI Transcribe&Translation Earbuds and their charging case.

WHAT'S IN THE BOX

- 2 VIAIM Earbuds
- VIAIM Fit Kit: 3 pairs of ear tips (small, medium, large)
- Charging Case
- USB-C (A to C) cable (12")

- Safety sheet

SETUP

1. Charging

Before first use, fully charge the earbuds and charging case. Connect the provided USB-C cable to the charging case and a power source. The charging case has an indicator light to show charging status. A full charge takes approximately 30 minutes.

2. Pairing with VIAIM App

1. Download the VIAIM App from your device's app store.
2. Open the charging case. The earbuds will enter pairing mode.
3. Enable Bluetooth on your smartphone.
4. Open the VIAIM App and follow the on-screen instructions to connect your Nano+ earbuds. The app will display the connection status and battery levels for each earbud.

OPERATING INSTRUCTIONS

1. Audio Playback

Once paired, the earbuds function as standard wireless headphones for music, calls, and other audio.

2. AI Transcription

Use the VIAIM App to instantly convert spoken voice to text. This feature is ideal for meetings, interviews, and lectures. The app can summarize transcribed content and generate to-do lists.

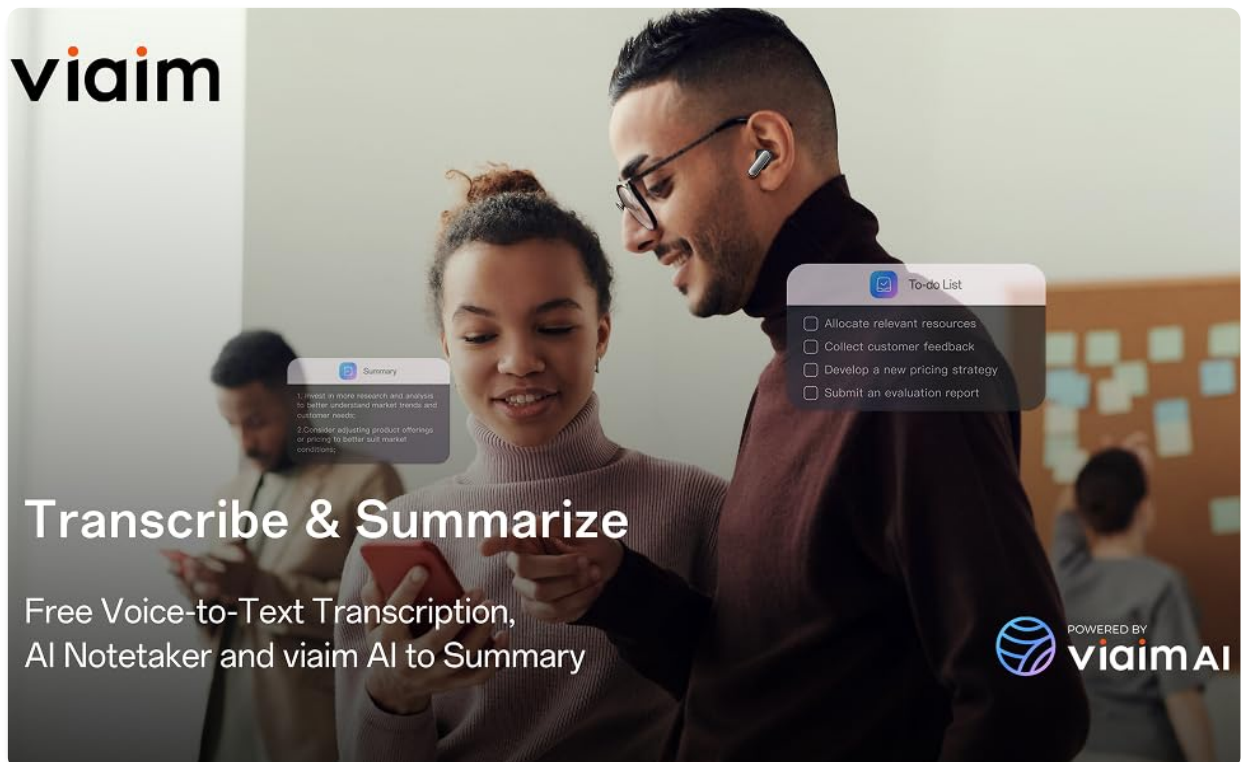


Image: The VIAIM Nano+ earbuds demonstrating the transcribe and summarize feature within the app.

3. Real-Time Translation

Access the real-time two-way translation feature via the VIAIM App. Supports 13 languages for offline use and a wider range online. Select the desired languages for each speaker within the app. The earbuds facilitate seamless communication by translating spoken words in real-time.



Image: A user demonstrating the real-time language translation feature of the VIAIM Nano+ earbuds.

4. Voice Recording (FlashRecord)

Utilize the dual-mode voice recording for capturing audio. Record directly through the earbuds for clear audio capture.



Image: A user utilizing the AI Voice Recorder feature of the VIAIM Nano+ earbuds during a meeting.

5. Adaptive DNN Noise Cancellation

The earbuds feature Deep Neural Network (DNN) noise cancellation, which adapts to ambient noise levels. Switch between Active Noise Cancellation (ANC) and Transparency Mode using the touch controls or the app. ANC reduces external distractions, while Transparency Mode allows you to hear your surroundings.

The VIAIM logo is located in the top left corner of the image. It consists of the word "viaim" in a lowercase, sans-serif font. The "i" and "a" have a small orange dot above them.

Active Noise Cancellation

Strong and Smart Noise Cancelling,
Adaptive Noise Cancelling to Environments

45dB

Image: A user experiencing the Active Noise Cancellation feature of the VIAIM Nano+ earbuds.

6. Touch Controls

- **Volume Adjustment:** Swipe up or down on the earbud stem.
- **Track Control:** Squeeze the stem to change tracks.
- **ANC/Transparency Mode Toggle:** Squeeze the stem to switch between modes.
- **Call Management:** Squeeze the stem to answer/end calls.

KEY FEATURES

- **4-in-1 Smart AI Earbuds:** Combines premium audio with AI transcription, real-time translation, and dual-mode voice recording.
 - **ChatGPT-Powered Transcription:** Converts voice to text via the VIAIM App, offering meeting summaries, to-do lists, and multilingual notes.
 - **Real-Time Two-Way Translator:** Provides lifetime free translation in 13 languages offline and more online, supporting various accents.
 - **Adaptive DNN Noise Cancellation:** Offers up to 97% deep noise cancellation, intelligently adjusting to ambient sounds.
 - **Long-Lasting Battery & IPX5 Water Resistance:** Up to 12 hours of playback per charge (40 hours with case). IPX5 rating ensures resistance to water splashes.
-

viaim

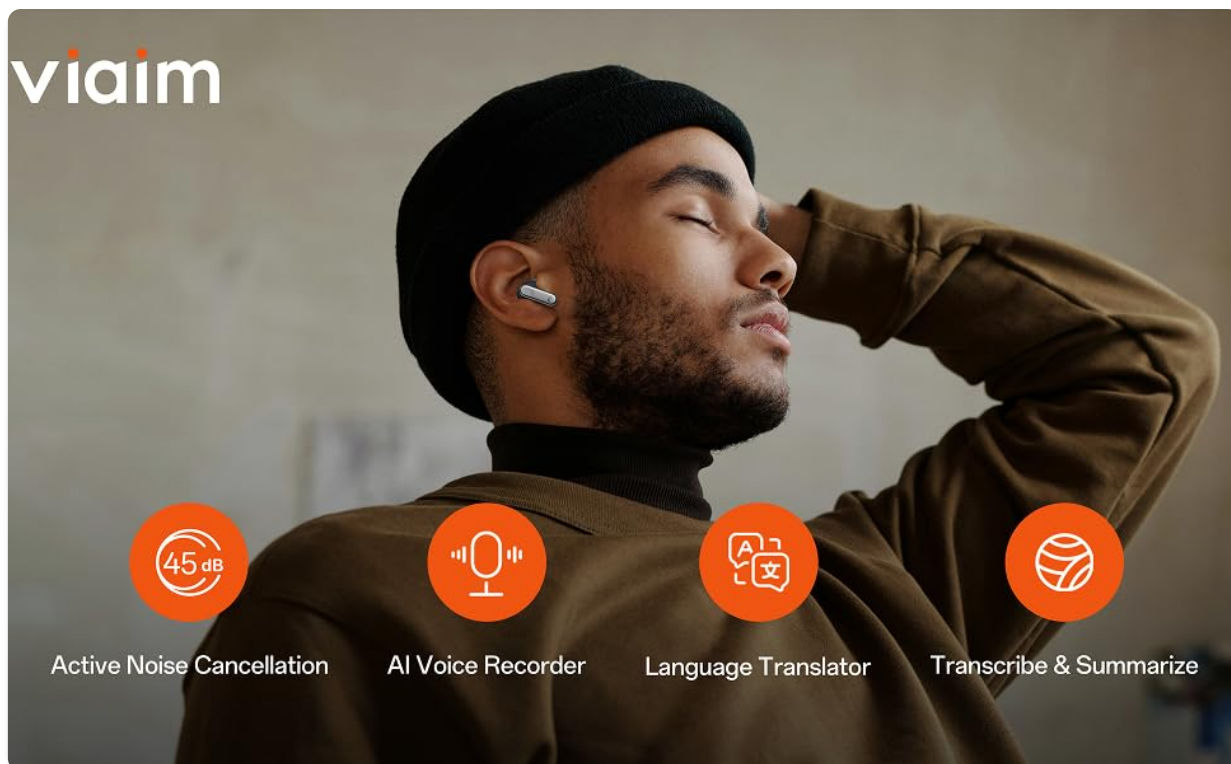


Image: Overview of the 4-in-1 Smart AI features of the VIAIM Nano+ earbuds.

SPECIFICATIONS

Feature	Detail
Model Name	Nano+
Item Model Number	XF-A01
Connectivity Technology	Wireless (Bluetooth 5.2)
Noise Control	Active Noise Cancellation (DNN)
Battery Life	Up to 12 Hours (40 Hours with Charging Case)
Charging Time	30 minutes
Water Resistance Level	IPX5
Control Type	Touch Control
Ear Placement	In Ear
Audio Driver Size	11 Millimeters
Item Weight	3.4 Ounces
Material	Plastic

MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- **Ear Tips:** Remove and clean ear tips periodically with mild soap and water. Ensure they are completely dry

before reattaching.

- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged.
- **Water Resistance:** The IPX5 rating means the earbuds are resistant to low-pressure water jets. Do not submerge them in water or expose them to high-pressure water.

TROUBLESHOOTING

- **No Sound:** Ensure earbuds are charged and connected to your device. Check volume levels on both earbuds and your connected device. Try re-pairing the earbuds with the VIAIM App.
- **Pairing Issues:** Ensure Bluetooth is enabled on your device and the earbuds are in pairing mode (open case). Forget the device in your phone's Bluetooth settings and try pairing again. Restart your phone and the earbuds.
- **Transcription/Translation Not Working:** Ensure the VIAIM App is open and connected. Check your internet connection for online translation features. Verify language settings in the app.
- **Noise Cancellation Ineffective:** Ensure ear tips provide a good seal in your ear canal. Check that ANC mode is activated in the app or via touch controls.
- **Battery Draining Quickly:** Ensure earbuds are properly seated in the charging case. Reduce volume or disable ANC if not needed to conserve battery.

WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please refer to the safety sheet included in your product packaging or visit the official VIAIM website.