



[Manuals.plus](#) /

› [Zuacs](#) /

› Zuacs Dual Motor Power Lift Recliner Chair Model 8755 User Manual

Zuacs 8755

Zuacs Dual Motor Power Lift Recliner Chair Model 8755 User Manual

Model: 8755 | Brand: Zuacs

INTRODUCTION

Thank you for choosing the Zuacs Dual Motor Power Lift Recliner Chair Model 8755. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner. Please read it thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: Do not exceed the maximum weight recommendation of 300 pounds. Always follow the assembly instructions carefully to ensure safe and proper use. Keep the chair clean and dry to prevent any safety hazards.

- Ensure all connections are secure before operating the chair.
- Keep children and pets away from the chair's moving parts.
- Do not allow anyone to sit on the footrest when it is extended.
- Avoid placing hands or feet near the mechanism during operation.
- Unplug the chair from the power outlet before cleaning or maintenance.
- If the chair malfunctions, discontinue use immediately and contact customer support.

PACKAGE CONTENTS

Before assembly, verify that all components are present. The chair ships in two boxes. Please ensure both boxes have arrived before beginning assembly.

- Chair Backrest
- Chair Seat with Base

- Left Armrest
- Right Armrest
- Power Adapter
- Power Cord
- Remote Control
- Assembly Hardware (M6 wrench, M6 screws)

Note: The chair will ship in 2 BOXES and may not arrive at the same time. Please start the installation after receiving all boxes.



Image: Two shipping boxes indicating the chair is delivered in multiple packages.

ASSEMBLY INSTRUCTIONS

Assembly is quick and easy, typically taking about 15 minutes. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent damage.
2. **Attach Metal Grooves to Chair Seat:** Locate the metal grooves (usually found underneath the seat or in the armrests). Assemble these metal grooves onto the left and right sides of the chair seat using the provided M6 wrench and M6 screws. Ensure they are securely fastened.

PRODUCT DIMENSION



Image: Diagram showing the dimensions of the recliner chair, useful for understanding component placement.

- 3. Connect Armrests:** Slide the left and right armrests onto the metal latches and grooves on the chair seat. Ensure they click securely into place.
- 4. Connect Backrest:** Align the metal grooves on the backrest with the corresponding latches on the chair seat. Gently push down until the backrest is firmly seated.
- 5. Connect Wiring:**
 - Locate the power cables for the massage and heat functions, typically found under the seat. Connect the corresponding red and white connectors.
 - Connect the power adapter to the main power cable from the chair.
 - Connect the remote control cable to the designated port on the chair's wiring harness.
 - Plug the power cord into the power adapter, then into a wall outlet.
- 6. Test Functionality:** Once all connections are made, test the lift, recline, massage, and heat functions using the remote control to ensure proper operation.

Assembly Video Guide

For a visual guide, please refer to the official assembly video below:

Your browser does not support the video tag.

Video: Official Zuacs assembly instructions for the Dual Motor Lift Chair Recliner. This video demonstrates the step-by-step process of assembling the chair, including connecting the seat, armrests, backrest, and electrical components.

OPERATING INSTRUCTIONS

The Zuacs Dual Motor Power Lift Recliner Chair is operated via a wired remote control. Familiarize yourself with the remote's buttons for optimal use.

Remote Control Functions:

- **Lift Function:** Press the "Lift" button to gently raise the chair, assisting you in standing up.
- **Recline Function:** Press the "Recline" button to smoothly lower the backrest and raise the footrest. The dual motor allows independent adjustment of the backrest and footrest for infinite positions, including a lay-flat position and a zero-gravity position.



Image: Diagram illustrating the chair's ability to achieve infinite positions, including lay-flat and zero-gravity, thanks to its dual motor system.

- **Adjustable Headrest:** Manually adjust the headrest to one of three positions (10°, 25°, 35°) for personalized neck and head support. Push beyond the maximum angle for an auto-reset feature.

3-POSITION ADJUSTABLE HEADREST

Manually adjustable headrest with 3 positions



10°



25°



35°



Auto Reset: Push beyond max angle to auto-return

Image: Visual demonstration of the manual 3-position adjustable headrest, showing angles of 10°, 25°, and 35°, and its auto-reset function.

- **Massage Function:** Activate the 8-point massage system with 2 vibration intensities and 5 modes. Use the timer function (15/30/60 minutes) to set the desired duration.
- **Heat Function:** Engage the lumbar heating element for soothing warmth to the lower back.

MASSAGE & HEATING

Operate by Remote Control



Lumbar Heat



8 Massage Points



5 Massage Modes



2 Vibration Strength



Image: Illustration detailing the 8-point massage system and lumbar heating feature, controlled by the remote.

USB & Type-C Charging Ports:

Conveniently located on the hand control, the dual USB and Type-C charging ports allow you to charge your devices while relaxing in the chair.



Image: Detailed view highlighting the thickened soft cushion, side pocket, stainless steel cup holders, and the USB & Type-C charging ports integrated into the remote control.

KEY FEATURES

- **Dual Motor System:** Enables independent adjustment of the backrest and footrest for a wide range of reclining positions, from 105° to 170°.
- **Power Lift Mechanism:** Gently lifts the chair to assist users in standing up easily, ideal for elderly individuals.
- **Manual Adjustable Headrest:** Offers three distinct angles (10°, 25°, 35°) for personalized neck and head support.
- **Extended Footrest:** A 4.7-inch extended footrest provides enhanced leg support, promoting circulation and comfort.

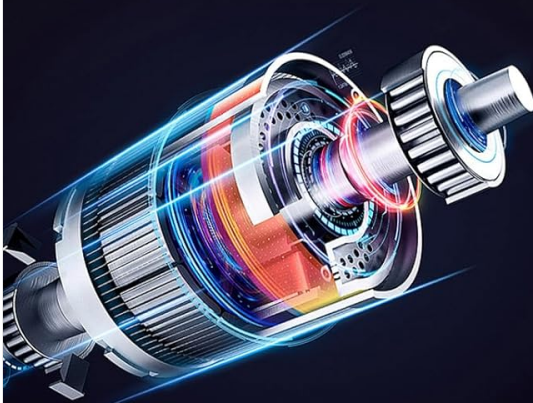


Image: The recliner chair with its footrest extended, showing the additional 4.7 inches of support.

- **Integrated USB & Type-C Charging:** Convenient charging ports on the remote control keep your devices powered.
- **Massage and Heat Functions:** Features an 8-point vibration massage system with 5 modes and 2 intensities, plus a lumbar heating element for relaxation.
- **Cup Holders:** Each armrest includes a stainless steel cup holder for convenience.
- **Thickened Front Cushion:** Designed for enhanced thigh comfort and durability during prolonged sitting.
- **Durable Construction:** Built with a robust steel frame, tested for fatigue up to 350,000 times, supporting up to 300 lbs.

DURABLE STEEL FRAME

- Fatigue Test for 350,000 Times
- Weight Capacity for 350LBS
- Smooth, Firm and Steady



POWERFUL DUAL MOTOR

- Safe Effective Motor
- Strong Power
- Smooth Running, Lower Noise

Image: Technical diagram highlighting the durable steel frame and the powerful, smooth-running dual motor system.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Zuacs
Model Number	8755
Color	Beige
Product Dimensions (D x W x H)	22.83"D x 22.83"W x 20.08"H
Size	Medium
Back Style	Continuous Back
Special Features	Adjustable Headrest, Adjustable Height, Cup Holders, Power Lift, Power Recliner

Feature	Detail
Product Care Instructions	Wipe Clean
Recommended Uses	Lounging, Reading, Relaxing, Sleeping
Maximum Weight Recommendation	300 Pounds
Style	Modern
Pattern	Solid
Room Type	Bedroom, Home Theater, Living Room
Age Range (Description)	Adult
Included Components	Arm Pad, Backrest, Cushion
Arm Style	Pillow-Top
Surface Recommendation	Hard Floor
Seat Back Interior Height	24.41 Inches
Indoor/Outdoor Usage	Indoor
Seat Height	21.06 Inches
Seat Depth	22.83 inches
Fill Material	Cotton
Cushion Style	Boxed Edge
Seat Length	22.44 Inches
Leg Style	Straight Leg
Reclining Position Count	65 (Infinite positions between 105°-170°)
Tilting	Yes
Chair Backrest Width	33.04 Inches
Form Factor	Lift Chair
Item Weight	131.2 pounds



Image: The Zuacs Dual Motor Power Lift Recliner Chair in Beige, showcasing its overall design and features.

CARE AND MAINTENANCE

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the faux leather.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight.
- **Power Cord:** Ensure the power cord is not pinched or damaged.
- **Weight Limit:** Do not exceed the maximum weight capacity of 300 pounds.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Chair does not respond to remote.	Power cord unplugged, loose connection, power outage.	Check if the power cord is securely plugged into the wall outlet and the chair. Ensure all internal connections are tight. Verify power to the outlet.
Chair movement is jerky or slow.	Overload, obstruction, low power.	Ensure the weight limit is not exceeded. Check for any obstructions in the mechanism. Confirm the power adapter is functioning correctly.
Massage/Heat function not working.	Loose connection, remote issue.	Check the specific connections for the massage and heat elements under the chair. Ensure the remote is functioning for other features.
Noise during operation.	Loose hardware, mechanism friction.	Inspect all bolts and screws for tightness. Apply a silicone-based lubricant to moving metal parts if necessary (avoid oil-based lubricants).

WARRANTY AND CUSTOMER SUPPORT

Your Zuacs Dual Motor Power Lift Recliner Chair Model 8755 comes with the following:

- **30-Day Return Policy:** For details, please refer to the retailer's return policy.
- **365-Day Parts Replacement:** In case of defective parts, replacements are available for 365 days from the date of purchase.

For further assistance, troubleshooting, or to inquire about parts replacement, please contact Zuacs customer support through your purchase platform or visit the official Zuacs website.

Please have your model number (8755) and purchase information ready when contacting support.