



Manuals.plus /

- › Chicco /
- › Chicco Evo 4-in-1 Trike Cycle Instruction Manual - Model 8058664190225

## Chicco 8058664190225

# Chicco Evo 4-in-1 Trike Cycle Instruction Manual

Model: 8058664190225

Brand: Chicco

## INTRODUCTION

Thank you for choosing the Chicco Evo 4-in-1 Trike Cycle. This manual provides essential information for the safe assembly, operation, and maintenance of your product. Please read it thoroughly before use and retain it for future reference.



# 4in1 *EVO* TRIKE

Made to Grow with Your Child



**STRONG  
BUILT**  
Tested for 50 kg / 110 lbs

Image: The Chicco Evo 4-in-1 Trike Cycle in its complete form, showcasing its sleek black design and various components.

## PRODUCT FEATURES

- **4-in-1 Evolutive Configuration:** Adapts and grows with your child through four different modes.
- **Versatile 360° Rotating Seat:** Easily switches between parent-facing and forward-facing modes for enhanced interaction and child comfort.
- **Parent-Controlled Steering:** Features a telescopic handle with 3 height positions for comfortable guidance by an adult.
- **Durable All-Terrain Performance:** Built with a robust metal frame and anti-puncture EVA wheels suitable for various surfaces.
- **Enhanced Comfort & Safety:** Includes a cushioned fabric seat, removable adjustable canopy for sun protection, dual safety with a baby safety guard, and a 3-point harness.

# Comfy. Stylish. Parent-Friendly

Designed for Joyful, Worry-Free Rides.



Image: An annotated diagram highlighting key features such as the extendable canopy, bell, anti-slip grip handle, 3-point harness, front basket, 360° rotating seat, cushioned seat with fabric cover, rear basket, and parent-controlled steering with 3 height adjustable positions.

## SAFETY INFORMATION

The Chicco Evo 4-in-1 Trike Cycle is designed with your child's safety in mind. Always ensure all components are securely fastened before use. This product is BIS Certified and tested as per Indian & International Standards, featuring lead-free paint for enhanced safety.

- Always supervise children when using the trike.
- Ensure the 3-point safety belt and baby safety guard are properly secured.
- Regularly check for loose parts or damage. Do not use if damaged.
- Keep the user manual handy for future reference regarding safety guidelines.

# Built-in Safety

## For Everyday Adventures



Dual Safety with  
Baby Safety Guard and  
3-Point Safety Belt



Tested as per Indian &  
International Standards



BIS Certified



Lead-Free Paint



Image: A child happily riding the trike, with icons indicating dual safety with baby safety guard and 3-point safety belt, testing as per Indian & International Standards, BIS Certified, and Lead-Free Paint.

## ASSEMBLY INSTRUCTIONS

Before assembly, ensure you have all parts and the user manual for easy reference. A spanner is required for assembly. Refer to the video below for a visual guide.

Your browser does not support the video tag.

Video: An official Chicco assembly guide demonstrating how to put together the Chicco 4-in-1 Evo Trike. The video covers attaching rear wheels, inserting the front fork and basket, securing the handlebar, fixing the parental handle, and attaching the canopy and rear basket.

### Step-by-Step Assembly:

1. **Attach Rear Wheels:** Push the rear wheels firmly onto their respective frame sides until a click sound is heard, indicating they are securely locked.
2. **Insert Front Fork:** Remove the cap from the main frame, then insert the front fork into the main frame.
3. **Fix Front Basket:** Place the front basket onto the fork pipe.
4. **Install Handlebar:** Insert the handlebar through the main frame and into the fork column. Tighten the nut bolt properly using a spanner.
5. **Mount Seat:** Remove the bolts from the seat frame, place the seat, align it, and secure it by

tightening the four nut bolts with the spanner.

6. **Assemble Parental Handle (Lower Part):** Remove the screw, nut, adjusting knob, and nylon ring cap from the parental handle. Insert the lower part of the parental handle into the frame from underneath. After inserting, ensure the turning pin is fixed in the main frame C-type slot.
7. **Assemble Parental Handle (Upper Part):** Insert the upper part of the parental handle into the lower part, aligning the turning pin and putting it into the adjustable holes. Re-attach and tighten the screw and nut. Then place the nylon ring cap and fix the adjusting knob on top.
8. **Attach Hook-Shaped Rod:** Insert the hook-shaped rod into the hole just above the mudguard at the front and tighten it using the nut on the back side. Align the back part of the rod by inserting it into the hole below the right footrest, located below the rear seat, and tighten it firmly.
9. **Attach Canopy:** Insert the canopy on both sides and fix it in place with the push pin provided on one side.
10. **Fix Rear Basket:** Unfix the screw, then fix the rear basket into the frame by tightening back the screws.

Your Chicco 4-in-1 Evo Trike is now ready for use.

## OPERATING MODES

The Chicco Evo 4-in-1 Trike Cycle is designed to evolve with your child, offering four distinct modes of use:

- **Mode 1: Parent-Facing** - Ideal for early months, allowing for closeness and interaction.
- **Mode 2: Forward-Facing** - For curious riders who want to explore their surroundings.
- **Mode 3: Push-Along** - Guided, parent-controlled rides as your child grows.
- **Mode 4: Self-Pedaling** - For confident, independent cycling.

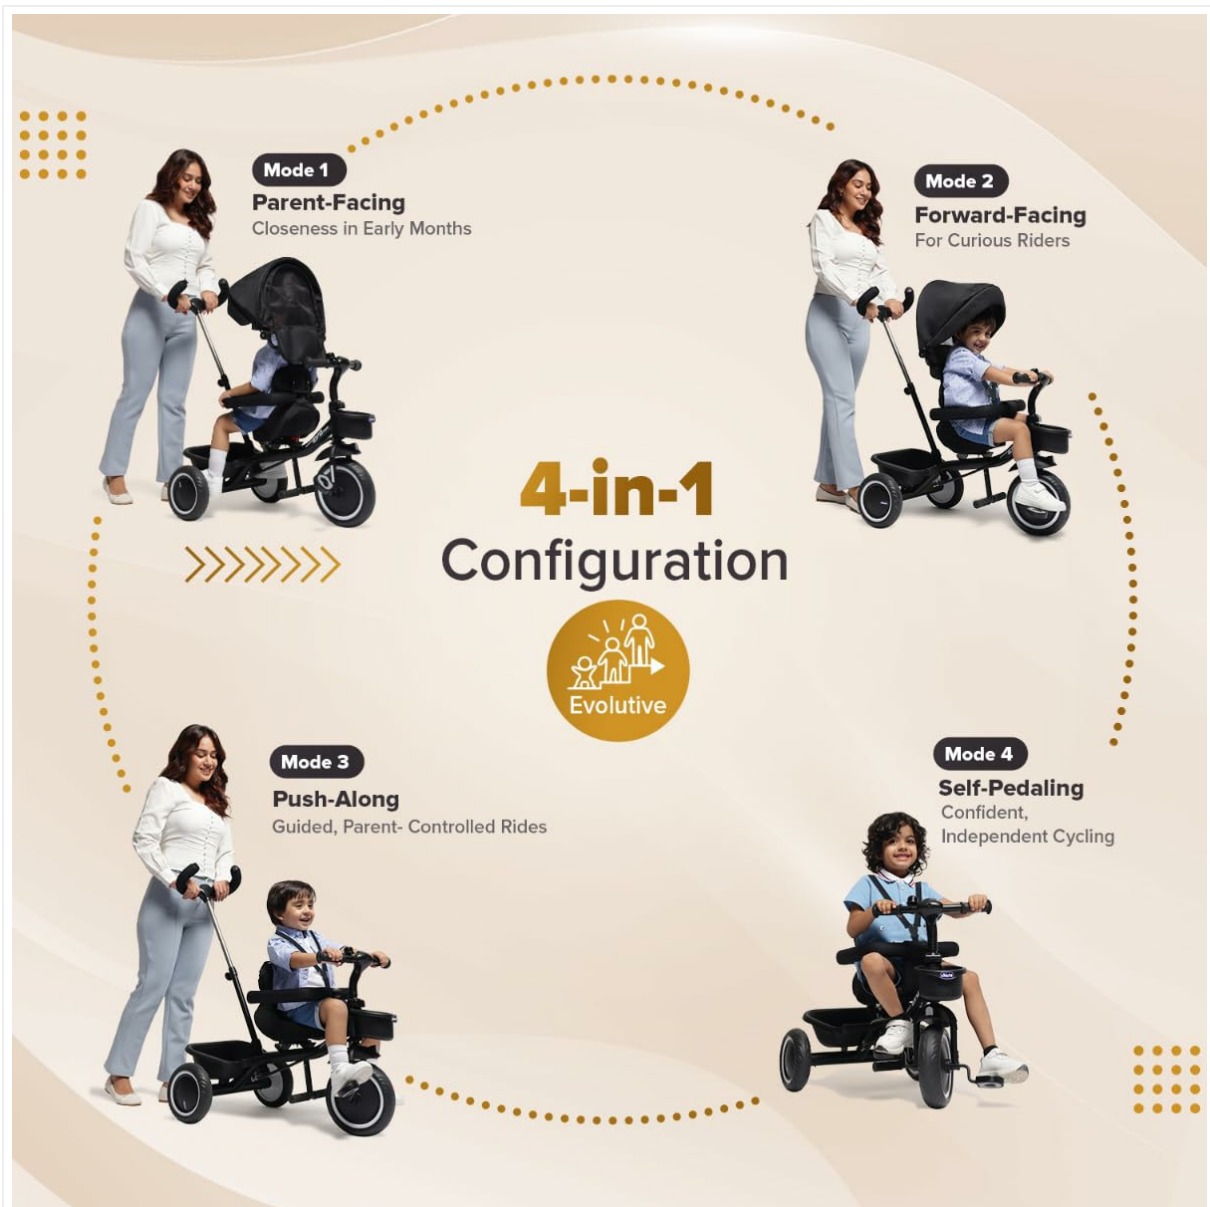


Image: A visual representation of the 4-in-1 configuration, illustrating each mode with a child and parent, demonstrating the trike's adaptability.

### **360° Seat Rotation:**

The seat can rotate 360 degrees, allowing you to easily switch between parent-facing and forward-facing modes without removing the child from the trike. This feature provides smooth and effortless turns.

# 360° Seat Rotation

Smooth & Effortless Turns



Image: A diagram demonstrating the 360° seat rotation, showing the seat transitioning from parent-facing to forward-facing positions.

## MAINTENANCE

- **Cleaning:** Wipe down the frame with a damp cloth and mild soap. Do not use abrasive cleaners. The fabric seat cover can be removed and hand-washed.
- **Wheels:** The anti-puncture EVA wheels require minimal maintenance. Periodically check for debris or damage.
- **Fasteners:** Regularly inspect all screws, nuts, and bolts to ensure they are tight and secure. Tighten as necessary.
- **Storage:** Store the trike in a dry, cool place away from direct sunlight to prevent material degradation.

## Worry-Free Rides

### Anti-Puncture EVA Wheels



Marble/Tiles



Concrete

Suitable for All Surfaces



Wooden



Grass



Image: Close-up of the anti-puncture EVA wheels, with illustrations showing suitability for marble/tiles, concrete, wooden, and grass surfaces.

## TROUBLESHOOTING

If you encounter any issues with your Chicco Evo 4-in-1 Trike Cycle, please refer to the following common solutions:

- **Wobbly Parts:** Check all connection points, especially the seat and parental handle, to ensure screws and nuts are fully tightened.
- **Difficulty Steering:** Ensure the handlebar and parental control handle are correctly aligned and securely fastened.
- **Seat Rotation Issues:** Verify that no obstructions are preventing the seat from rotating freely. Ensure the seat is properly installed on its base.
- **Missing Parts:** If any parts are missing upon unboxing, contact Chicco customer support immediately.

## SPECIFICATIONS

Specification	Detail
Model Number	8058664190225
Target Gender	Unisex
Material	Aluminium, Metal
Power Source Type	Manual
Batteries Required	No
Product Dimensions (LxWxH)	95 x 92 x 65 cm
Item Weight	7.15 kg
Recommended Age	24 months - 5 years
Country of Origin	India

## WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please visit the official Chicco website or contact their customer service department. Keep your purchase receipt as proof of purchase.

**Manufacturer:** Allwyn Bikes Private Limited

**Address:** Khasra no 22//9/2, 10,11/1, 12/1, 23/3, 4, 5/1, 6, 7,8, 13/1, 14/1, 15/1/1 and 15/2,Village Kami, Ganaur Road, Sonipat, Haryana-131001