

SABLUTE MAM2

SABLUTE MAM2 Wireless Trackball Mouse Instruction Manual

Model: MAM2

1. INTRODUCTION

Thank you for choosing the SABLUTE MAM2 Wireless Trackball Mouse. This ergonomic mouse is designed to provide comfort and precision, reducing wrist fatigue during extended use. It offers versatile connectivity options for up to three devices and adjustable DPI settings to suit various tasks. Please read this manual thoroughly to ensure proper setup and operation of your new trackball mouse.

2. PRODUCT OVERVIEW

The SABLUTE MAM2 features an ergonomic design with a thumb-controlled trackball, multiple buttons, and dual-mode connectivity.

Key Features:

- **Ergonomic Design:** Reduces hand and wrist strain with a natural grip and thumb-controlled trackball.
- **Multi-Device Connectivity:** Connects via 2.4GHz wireless (USB receiver) or Bluetooth to up to 3 devices.
- **Adjustable DPI:** 5 levels (400, 800, 1200, 1600, 2400) for precise cursor control.
- **Rechargeable Battery:** Built-in 500mAh battery provides long-lasting use.
- **Silent Click:** Micro-switch buttons for quiet operation.
- **Productivity Buttons:** Dedicated forward/back navigation buttons.

Component Identification:



Image: Labeled diagram of the SABLUTE MAM2 Wireless Trackball Mouse, showing the Right button, Left button, Forward button, Back button, Scrollwheel, Adjust DPI mode button, Channel Switching button, and USB Slot.

1. **Left Button:** Standard left-click function.
2. **Right Button:** Standard right-click function.
3. **Scroll Wheel:** For vertical scrolling.
4. **Forward Button:** Navigates forward in web browsers or file explorers.
5. **Back Button:** Navigates backward in web browsers or file explorers.
6. **DPI Adjustment Button:** Cycles through 5 DPI settings (400/800/1200/1600/2400).
7. **Trackball:** For cursor movement, controlled by the thumb.
8. **Channel Switching Button (Bottom):** Switches between 2.4G wireless and Bluetooth 1/2 modes.
9. **Power Switch (Bottom):** Turns the mouse ON/OFF.
10. **USB Charging Port:** For recharging the internal battery.
11. **USB Receiver Slot (Bottom):** Stores the 2.4G USB receiver.

3. SETUP INSTRUCTIONS

3.1 Charging the Mouse

Before first use, or when the battery is low, connect the mouse to a USB power source using the provided charging cable. The LED indicator will show charging status. A full charge typically takes 2 hours.

No More Constant Recharging



230+ Days
Standby Time



2 Hours
Full Charging Time

500mAh



Image: The SABLUTE MAM2 Wireless Trackball Mouse connected to a USB charging cable, illustrating its rechargeable feature.

3.2 Connecting to Devices

The SABLUTE MAM2 supports connection to up to three devices using either 2.4GHz wireless or Bluetooth.

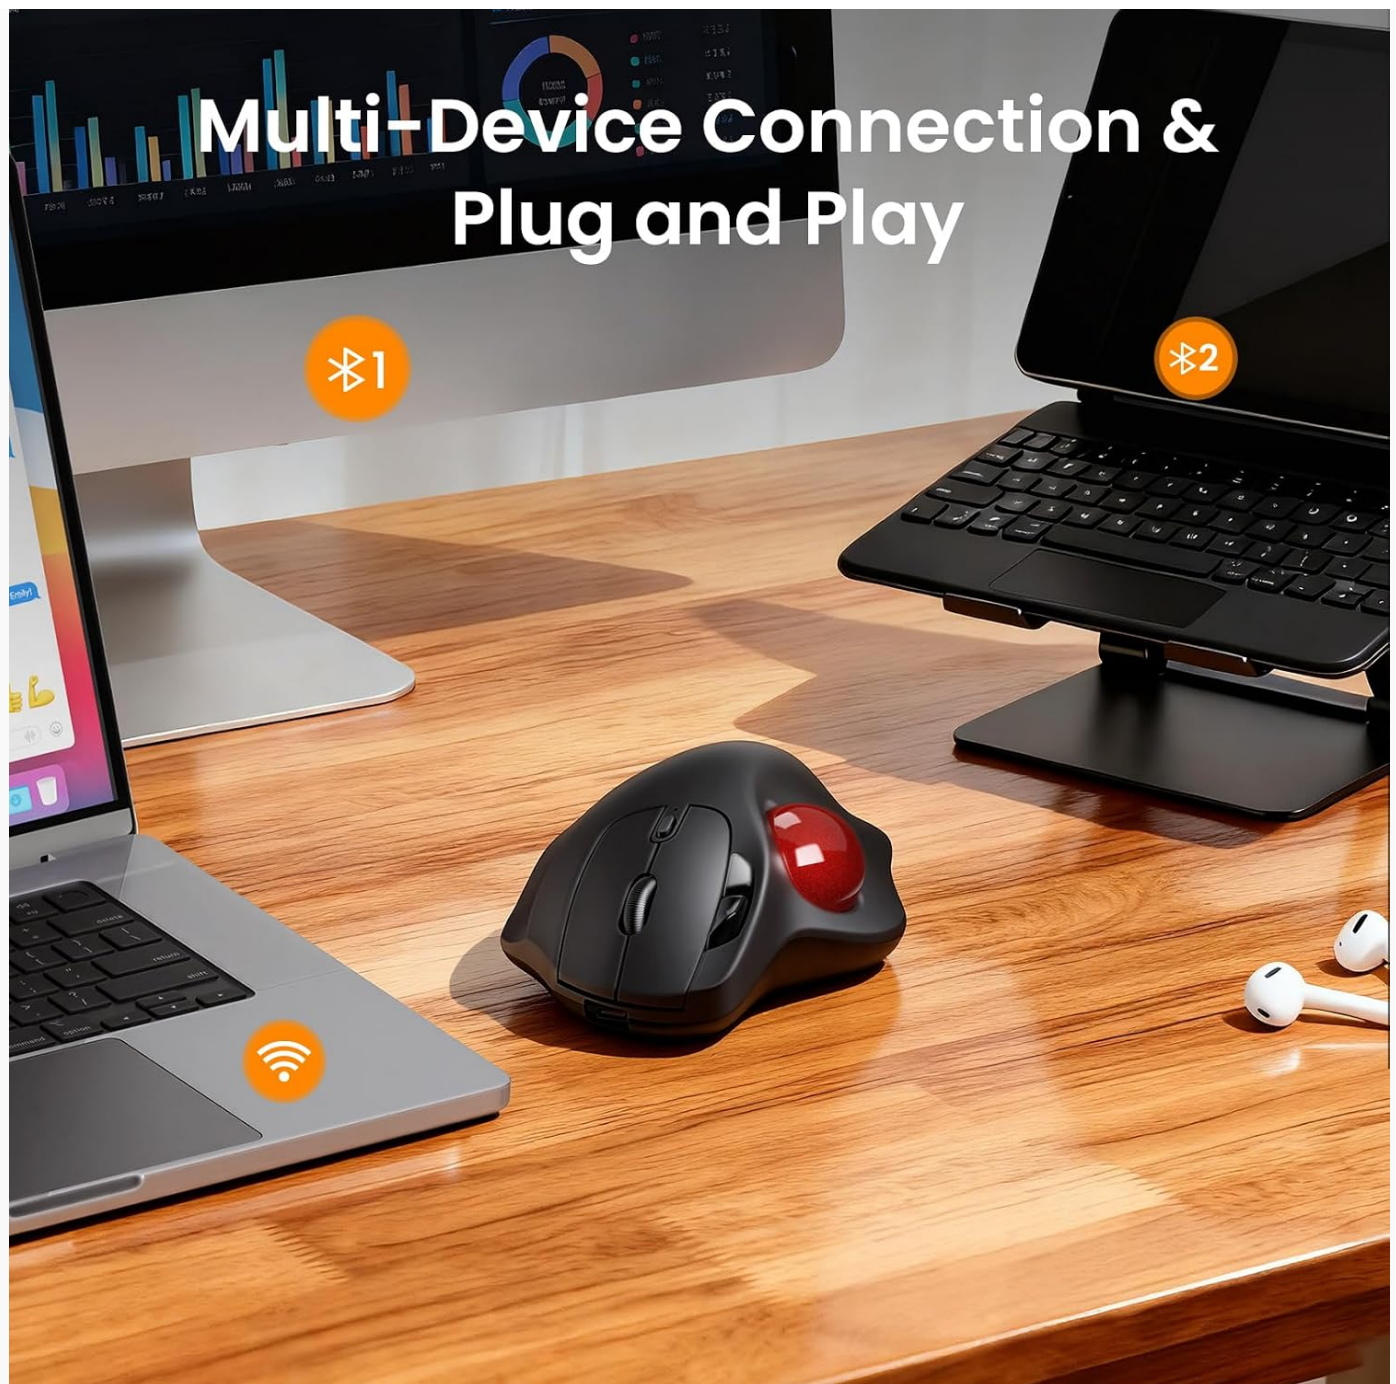


Image: The SABLUTE MAM2 Wireless Trackball Mouse positioned between a laptop and a tablet, demonstrating its multi-device connection capability via 2.4GHz wireless and Bluetooth.

2.4GHz Wireless Connection:

1. Turn on the mouse using the power switch on the bottom.
2. Press the Channel Switching button on the bottom until the 2.4G indicator light is active.
3. Remove the USB receiver from its slot on the bottom of the mouse.
4. Plug the USB receiver into an available USB port on your computer.
5. The mouse should connect automatically.

Bluetooth Connection (BT1/BT2):

1. Turn on the mouse using the power switch on the bottom.
2. Press the Channel Switching button on the bottom to select either BT1 or BT2 mode. The corresponding indicator light will flash slowly.
3. To enter pairing mode, press and hold the Channel Switching button for 3-5 seconds until the BT1 or BT2 indicator light flashes rapidly.

4. On your device (PC, laptop, tablet, smartphone), open Bluetooth settings.
5. Search for new devices and select "SABLUTE MAM2" from the list.
6. Once paired, the indicator light will stop flashing and remain solid for a few seconds before turning off.

4. OPERATING INSTRUCTIONS

4.1 Cursor Control (Trackball)

Use your thumb to roll the trackball to move the cursor on the screen. The trackball allows for precise control without moving the entire mouse, which can reduce wrist movement and strain.



Image: A hand resting comfortably on the SABLUTE MAM2 Wireless Trackball Mouse, demonstrating the ergonomic grip and thumb-controlled trackball for cursor movement.

4.2 DPI Adjustment

The mouse features 5 adjustable DPI (Dots Per Inch) settings to control cursor speed and sensitivity. Press the DPI Adjustment button (located near the scroll wheel) to cycle through the settings: 400, 800, 1200, 1600, and 2400 DPI.

Choose the setting that best suits your task and preference.



Image: The SABLUTE MAM2 Wireless Trackball Mouse with an overlay indicating the 5 adjustable DPI levels (400, 800, 1200, 1600, 2400) and the location of the DPI button.

4.3 Switching Between Devices

Once paired with multiple devices, you can switch between them by briefly pressing the Channel Switching button on the bottom of the mouse. The corresponding indicator light will confirm the active connection.

4.4 Adaptation Period

If you are new to trackball mice, an adaptation period of 1-2 weeks may be necessary to become accustomed to the thumb-controlled movement. Continued use will lead to increased comfort and efficiency.

5. MAINTENANCE

Cleaning the Trackball:

Over time, dust and debris can accumulate around the trackball, affecting its smooth operation. To clean the trackball:

1. Gently push the trackball from the bottom of the mouse (through the small opening) to remove it.
2. Use a soft, lint-free cloth or cotton swab to wipe the trackball clean.
3. Clean the inside of the trackball cavity, paying attention to the small sensors.
4. Reinsert the trackball into its socket until it clicks into place.

6. TROUBLESHOOTING

Mouse Not Responding:

- Ensure the mouse is powered on.
- Check battery level and charge if necessary.
- Verify the correct connection mode (2.4G, BT1, or BT2) is selected on the mouse and your device.
- For 2.4G connection, ensure the USB receiver is securely plugged into your device.
- For Bluetooth connection, ensure Bluetooth is enabled on your device and the mouse is paired. Try re-pairing if necessary.
- Restart your computer or device.

Cursor Movement is Erratic or Unresponsive:

- Clean the trackball and its cavity as described in the Maintenance section.
- Adjust the DPI setting to a lower value if the cursor is too sensitive, or a higher value if it's too slow.
- Check your device's mouse settings for cursor speed and acceleration.

Frequent Disconnections:

- Ensure the mouse is within the effective range of your device (typically 10 meters for Bluetooth/2.4G).
- Minimize interference from other wireless devices.
- Ensure the mouse battery is sufficiently charged.
- Update your device's Bluetooth drivers if applicable.

7. SPECIFICATIONS

Feature	Detail
Brand	SABLUTE
Model Name	MAM2
Model Number	TM286M
Connectivity Technology	Bluetooth, 2.4GHz USB
Movement Detection Technology	Trackball
DPI Settings	400, 800, 1200, 1600, 2400
Button Quantity	7
Hand Orientation	Right
Power Source	Battery Powered (Rechargeable)
Battery Average Life	6 months (approx.)

Compatible Devices	PC, Laptop, Mac, iPad, Gaming Console, Smartphone, Tablet
Operating System	Android, Chrome OS, Linux, Windows, macOS, iOS
Item Dimensions (L x W)	5.5"L x 4"W

8. WARRANTY AND SUPPORT

Warranty Information:

The SABLUTE MAM2 Wireless Trackball Mouse comes with a **2-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures product quality. Please retain your proof of purchase for warranty claims.

Customer Support:

For any questions, technical assistance, or warranty inquiries, please contact SABLUTE customer support:

- **Email:** support@sablute.com
- **Phone (US):** 1-888-905-9607
- **Operating Hours:** Monday - Friday, 9:00 AM - 1:00 PM PST and 2:00 PM - 6:00 PM PST

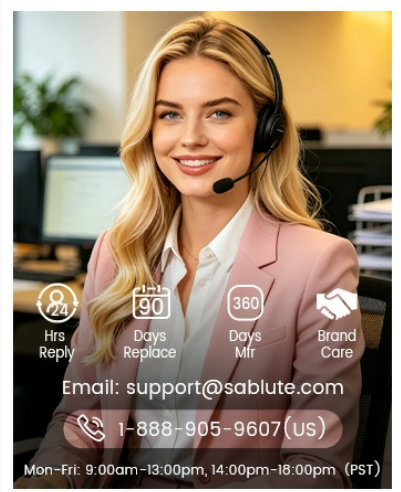


Image: A customer service representative with SABLUTE product care and contact information, including email and phone number.

© 2026 SABLUTE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question