

[Manuals.plus](#) /

› [Leuceira](#) /

› Leuceira Fitness Health/CalorieTracker Smart Bracelet B3 User Manual

Leuceira B3

Leuceira Fitness Health/CalorieTracker Smart Bracelet B3 User Manual

Model: B3

INTRODUCTION

Thank you for choosing the Leuceira Fitness Health/CalorieTracker Smart Bracelet B3. This manual provides essential information for setting up, operating, and maintaining your new smart bracelet. Please read it carefully to ensure optimal performance and longevity of your device.

Important Note: This device is not a medical instrument and should not be used for medical diagnosis or treatment. The data provided is for reference only.

PACKAGE CONTENTS

- 1 x Smart Bracelet Body (Model B3)
- 2 x Bands (Black Steel + Black Silicone)
- 1 x User Manual
- 1 x Magnetic Charging Cable
- 1 x Customized Packaging Box

SETUP

1. Charging the Device

Before first use, fully charge the smart bracelet. Connect the magnetic charging cable to the charging contacts on the back of the bracelet and plug the USB end into a 1A or less USB power adapter (not included).

Charging time is approximately 2 hours. A full charge provides up to 5 days of working time. If the bracelet is out of power after a long delivery process, charge it for 2-3 hours.



Image: The Leuceira Smart Bracelet B3 shown with both the black steel and black silicone bands, illustrating the product's appearance and included accessories.

2. App Installation and Pairing

1. Download the "Nx Wear" app from your smartphone's app store (compatible with Android 6.0+ and iOS 11.0+).
2. Ensure Bluetooth is enabled on your smartphone.
3. Open the "Nx Wear" app and follow the on-screen instructions to create an account or log in.
4. Search for your device within the app and select "B3" to pair.
5. Grant all necessary permissions to the app for full functionality.

3. Band Installation

The Leuceira B3 comes with two interchangeable bands: a black steel mesh band and a black silicone band. To attach or detach a band, locate the quick-release pins on the underside of the bracelet body. Slide the pin to release the band, then align the new band and slide the pin back into place until it clicks securely.

OPERATING INSTRUCTIONS

1. Basic Navigation

The bracelet features a touch-sensitive screen and a single button for navigation. Tap the screen to wake it up or cycle through different displays. Press and hold the button for specific functions as indicated on the screen or in the app.

2. Health Monitoring

The B3 smart bracelet provides 24-hour real-time monitoring of various health metrics:

- **Heart Rate:** Continuously monitors your heart rate, helping you understand stress levels and heart rate variability.
- **Pressure Detection:** Provides insights into your body's pressure levels.
- **Physiological Cycle Reminder:** For female users, the bracelet can record and remind you of your physiological cycle, helping to identify patterns.

24H Accurate Health Monitoring

Helps you understand your stress levels and heart rate variability, focus on your mental health, and pace your life wisely.



Image: The Leuceira Smart Bracelet B3's health monitoring system, showing icons for heart rate, pressure detection, and female physiological cycle, with a person running on a treadmill in the background.

3. Sleep Tracking

The advanced all-day sleep tracking function monitors your sleep patterns, including deep sleep, light sleep, and awake times. Access detailed sleep analysis in the "Nx Wear" app to understand and improve your sleep quality.

All Day Sleep Tracker

Understand the sleep state, light sleep, and deep sleep during the entire sleep period.
Good sleep habits will lead to better health.




Image: The Leuceira Smart Bracelet B3 on a wrist, with a smartphone displaying the "Nx Wear" app's sleep analysis interface, indicating deep sleep, light sleep, and awake periods.

4. Activity Tracking



The bracelet accurately records your daily activities, including steps taken (pedometer) and calories burned. This function helps you monitor your vitality levels and manage your exercise and rest times effectively.

All-day Activity Tracking

You can understand your vitality level at different times of the day and arrange your rest and exercise time reasonably.

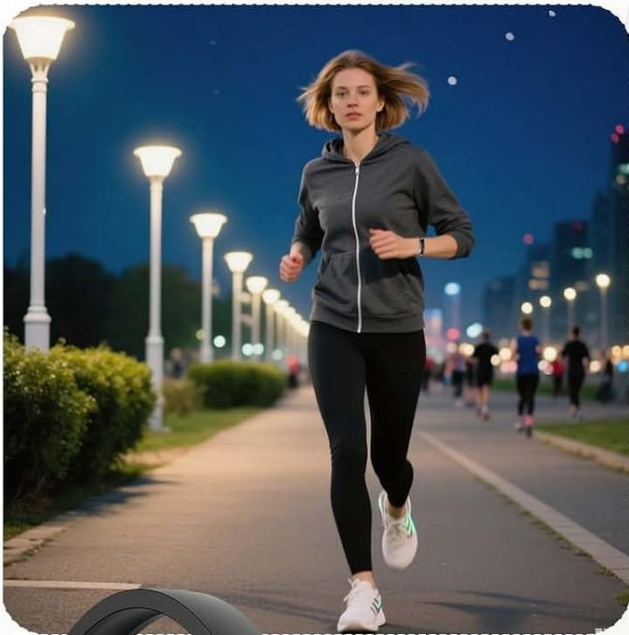

All-weather protection.

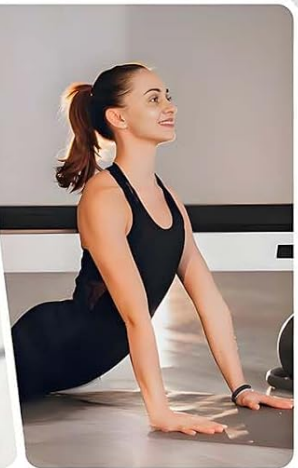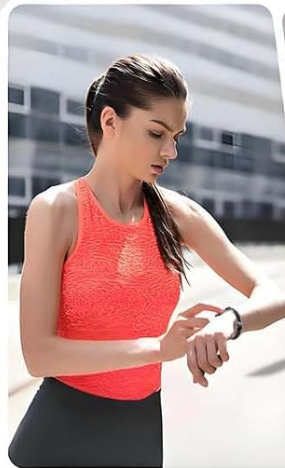

Accurately recording your activities.



Image: The Leuceira Smart Bracelet B3 on a wrist, with a person running outdoors and other images depicting various activities like yoga and checking the watch, highlighting its all-day activity tracking capability.

5. Multiple Sports Modes

The B3 supports various sports modes, allowing you to track specific activities like cycling, tennis, skiing, and more. Select the appropriate mode in the app or on the bracelet to record relevant sports data.



Image: The Leuceira Smart Bracelet B3 displaying icons for various sports modes (walking, running, swimming, cycling, etc.), with a person swimming in the background, emphasizing its 5ATM waterproof rating and multi-sport functionality.

6. Water Resistance

The bracelet has a 5ATM water resistance rating, meaning it can withstand pressures equivalent to a depth of 50 meters. It is suitable for swimming and showering, but not for diving or high-pressure water activities.

7. Remote Camera Control

Use the smart bracelet as a remote shutter for your smartphone camera. Pair your device with the "Nx Wear" app, navigate to the camera control feature, and tap the bracelet screen to take photos or record videos remotely.

Light Touch Shutter Freedom

Can control Android/IOS mobile phone to take photos and record videos.



Image: The Leuceira Smart Bracelet B3 on a wrist, with a smartphone displaying a camera interface and a couple posing for a photo, illustrating the remote camera control feature.

MAINTENANCE

1. Cleaning

Regularly clean your smart bracelet and bands with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the device. Ensure the charging contacts are clean and dry before charging.

2. Battery Care

To prolong battery life, avoid fully discharging the device frequently. Charge it when the battery level is low. Store the device in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Connect it to the charger for at least 30 minutes.
- **Cannot pair with smartphone:**
 - a. Ensure Bluetooth is enabled on your phone.
 - b. Make sure the bracelet is charged and within range of your phone.
 - c. Restart both the bracelet and your phone.
 - d. Ensure the "Nx Wear" app has all necessary permissions.
- **Inaccurate readings (Heart Rate, Steps, Sleep):**
 - a. Ensure the bracelet is worn snugly on your wrist, about one finger's width above the wrist bone.
 - b. Clean the sensor on the back of the bracelet.
 - c. Ensure your personal information (height, weight, age) is correctly entered in the "Nx Wear" app.
- **Short battery life:**
 - a. Check if background apps or continuous monitoring features are excessively active.
 - b. Reduce screen brightness or screen-on time.
 - c. Ensure the device is fully charged using the provided cable and a 1A or less adapter.
- **"LCD off" message or unresponsive screen:** This might indicate a power-saving mode or a temporary software issue. Try pressing the button to wake the screen. If unresponsive, try restarting the device (refer to app for specific restart instructions if available, or let battery drain and recharge).

SPECIFICATIONS

Feature	Detail
Model Name	B3 (HT-DWTB3)
Display Type	Digital
Screen Size	44.5 mm
Battery Capacity	18 mAh (Lithium Ion)
Charging Time	Approx. 2 hours
Working Time	Up to 5 days
Water Resistance	5ATM (50 meters)
Connectivity	Bluetooth BLE 5.3
Compatible Systems	Android 6.0+ / iOS 11.0+
App Name	Nx Wear
Memory Storage	128 MB
Metrics Measured	Heart Rate, Sleep Duration, Calories Burned
Band Material	Steel, Silicone
Item Dimensions	10D x 9W x 4H centimetres
Item Weight	85 g (Parcel Weight) / 16.5g (Net Weight)

Feature	Detail
GPS	No GPS

Graceful posture

Won't cause the slightest burden on your wrist.



Image: The Leuceira Smart Bracelet B3 showing its dimensions (44.5mm screen, 10.5mm thickness, 225mm band length) and how it fits comfortably on a user's wrist while cycling.

WARRANTY AND SUPPORT

Leuceira provides a 12-month warranty, offering money-back or a free replacement for eligible issues. For technical support, warranty claims, or any questions regarding your Leuceira Smart Bracelet B3, please contact Leuceira customer service through the contact information provided in your purchase documentation or on the official Leuceira website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FLDQLJGT>

More documents and user manuals: <https://manuals.plus/>