

OCOOPA UT5 Nano

Ocoopa UT5 Nano Rechargeable Hand Warmers Instruction Manual

Model: UT5 Nano | Brand: OCOOPA

1. INTRODUCTION

The Ocoopa UT5 Nano rechargeable hand warmers provide portable warmth with smart temperature control. Designed for comfort and convenience, these slim electric pocket heaters are suitable for various activities in cold environments. This manual provides essential information for the safe and effective use of your device.



Image: Two Ocoopa UT5 Nano hand warmers, one showing an illuminated heating surface, indicating active warmth.

Key Features:

- **Slim and Portable Design:** Measuring 0.59 inches thin, these hand warmers are lightweight and designed to fit comfortably in pockets, gloves, or small bags.
- **Instant Heat:** Activates and warms up within 2 seconds.
- **Adjustable Temperature Control:** Features 3 adjustable temperature settings for personalized warmth.
- **Long-Lasting Battery:** Provides 3.5 to 7 hours of continuous heat, depending on the selected setting.
- **UL Safety Certified:** Ensures reliable and safe operation.
- **Artists in Bloom Design:** Features embossed designer prints for enhanced aesthetics and wear resistance.



Image: A hand placing an Ocoopa hand warmer into a small purse, highlighting its ultra-slim and portable design.

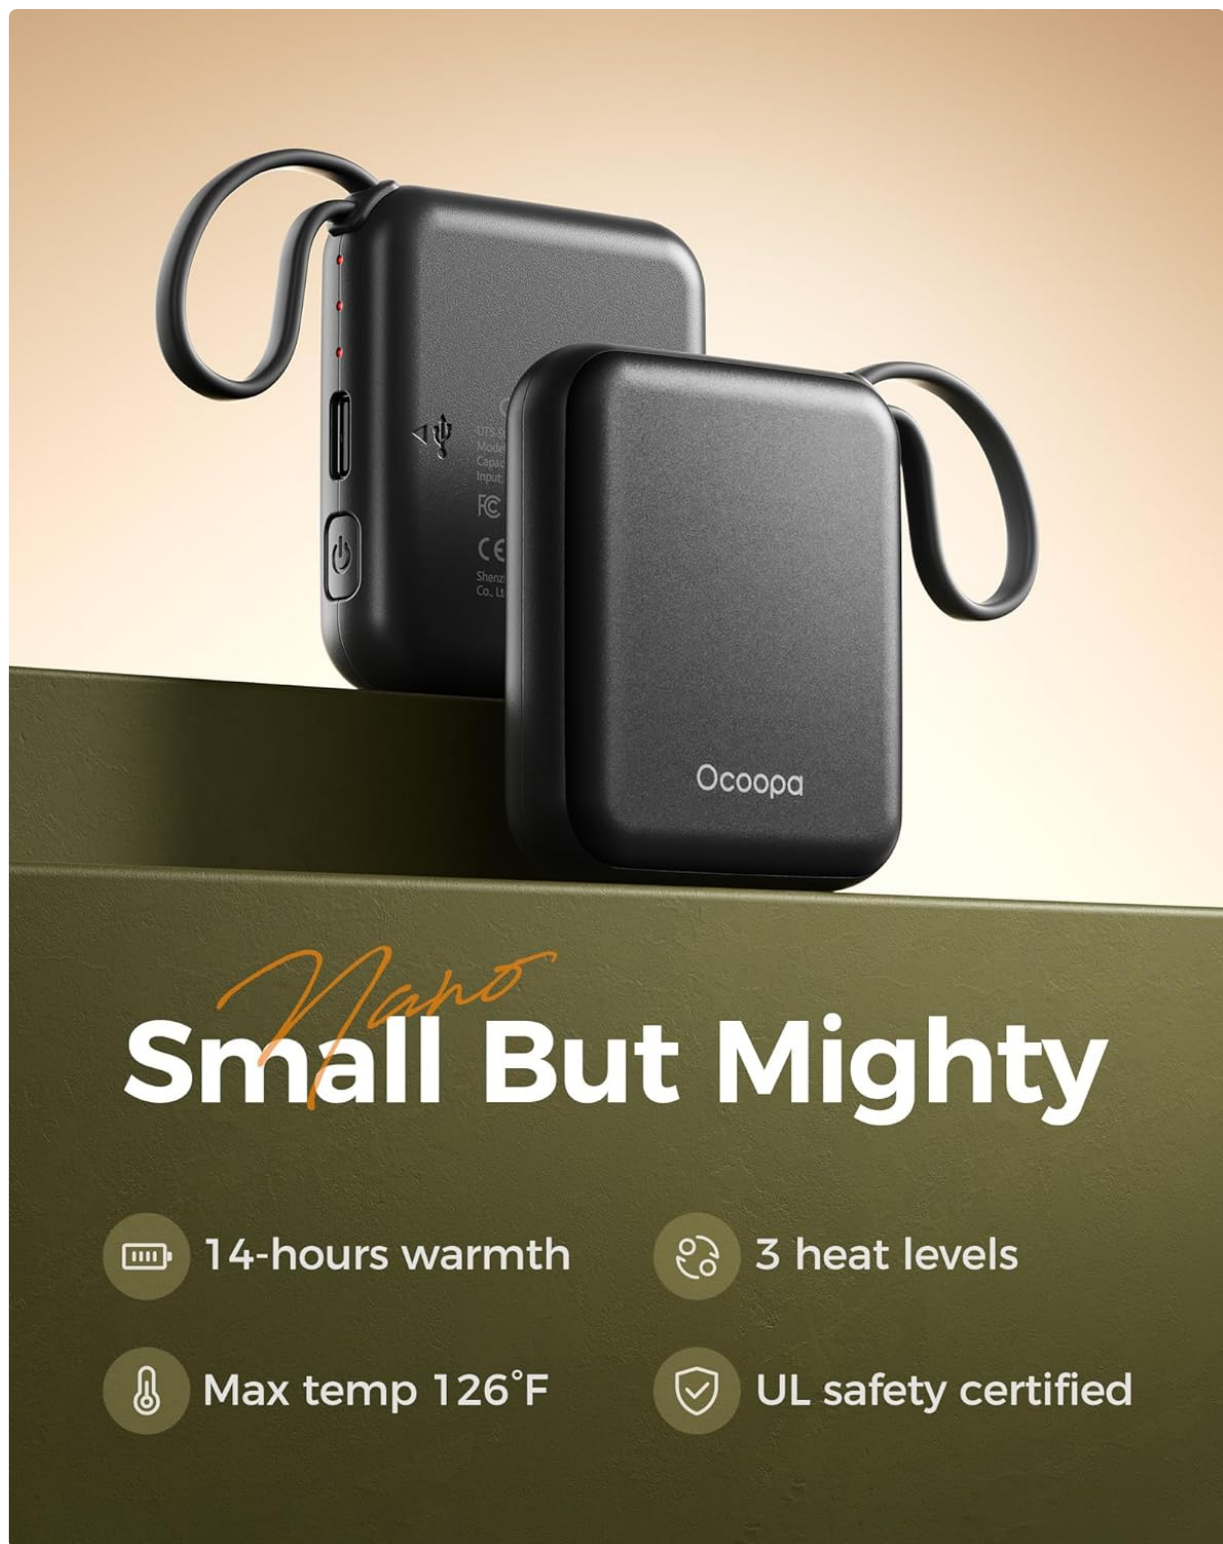


Image: Two Ocoopa hand warmers with text indicating 'Small But Mighty' and listing features like 14-hours warmth, 3 heat levels, Max temp 126°F, and UL safety certified.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 2 x Ocoopa UT5 Nano Rechargeable Hand Warmers
- 1 x Dual USB-C Charging Cable
- 1 x User Manual




Image: A pair of Ocoopa hand warmers with a floral design, a USB-C charging cable, and a power button visible, illustrating the product and its accessories.

3. SETUP

Before first use, fully charge your Ocoopa UT5 Nano hand warmers.

1. Connect the dual USB-C charging cable to the charging ports on both hand warmers.
2. Plug the USB-A end of the cable into a compatible USB power adapter (not included) or a computer USB port.
3. The indicator lights will show charging status. Once fully charged, the lights will change or turn off (refer to 'Charging' section for details).

Uniform Heating

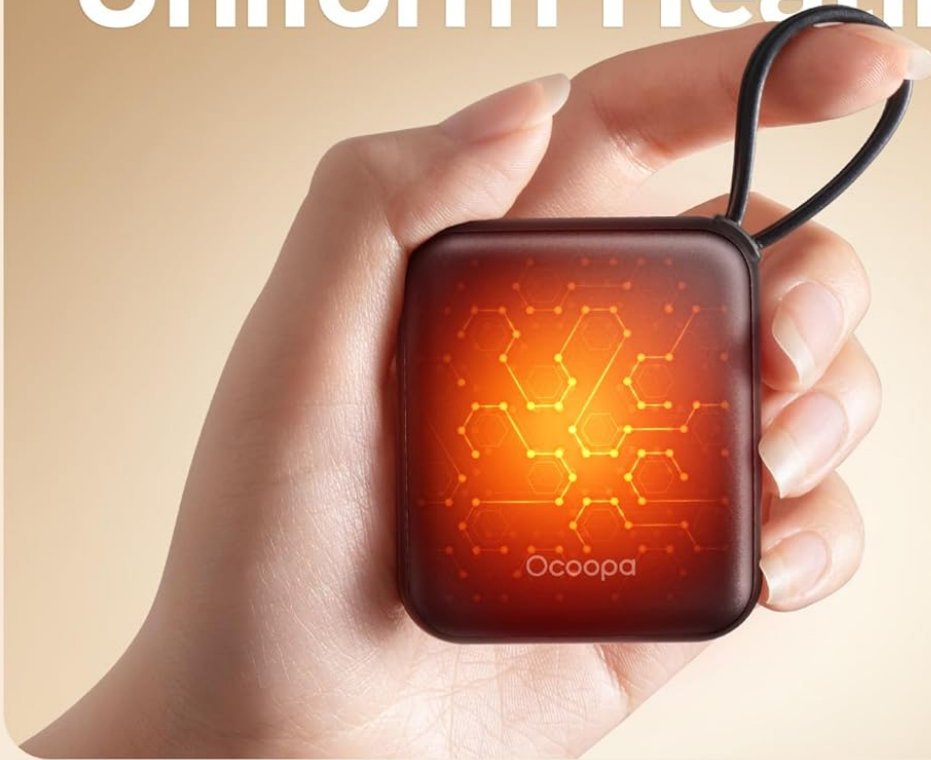

USB-C Fast Recharging



Embossed Floral Print

Image: A hand holding an Ocoopa hand warmer with a USB-C cable plugged in, showing the charging port and indicator lights.

4. OPERATING INSTRUCTIONS

Power On/Off:

- To power on, press and hold the power button for approximately 2-3 seconds until the red indicator lights illuminate.
- To power off, press and hold the power button for approximately 2-3 seconds until the indicator lights turn off.

Adjusting Heat Settings:

Once powered on, short press the power button to cycle through the 3 heat settings:

- **Level 1 (Low):** One red indicator light.
- **Level 2 (Medium):** Two red indicator lights.
- **Level 3 (High):** Three red indicator lights.

Checking Battery Level:

- Double-tap the power button to display the battery level. Blue indicator lights will show the remaining charge.



Image: An Ocoopa hand warmer displaying three red indicator lights, signifying the highest heat setting, with a power button and USB-C port visible.

Video: A user demonstrates the unboxing, charging, and operation of the Ocoopa UT5 Nano hand warmers, including how to adjust heat settings and check battery life.



Cozy Warmth *Nano* on-The-Go

Image: A person walking outdoors, holding an Ocoopa hand warmer in their hand, demonstrating its use for warmth on the go.

5. CHARGING

The Ocoopa UT5 Nano hand warmers are equipped with a USB-C charging port and come with a dual USB-C cable, allowing both units to be charged simultaneously.

- Use the provided dual USB-C cable to connect the hand warmers to a USB power source.
- Charging time may vary depending on the power source.
- Avoid using damaged cables or chargers.

6. MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- Store the hand warmers in a cool, dry place when not in use.
- Avoid dropping the device or exposing it to extreme temperatures.

7. TROUBLESHOOTING

Device Not Heating:

- Ensure the device is powered on by long-pressing the power button.
- Check the battery level. If low, recharge the device.

Device Not Charging:

- Verify that the charging cable is securely connected to both the hand warmer and the power source.
- Try using a different USB port or power adapter.
- Inspect the charging cable for any signs of damage.

Indicator Lights Not Working:

- If the device is functioning but lights are off, ensure it's not in a low-power state. If the device is unresponsive, contact support.

8. SPECIFICATIONS

Feature	Detail
Model	UT5 Nano (UT3042-BK)
Brand	OCOOPA
Material	Aluminum
Size	Small palm-sized (1.89 x 0.55 x 2.2 inches)
Weight	130 Grams
Battery Life	3.5 - 7 Hours (depending on heat setting)
Temperature Range	100°F - 126°F
Reusability	Rechargeable
Power Source	Battery Powered



Image: Two individuals sitting on a couch, one holding an Ocoopa hand warmer, with text highlighting 'Up to 14 Hours Battery Life'.

9. WARRANTY AND SUPPORT

Warranty:







The Ocoopa UT5 Nano Hand Warmers come with a 2-year warranty. Please retain your proof of purchase for warranty claims.

Customer Support:

For any questions, concerns, or technical assistance, please contact our support team:

- Email: support@occoopa.com

Related Documents - UT5 Nano

	<p>Ocoopa UT5 Nano Hand Warmer User Manual</p> <p>User manual for the Ocoopa UT5 Nano hand warmer, providing safety instructions, usage guides, charging information, and specifications.</p>
	<p>Ocoopa DuoHeat UT5 Hand Warmer User Manual</p> <p>User manual for the Ocoopa DuoHeat UT5 rechargeable hand warmer, providing instructions on operation, charging, safety, troubleshooting, and specifications.</p>
	<p>Ocoopa UT5 Sway Hand Warmer User Manual</p> <p>Comprehensive user manual for the Ocoopa UT5 Sway (UT3043) rechargeable hand warmer. Provides detailed safety instructions, operating procedures, specifications, battery disposal guidelines, and customer support information.</p>
	<p>Ocoopa UT2s mini Rechargeable Hand Warmer User Manual</p> <p>User manual for the Ocoopa UT2s mini rechargeable hand warmer, detailing operation, charging, specifications, and safety precautions.</p>
	<p>Ocoopa UT3 Lite Hand Warmer User Manual - Model UT3053</p> <p>Official user manual for the Ocoopa UT3 Lite hand warmer (Model UT3053). Learn about features, usage, charging, specifications, and safety precautions.</p>
	<p>Ocoopa UT3 Pro Rechargeable Hand Warmer User Manual</p> <p>Detailed user manual for the Ocoopa UT3 Pro rechargeable hand warmer (Model UT4102), covering specifications, safety warnings, operating instructions, and technical support.</p>