

Mepplzian LED Medicine Cabinet

# Mepplzian LED Lighted Medicine Cabinet User Manual

Model: LED Medicine Cabinet (24x30 Inch, Right Hinges)

## 1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Mepplzian LED Lighted Medicine Cabinet. Please read this manual thoroughly before installation and use to ensure proper function and safety. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INFORMATION

**WARNING:** Electrical installation should be performed by a qualified electrician. Ensure power is disconnected at the circuit breaker before installation or maintenance.

- Do not attempt to modify or repair the product yourself.
- Keep children away from the product during installation.
- Avoid using abrasive cleaners or sharp objects on the mirror surface.
- This product is designed for indoor use only in a bathroom environment.
- Ensure the mounting surface is structurally sound to support the cabinet's weight.

## 3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- LED Lighted Medicine Cabinet (1)
- Mounting Hardware Kit (1)
- User Manual (1)

*Note: If any parts are missing or damaged, please contact Mepplzian customer support.*

## 4. PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Brand	Mepplzian
Model Name	LED Medicine Cabinet
Dimensions (WxHxD)	23.6" x 30" x 5.1" (60cm x 76cm x 11.5cm)
Door Configuration	Single Door, Right Hinges
Number of Shelves	3
Mounting Type	Wall Mounted (Surface Mounted)
Special Features	LED Lighting (Adjustable Brightness & Color Temperature), Anti-Fog Function, Memory Function, Moisture Resistant
Power Source	US Plug Adapter (Plug-in)
Material	E1 MDF board, Copper-free silver mirror
Item Weight	33 Pounds

# Product Dimensions

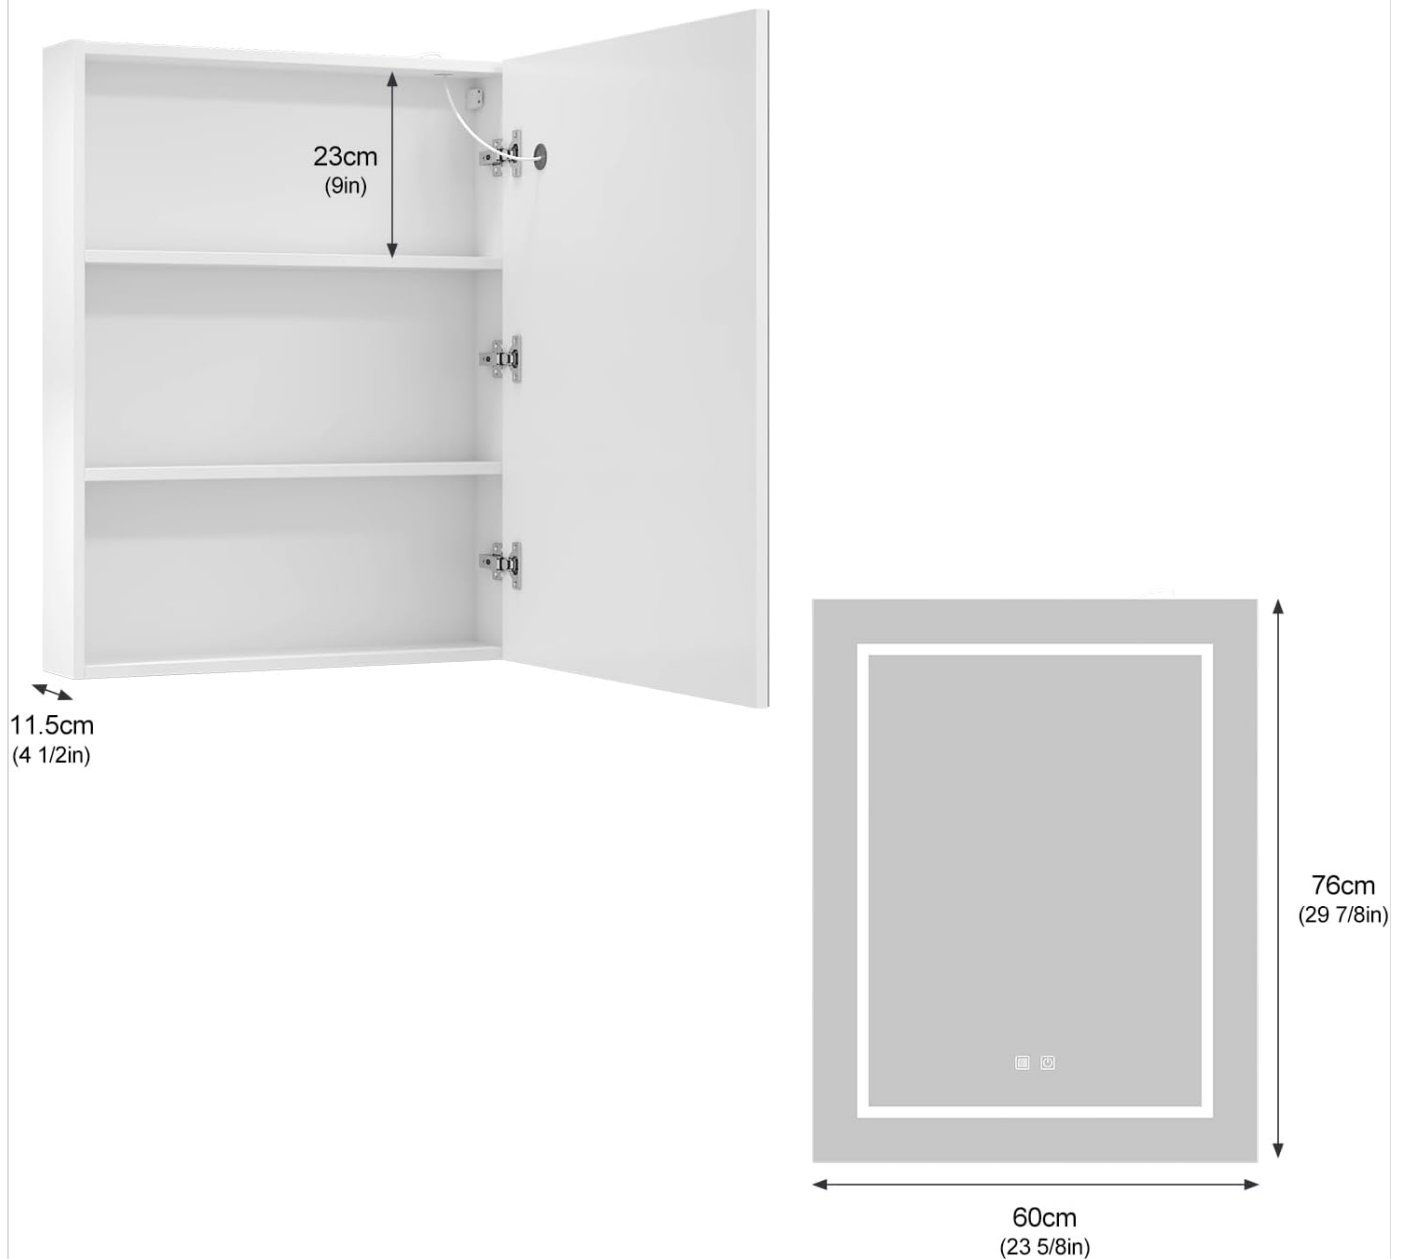


Figure 1: Product Dimensions. The diagram illustrates the cabinet's width (60cm / 23.5/8in), height (76cm / 29 7/8in), and internal shelf depth (11.5cm / 4 1/2in) and height (23cm / 9in).

## 5. SETUP AND INSTALLATION

### 5.1 Pre-Installation Checklist

- Ensure the wall is suitable for mounting and can support the cabinet's weight (33 lbs).
- Verify the location of electrical outlets for the power plug.
- Gather necessary tools: drill, level, measuring tape, screwdriver, pencil.

### 5.2 Mounting Instructions

1. **Marking:** Use a level and measuring tape to mark the desired mounting height and positions for the mounting screws on the wall.
2. **Drilling:** Drill pilot holes at the marked locations. Insert wall anchors if necessary.
3. **Secure Mounting Plate:** Attach the mounting plate (if included) or directly secure the cabinet's back panel to the

wall using appropriate screws.

4. **Hang Cabinet:** Carefully lift and hang the medicine cabinet onto the secured mounting hardware. Ensure it is level and stable.
5. **Connect Power:** Plug the cabinet's power cord into a standard US electrical outlet.

*Note: This cabinet is designed for surface mounting only and cannot be recessed into the wall.*




Figure 2: Mepplzian LED Medicine Cabinet with Right Hinges. This image displays the cabinet's internal storage capacity with three shelves.

## 6. OPERATING INSTRUCTIONS

### 6.1 LED Lighting Control

The mirror features smart touch sensor controls for the LED lighting.

- **Power On/Off:** Short press the LED sensor button to turn the light on or off.
- **Adjust Brightness:** Long press the LED sensor button to continuously adjust the light intensity (dimmer function). Release when desired brightness is reached.
- **Change Color Temperature:** Short press the LED sensor button repeatedly to cycle through the three available color temperatures: 3000K Warm Light, 4000K Natural Light, and 6000K Cool Light.

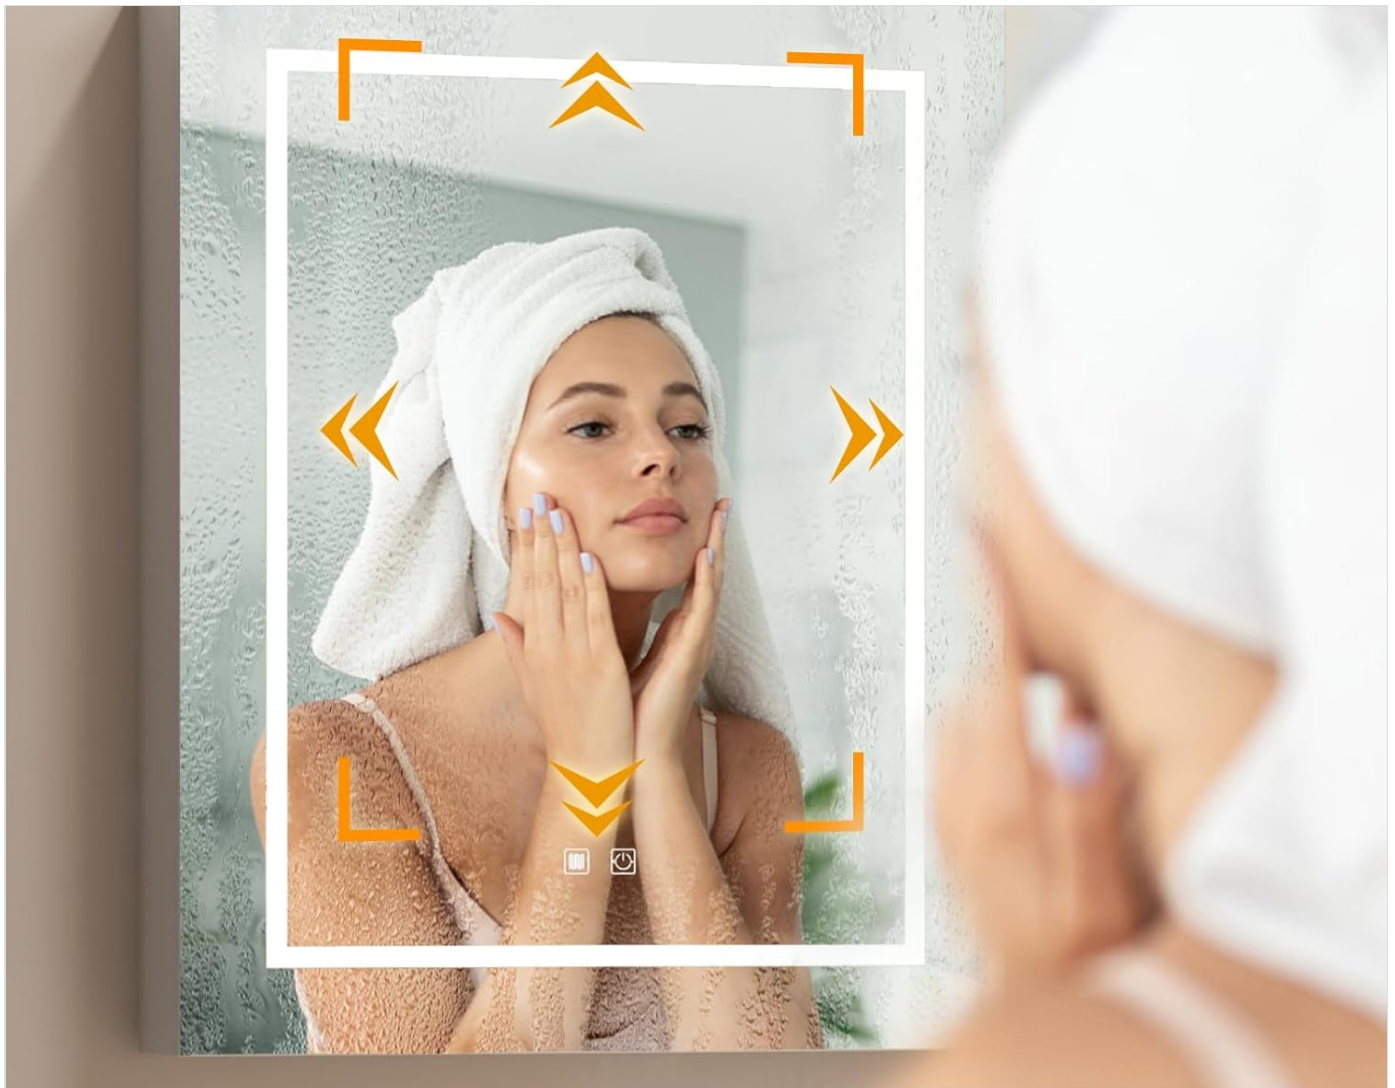

## Touch one button to defog

so you can look in the mirror and take care of your skin as soon as possible after taking a shower

Figure 3: LED Lighting Controls. This image demonstrates how to adjust the brightness and cycle through the three color temperature options (Warm, Natural, Cool) using the touch sensor.

*Note: The LED lights are intended as mood lighting and are not designed to be the primary light source for the entire bathroom. The cabinet includes a smart memory function that retains your last light setting.*

### 6.2 Anti-Fog Function

The cabinet features a separate touch sensor control for the anti-fog function.

- **Activate/Deactivate:** Short press the anti-fog sensor button to turn the defogger on or off.

This function helps maintain a clear reflection, especially after a shower. For optimal performance, activate the anti-fog function before showering.

# Left or Right Opening?

We Have Both Options!



Figure 4: Anti-Fog Function. This image illustrates the effectiveness of the anti-fog feature, showing a clear mirror surface after activation.

## 7. MAINTENANCE AND CARE

- **Cleaning the Mirror:** Use a soft, damp cloth and a mild glass cleaner. Do not spray cleaner directly onto the mirror; apply it to the cloth first. Avoid abrasive cleaners.
- **Cleaning the Cabinet:** Wipe the cabinet surfaces with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive household cleaner.
- **Electrical Components:** Ensure the power is disconnected before cleaning near electrical components. Do not immerse any part of the cabinet in water.
- **Hinges:** Periodically check the door hinges for tightness and adjust if necessary to ensure smooth operation.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

LED lights do not turn on.	No power supply; loose connection; faulty LED driver.	Check if the power plug is securely connected to a working outlet. Ensure the circuit breaker is on. If the issue persists, contact customer support.
Anti-fog function is not working.	Anti-fog function not activated; power issue.	Ensure the anti-fog sensor button has been pressed. Verify the cabinet has power.
Door is misaligned or squeaks.	Loose hinges; improper installation.	Tighten hinge screws. Refer to installation instructions for proper alignment.

If you encounter problems not listed here or if solutions do not resolve the issue, please contact Mepplzian customer support.

## 9. WARRANTY AND CUSTOMER SUPPORT

Mepplzian products are designed for quality and durability. For warranty information or technical assistance, please contact our customer support team.

- **Customer Service:** Refer to the contact information provided with your purchase or visit the official Mepplzian website.
- **Proof of Purchase:** Please retain your proof of purchase for warranty claims.

