



Manuals.plus /

› Beautyrest /

› Beautyrest baselogic Level 4 Adjustable Base Bed Frame - Twin XL User Manual

Beautyrest Level 4 Twin XL

Beautyrest baselogic Level 4 Adjustable Base Bed Frame - Twin XL User Manual

Model: Level 4 Twin XL

INTRODUCTION

This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your Beautyrest baselogic Level 4 Adjustable Base Bed Frame. Please read all instructions carefully before use and retain this manual for future reference.

SAFETY INFORMATION

- **Electrical Safety:** Ensure the power cord is not pinched or damaged. Do not operate if the cord is frayed or if the unit has been exposed to water.
- **Weight Capacity:** Do not exceed the recommended weight capacity for the adjustable base. Refer to specifications for details.
- **Children and Pets:** Keep children and pets away from moving parts of the adjustable base.
- **Clearance:** Ensure adequate clearance around the bed frame during operation to prevent obstructions.
- **Medical Devices:** Consult your physician before using this product if you have a pacemaker or other medical device.

COMPONENTS LIST

Before assembly, verify that all components are present:


- Adjustable Base Frame (Twin XL)
- Wireless LCD Remote Control
- Adjustable Legs (4-in-1, for 3", 6", 9", or 12" height)
- Power Cord and Adapter
- Mattress Retainer Bar

- User Manual (this document)

SETUP AND ASSEMBLY

Assembly is required. Follow these general steps. Refer to the included installation manual for detailed diagrams.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a clean, flat surface.
2. **Attach Legs:** The adjustable legs can be set to 3", 6", 9", or 12" heights. Screw the legs into the designated threaded holes on the base. Ensure all legs are securely tightened and set to your desired height. For zero-clearance use with platform beds, legs can be removed entirely.
3. **Position Base:** Place the adjustable base in your desired location. Ensure it is level and stable.
4. **Install Mattress Retainer Bar:** Insert the mattress retainer bar into the designated slots at the foot of the bed to prevent the mattress from sliding.
5. **Connect Power:** Plug the power cord into the control box on the base, then plug the adapter into a grounded electrical outlet.
6. **Pair Remote:** Follow the instructions in the separate remote control guide to pair the wireless LCD remote with the base.

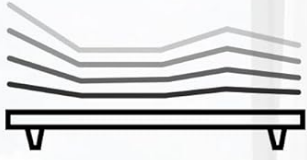

Compatible with
Beautyrest® mattresses




Image: The adjustable base is designed for compatibility with various mattresses, including Beautyrest models. Ensure your mattress is suitable for an adjustable base.

OPERATING INSTRUCTIONS

Your Beautyrest baselogic Level 4 Adjustable Base offers various features controlled by the wireless LCD remote.

Wireless LCD Remote Control




Platinum features



Integrated
sound therapy



Underbed
lighting



Dual
massage



LCD wireless
remote




Zero-gravity
preset



USB A+C
ports



One-touch
flat preset




Zero-clearance
design

Image: Overview of the adjustable base's key features, including remote control functions, massage, and charging ports. The remote allows for precise control over the bed's functions. Familiarize yourself with the buttons and their corresponding actions.

Head and Foot Adjustability

- Use the designated buttons on the remote to raise or lower the head and foot sections of the bed.
- The automatic pillow tilt feature provides additional neck and head support when the head section is raised.

Zero-Gravity Preset




Zero-gravity
preset



Helps relieve pressure points for
enhanced relaxation

Image: A person in the zero-gravity position, illustrating how the bed elevates the head and feet to relieve pressure points. Press the "Zero-Gravity" button on the remote to automatically adjust the bed to a position that elevates your head and feet, designed to relieve pressure points and enhance relaxation.

Dual Massage Setting

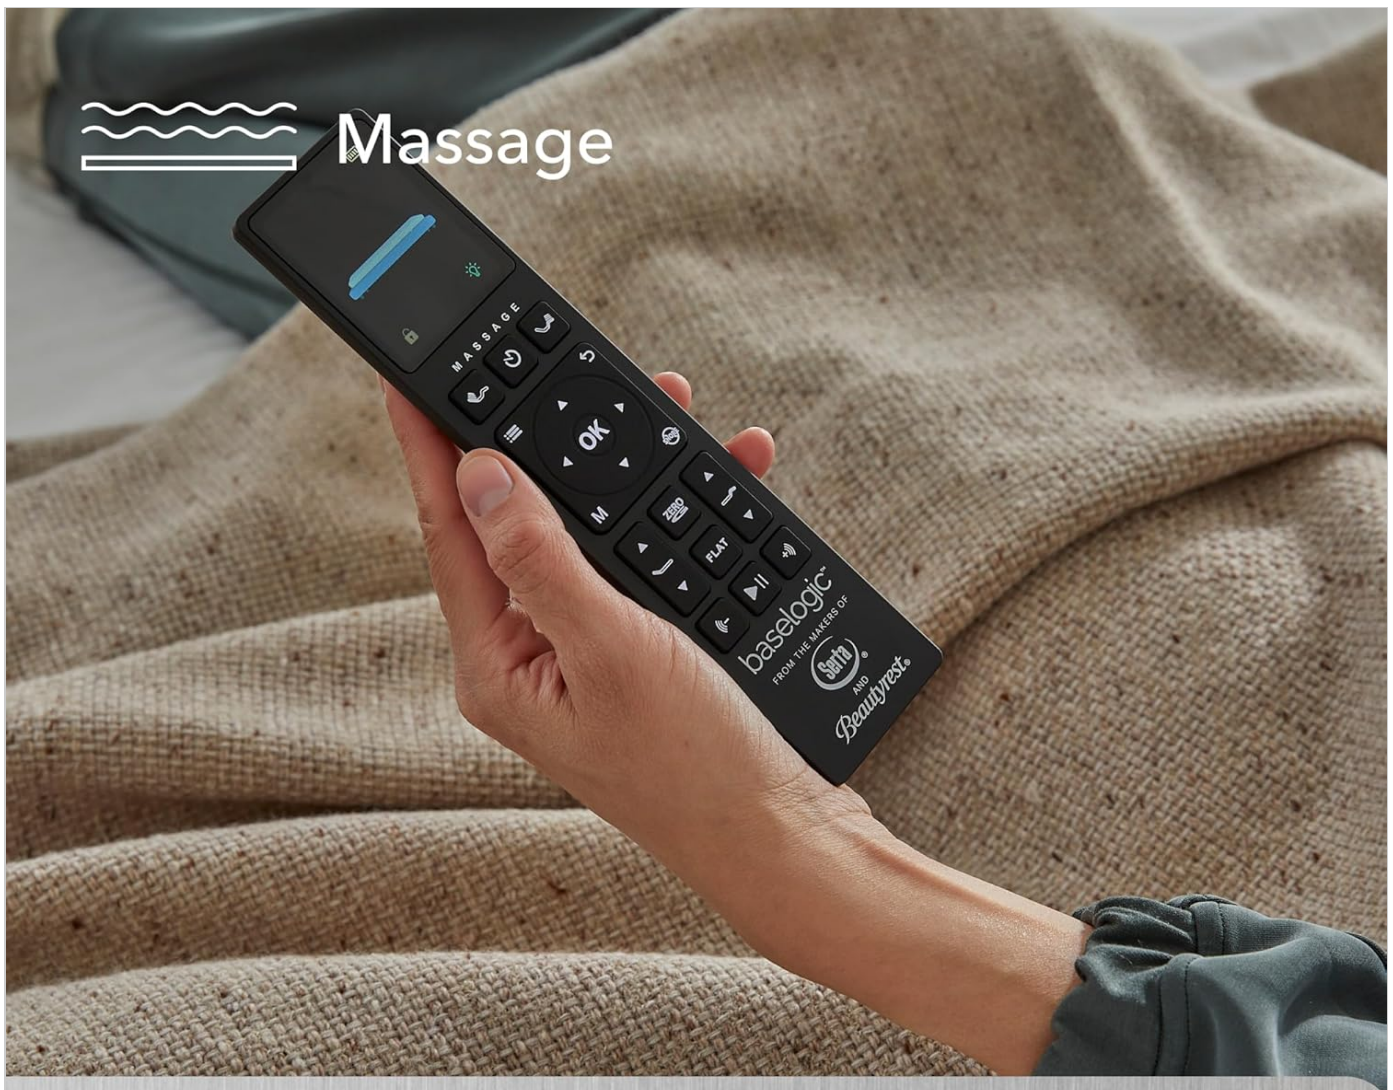

A whisper-quiet, dual massage setting will help you drift off to sleep

Image: The remote control displaying the massage function, which activates a quiet, dual-zone massage.

Activate the whisper-quiet dual massage feature using the remote control. Adjust intensity and mode as desired for relaxation.

Memory Presets and One-Touch Flat

- **Memory Presets:** Save your favorite positions for quick recall using the memory preset buttons on the remote. Consult the remote guide for programming instructions.
- **One-Touch Flat:** Press the "Flat" button to quickly return the bed to a completely flat position.

Anti-Snore Preset

Utilize the "Anti-Snore" preset button to gently raise the head of the bed, which can help open airways and promote quieter sleep.

USB A & C Charging Ports



USB A & C charging ports




Convenient and accessible device charging

Image: A close-up of the integrated USB A and C charging ports, providing convenient access for charging electronic devices. Conveniently located USB A and C charging ports are integrated into the base for charging your electronic devices.

Ambient Underbed Lighting and Sound Therapy

Integrated sound therapy

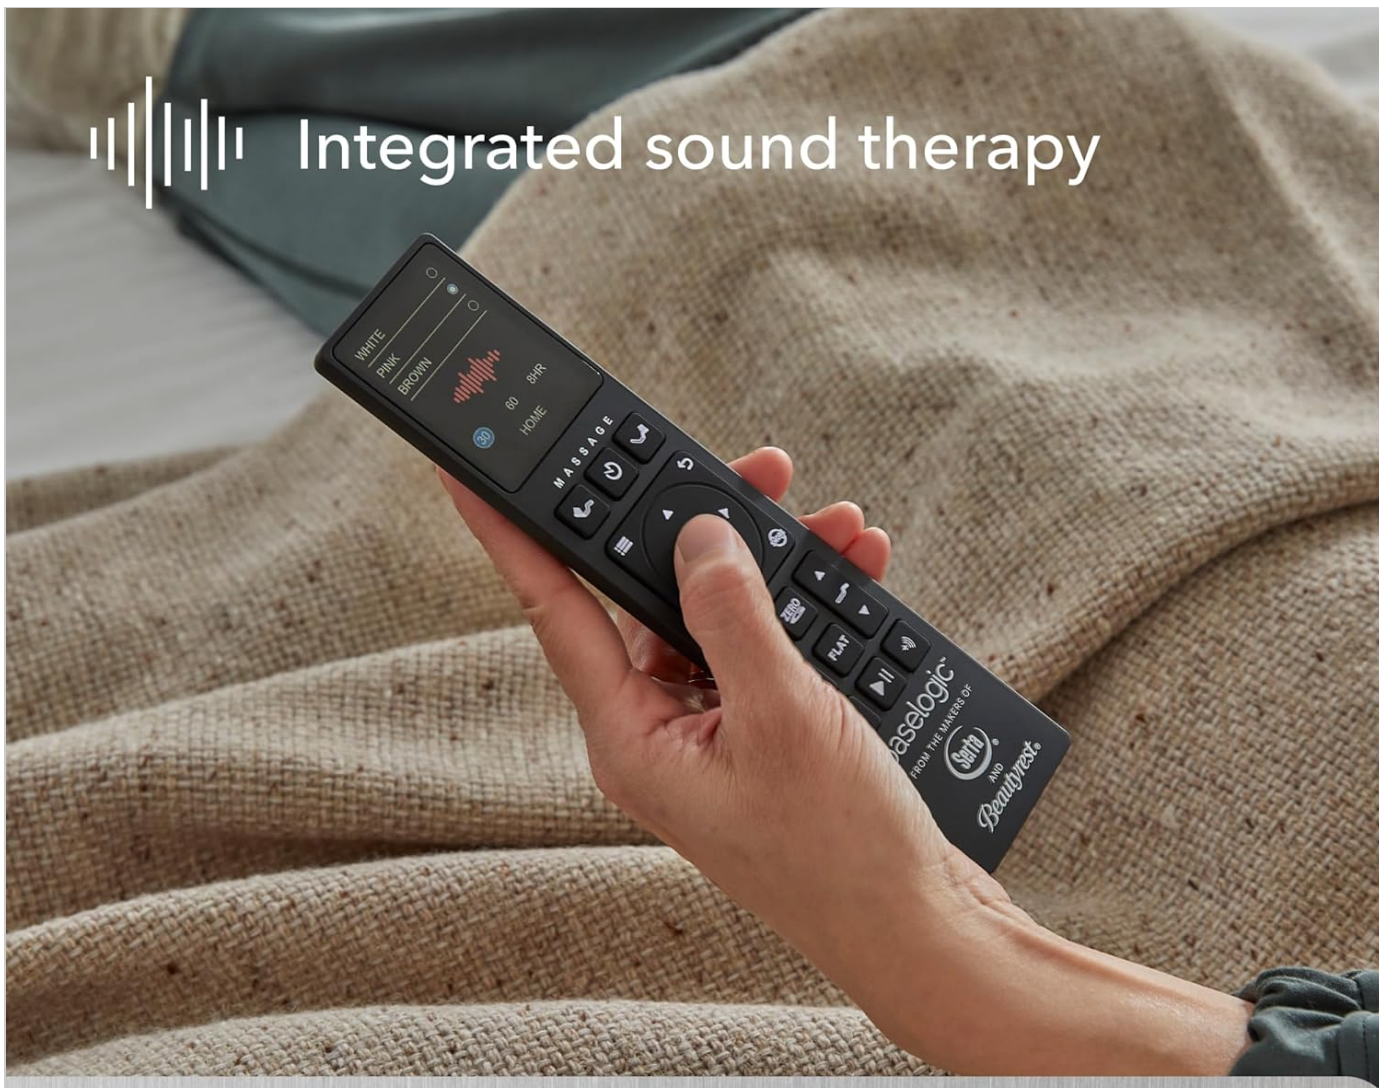

Select white, pink, or brown noise for a soothing experience

Image: The remote control interface for selecting integrated sound therapy options, including white, pink, and brown noise.

- **Underbed Lighting:** Select from three ambient underbed light settings for a calming effect.
- **Sound Therapy:** Access integrated sound therapy with options for white, pink, or brown noise to enhance relaxation.

MAINTENANCE

Proper care ensures the longevity of your adjustable base.

Fabric Care

- To prolong fabric life, protect from direct sunlight. Keep at least 12 inches (30 cm) away from direct heat sources.
- For deeper cleaning, blot liquid spills with a clean, dry cloth. Wipe with a clean cloth dampened with warm water. Do not wet excessively or use abrasive or harsh chemicals.
- A soft bristle brush may be used to remove ingrained soil. Avoid scratching by gentle brushing. Wipe with a clean cloth dampened with warm water to remove residues.

- Dry out of direct sunlight and away from direct heat sources. If persistent marks remain visible after cleaning, seek professional advice.
- For spot cleaning, wipe the area with a lightly damp sponge or vacuum with a soft brush attachment to remove particles.

General Maintenance

- Regularly check all bolts and fasteners to ensure they are tight.
- Keep the area around the motor and moving parts free from dust and debris.
- Do not attempt to open or service the motor or control box. Contact qualified personnel for repairs.

TROUBLESHOOTING

If you experience issues with your adjustable base, refer to the following common solutions:

Problem	Possible Cause	Solution
Base does not operate.	Power cord unplugged; remote not paired; circuit breaker tripped.	Ensure power cord is securely plugged in. Re-pair the remote control. Check your home's circuit breaker.
Remote control not responding.	Dead batteries; remote out of range; interference.	Replace remote batteries. Move closer to the base. Remove potential sources of interference.
Motor makes unusual noise.	Obstruction under the bed; loose components.	Check for any objects obstructing the moving parts. Ensure all legs and fasteners are tight.

If issues persist after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Beautyrest
Model	Level 4 Twin XL (Model Number: 500835319-7520)
Size	Twin XL
Material	Metal
Product Dimensions (L x W x H)	80" x 38" x 12"
Item Weight	110.2 Pounds
Color	Grey
Special Features	Adjustable, Charging Station (USB A & C), Foldable, Wireless Remote Control, Zero Gravity Mode, Dual Massage, Underbed Lighting, Sound Therapy, Anti-Snore Preset, Memory Presets, One-Touch Flat
UPC	198167032740
Manufacturer	Serta Simmons Bedding, LLC.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact Beautyrest customer support directly. Keep your proof of purchase for warranty claims.

For technical assistance, replacement parts, or further inquiries, please visit the official Beautyrest website or contact their customer service department.

Manufacturer: Serta Simmons Bedding, LLC.

Brand Website: [Beautyrest Official Store](#)

