



[Manuals.plus](#) /

› [ESHINE](#) /

› ESHINE 6000 Series Split King Adjustable Bed Frame User Manual

ESHINE 6000 Series

ESHINE 6000 Series Split King Adjustable Bed Frame User Manual

Model: 6000 Series Split King Adjustable Bed Only

INTRODUCTION

Thank you for choosing the ESHINE 6000 Series Split King Adjustable Bed Frame. This manual provides essential information for the safe and efficient use of your new adjustable bed frame. Please read these instructions carefully before assembly and operation to ensure proper functionality and longevity of your product.

SAFETY INFORMATION

For your safety, please observe the following precautions:

- Keep all moving parts clear of obstructions during operation.
- Ensure children and pets are kept away from the adjustable bed frame during movement.
- Do not attempt to disassemble or repair the motor or other electrical components. Contact customer support for assistance.
- Always unplug the bed frame from the power outlet before cleaning or performing maintenance.
- Do not use the bed frame if any part is damaged or malfunctioning.
- Refer to the included safety information provided with the product packaging.

PRODUCT OVERVIEW

The ESHINE 6000 Series Split King Adjustable Bed Frame offers advanced features for personalized comfort and support. Key features include:

- **Lumbar Support:** Integrated support to relieve lower back pressure.
- **Head-Pillow-Tilt:** Adjustable head and pillow tilt for optimal positioning.
- **Under Bed Lighting:** Soft ambient lighting for convenience.
- **Smart App Control:** Control functions via a dedicated mobile application.

- **Zero Gravity Position:** Pre-set position for reduced pressure on the body.
- **Ergonomic Incline:** Customizable head and foot articulation.
- **Wireless Remote:** Intuitive control for all bed functions.
- **Dual USB Ports:** Convenient charging for electronic devices.
- **3-Level Massage System:** Customizable massage settings and intensity levels.

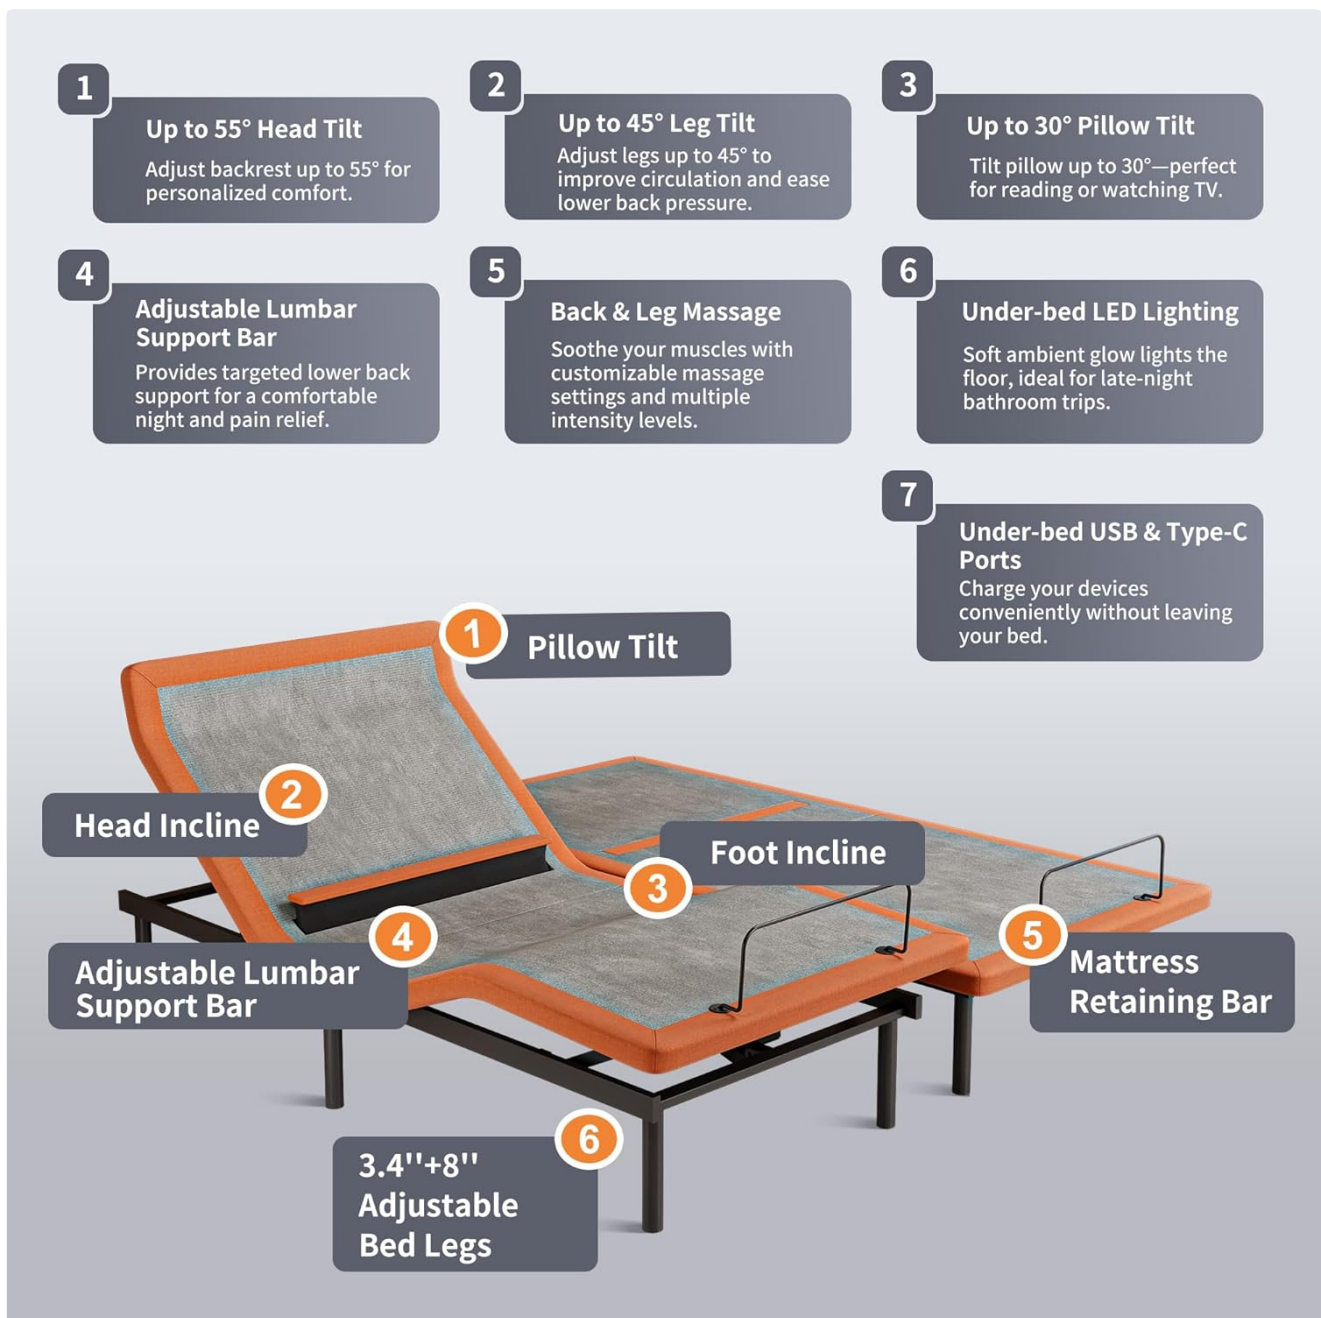


Figure 1: ESHINE 6000 Series Adjustable Bed Frame Features Diagram.

Transform Your Health Through Sleep

Improved Digestion



Better Posture



Enhanced Circulation



Decreased Swelling



Back Pain Relief



Relief from Arthritis



Eased Breathing



Enhanced Sleep Quality



Figure 2: Health Benefits of the ESHINE Adjustable Bed Frame.

SETUP INSTRUCTIONS

The ESHINE 6000 Series adjustable bed frame is designed for straightforward assembly. While the frame is robust, it is recommended to have two people for easier handling due to its weight.

Unpacking and Placement

1. Carefully remove all components from the packaging. Retain packaging materials until assembly is complete.
2. Place the bed frame components in the desired location. The frame can be slid across the floor on a towel or moved with a hand cart.

Leg Installation

The adjustable legs come in two heights: 8 inches and 11.4 inches. Choose the height that suits your preference before installation.

1. Attach the chosen legs securely to the bed frame. Ensure all legs are tightened to prevent instability.

2. With assistance, carefully flip the bed base over once the feet are attached to avoid bending the leg bolts.

Mattress Retainer Bar Installation

1. Locate the mattress retainer bars.
2. Insert the retainer bars into the designated slots at the foot of the bed frame to prevent the mattress from sliding.

Power Connection

1. Connect the power cord to the control box on the bed frame.
2. Plug the power cord into a grounded electrical outlet.



Figure 3: Split King Adjustable Bed Frame during setup.

OPERATING INSTRUCTIONS

Your ESHINE adjustable bed frame can be controlled using the wireless remote or the ESHINE mobile application.

Wireless Remote Control

The wireless remote provides full control over all bed functions. Ensure the remote has fresh batteries installed.



Figure 4: Wireless Remote Control Functions.

- **Head/Foot Incline:** Use the designated buttons to raise or lower the head and foot sections.
- **Pillow Tilt:** Adjust the pillow section independently for optimal neck support.
- **Lumbar Support:** Activate and adjust the built-in lumbar support.
- **Zero Gravity:** Press the 'Zero Gravity' button for a pre-set position that elevates the head and feet to reduce pressure.
- **Anti-Snore:** Press the 'Anti Snore' button for a pre-set position designed to alleviate snoring.
- **Massage System:** Select from 3 intensity levels and various modes for head and foot massage. Use the timer function for 10, 20, or 30-minute sessions.
- **Under Bed Light:** Turn the under-bed LED lighting on or off.
- **Memory Positions:** Program and save your favorite positions for quick access.
- **Flat Button:** Press to return the bed to a flat position.
- **Flashlight:** The remote includes a built-in flashlight for convenience in the dark.

Smart App Control

Download the ESHINE APP from your device's app store to control all bed functions from your smartphone. The app allows for custom position adjustments, pillow tilt, massage modes, and dual-side independent controls for Split King models.

Dual USB Ports

Two USB ports (one standard, one Type-C) are located on the side of the bed frame for convenient charging of your electronic devices.

Video 1: Demonstration of the ESHINE 6000 Series adjustable bed frame features and remote control operation.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your adjustable bed frame.

- **Cleaning:** Wipe the frame with a damp cloth. Avoid harsh chemicals or abrasive cleaners. For fabric parts, use a mild fabric cleaner as needed.
- **Inspections:** Periodically check all connections and fasteners to ensure they are secure.
- **Motor Care:** The motors are designed to be maintenance-free. Do not lubricate or attempt to open the motor housing.
- **Power Cord:** Inspect the power cord for any damage. If damaged, discontinue use and contact customer support.

TROUBLESHOOTING

If you encounter issues with your ESHINE adjustable bed frame, refer to the following common solutions:

Problem	Possible Cause	Solution
Bed does not operate	No power supply	Ensure the power cord is securely plugged into a working outlet. Check circuit breaker.
Remote control not responding	Dead batteries or remote not paired	Replace remote batteries. Refer to the pairing instructions in the full manual (if applicable).
Motor makes unusual noise	Obstruction or loose component	Check for any objects obstructing the moving parts. Ensure all bolts are tightened.
Bed moves slowly or unevenly	Overload or power issue	Ensure the bed is not overloaded beyond its weight capacity. Check power supply.

If the problem persists after attempting these solutions, please contact ESHINE customer support.

SPECIFICATIONS

Feature	Detail
Model	6000 Series
Size	Split King

Feature	Detail
Style	Adjustable Bed Only
Frame Material	Metal
Color	Orange
Item Dimensions (L x W x H)	78.7"L x 76.9"W x 27.4"H
Adjustable Leg Heights	8 inches and 11.4 inches
Special Features	Lumbar Support, Head-Pillow-Tilt, Under Bed Light, Smart App Control, Zero Gravity, Ergonomic Incline, Wireless Remote, Dual USB Port, 3-Level Massage System
Required Assembly	No (minimal setup required)

Transform Your Health Through Sleep

- Improved Digestion
- Better Posture
- Enhanced Circulation
- Decreased Swelling
- Back Pain Relief
- Relief from Arthritis
- Eased Breathing
- Enhanced Sleep Quality

Figure 5: ESHINE Adjustable Bed Frame Dimensions.

WARRANTY AND SUPPORT

The ESHINE 6000 Series Adjustable Bed Frame comes with a **10-Year Warranty** covering the frame and motors, ensuring long-term durability and peace of mind. This warranty reflects our commitment to quality and customer satisfaction.

For technical support, warranty claims, or any questions regarding your product, please contact ESHINE-USA customer service. You can typically find contact information on the ESHINE website or through your purchase platform.

Manufacturer: Eshine Sleep