

Baby Brezza BRZ0105

Baby Brezza AirSwirl Waterless Baby Bottle Warmer Instruction Manual

Model: BRZ0105

INTRODUCTION

Thank you for choosing the Baby Brezza AirSwirl Waterless Baby Bottle Warmer. This device is designed to safely and evenly warm breastmilk and formula using hot air, eliminating the need for water and preventing bacteria or scale buildup. Please read this manual thoroughly before use to ensure proper operation and safety.

IMPORTANT SAFETY INFORMATION

- Read all instructions before using the warmer.
- Do not immerse the cord, plug, or the warmer unit in water or other liquids.
- Close supervision is necessary when any appliance is used near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- Use only accessories recommended by the manufacturer.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot liquids.
- Always check milk temperature before feeding baby.

PRODUCT OVERVIEW

The Baby Brezza AirSwirl Waterless Bottle Warmer utilizes hospital-grade waterless technology to warm bottles with hot air. This method prevents bacteria and mineral scale buildup, ensuring bottles are dry after warming. The device features a gentle rocking motion to ensure even warming and mixing, preventing hot spots in milk or formula.



Image: The Baby Brezza AirSwirl Waterless Bottle Warmer on a kitchen counter, showcasing its compact design.



Revolutionary Waterless Approach to Bottle Warming

- Uses hot air only – Hospital-grade technology avoids bacteria & scale
- Gently rocks bottle for even warming from top to bottom

Image: A diagram illustrating the hot air warming process inside the AirSwirl warmer, highlighting the waterless technology.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wipe the exterior of the warmer with a damp cloth. Do not immerse the unit in water.
3. **Placement:** Place the warmer on a flat, stable surface away from heat sources.
4. **Bottle Rings:** The warmer includes two rings to accommodate narrow neck and wide neck bottles. Select the appropriate ring for your bottle type and place it into the warming chamber. (Note: Excludes bottom-vented bottles).
5. **Power:** Plug the power cord into a standard electrical outlet.



Fits virtually all bottles

Placement rings for narrow and wide neck bottles (excludes bottom-vented bottles)

Image: The AirSwirl warmer displayed with different bottle sizes and brands, demonstrating its universal fit with included rings.

Setup Video Guide

Your browser does not support the video tag.

Video: Official Baby Brezza guide on how to set up and use the AirSwirl Waterless Bottle Warmer. This video demonstrates the initial setup steps and basic operation.

OPERATING INSTRUCTIONS


1. **Place Bottle:** Insert the prepared bottle (with milk or formula) into the warming chamber. Ensure the correct bottle ring is in place for a snug fit.
2. **Power On:** Press the power button to turn on the warmer. The LCD display will illuminate.
3. **Select Settings:** Use the up and down arrow buttons to adjust the warming time. The warming time should be selected based on the number of ounces, the milk's starting temperature (refrigerated or room temperature), and the bottle material (plastic, glass, or silicone). Refer to the warming guide in the packaging for recommended times.

4. **Start Warming:** Press the play/start button to begin the warming cycle. The warmer will initiate its gentle rocking motion and hot air warming. The LCD display will count down the remaining time.
5. **Completion:** Once the warming cycle is complete, the warmer will beep and automatically shut off. Carefully remove the bottle.
6. **Check Temperature:** Always test the milk temperature on your wrist before feeding to ensure it is safe for your baby.



New and improved buttons
Now easier than ever to use

Image: A close-up view of the AirSwirl's control panel, highlighting the new and improved gentle touch buttons for easy operation.

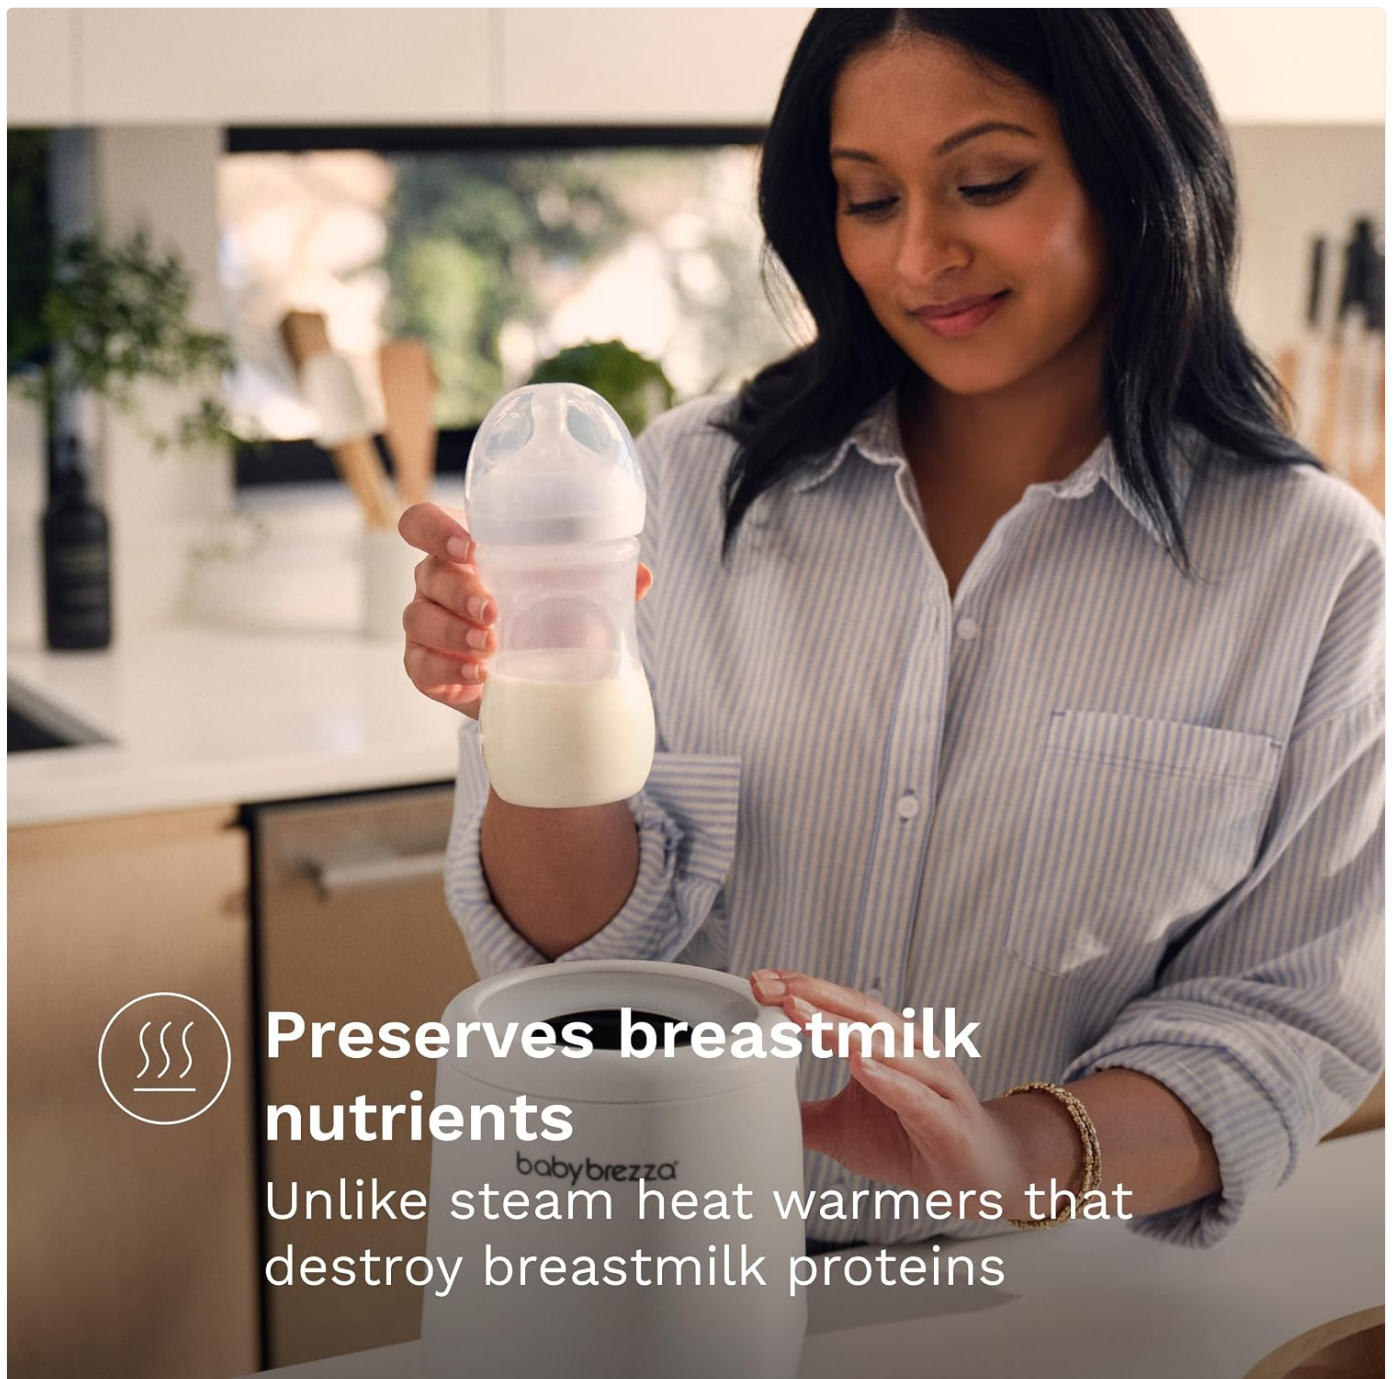

Preserves breastmilk nutrients

Unlike steam heat warmers that destroy breastmilk proteins

Image: A user placing a bottle into the AirSwirl warmer, demonstrating how bottles and hands remain dry due to the waterless warming method.

Operation Video Guide

Your browser does not support the video tag.

Video: An overview of the Baby Brezza AirSwirl Waterless Warmer in action, demonstrating its features and ease of use.

MAINTENANCE

The waterless design of the AirSwirl warmer significantly reduces maintenance requirements compared to traditional warmers. There is no water reservoir to clean, preventing bacteria and mineral scale buildup.

- **Cleaning:** Unplug the warmer before cleaning. Wipe the exterior and the inside of the warming chamber with a clean, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the warmer in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Warmer does not turn on.	Not plugged in; power outage; unit malfunction.	Ensure unit is securely plugged into a working outlet. Check household power. If problem persists, contact customer support.
Milk is not warm enough or too hot.	Incorrect warming time selected; bottle material not accounted for.	Refer to the warming guide for precise times based on ounces, milk temperature, and bottle material. Adjust warming time as needed.
Burning smell or unit becomes excessively hot.	Internal malfunction.	Immediately unplug the unit and discontinue use. Contact Baby Brezza customer support. This indicates a potential safety risk.
Display shows incorrect time increments or skips.	Software or button issue.	Ensure buttons are pressed firmly. If issue persists, contact customer support for assistance.
Bottle does not fit securely.	Incorrect bottle ring used or bottle type incompatible.	Ensure the correct narrow or wide neck ring is used. Note that bottom-vented bottles are not compatible.

SPECIFICATIONS

- **Model Number:** BRZ0105
- **Brand:** Baby Brezza
- **Color:** White
- **Warming Method:** Waterless hot air
- **Compatibility:** Most bottle brands and types (glass, silicone, plastic), excluding bottom-vented bottles. Includes narrow and wide neck rings.
- **Features:** Gentle rocking motion, precise temperature control, LCD display, auto shut-off.
- **UPC:** 886267008764

WARRANTY INFORMATION

The Baby Brezza AirSwirl Waterless Baby Bottle Warmer comes with a **1-year limited warranty**. This warranty is valid only if the product is shipped or used within the US. For specific terms and conditions, please refer to the warranty card included with your product or contact Baby Brezza customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue with your Baby Brezza AirSwirl Waterless Baby Bottle Warmer, please contact Baby Brezza customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question