

Comfyer BW01

Comfyer Portable Milk Warmer BW01 User Manual

Model: BW01 | Brand: Comfyer

1. INTRODUCTION

The Comfyer Portable Milk Warmer BW01 is designed to provide warm milk, formula, or water for your baby anytime, anywhere. Its wireless design, fast heating capabilities, and long-lasting battery make it ideal for travel, car use, and daily outings. This manual provides essential information for safe and effective operation of your device.

ENJOY A CUP OF WARM MILK/WATER ANYTIME AND ANYWHERE



Figure 1: Comfyer Portable Milk Warmer in various on-the-go settings.

2. SAFETY INFORMATION

- Always ensure the lid is securely closed to prevent leaks, especially during travel.

- Use only the provided quick charge adapter (20W or higher) for charging to prevent damage or incomplete charging.
- Do not immerse the main unit in water. Clean only the inner container and silicone parts as instructed.
- Keep out of reach of children when in use or charging.
- Do not use the preset time function if immediate heating is required, as the product will not heat until the scheduled time has elapsed.
- The inner container is made of SUS 316 stainless steel. Ensure no plastic components come into contact with milk or water during heating.

3. PRODUCT OVERVIEW

The Comfyer Portable Milk Warmer features a user-friendly design with an LED display and intuitive controls. It is constructed with high-quality, food-safe materials.

3.1 Components

- **Main Unit:** Contains the heating element, battery, and control panel.
- **Lid:** Features a flip-top design with a secure lock and a silicone handle for portability.
- **Inner Container:** Made of SUS 316 stainless steel for safety and durability.
- **Control Panel:** LED display for real-time temperature and battery levels, along with buttons for power, temperature setting, and preset timer.

3.2 Materials

The inner container is made from SUS 316 stainless steel, ensuring it is rust-resistant, food-safe, and odor-free. This eliminates concerns about plastic contact with your baby's milk or water.

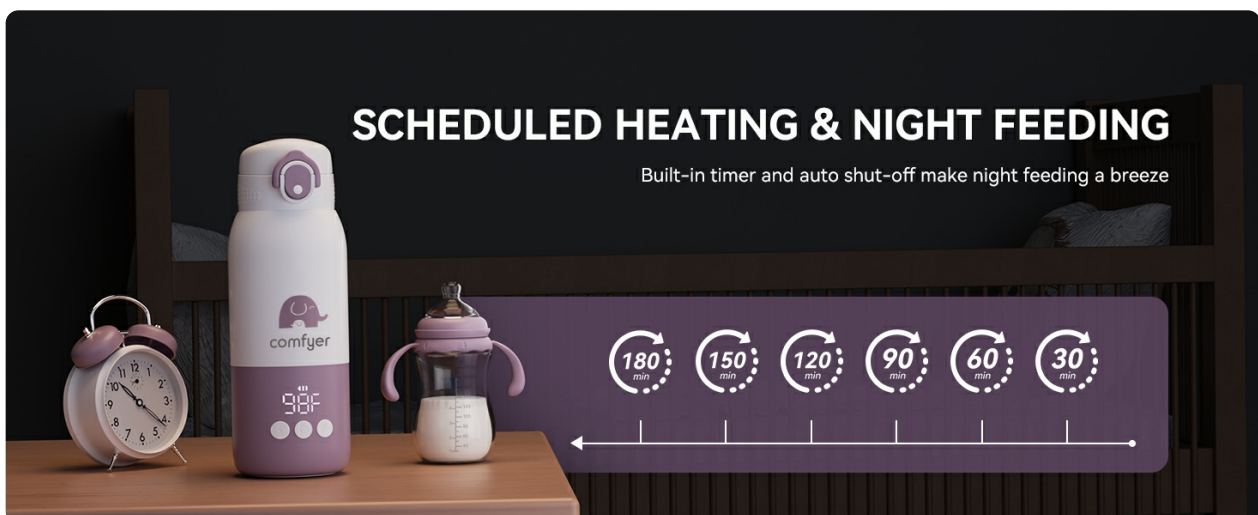


Figure 2: High-quality, safe materials used in the Comfyer Portable Milk Warmer.

4. WHAT'S IN THE BOX

Upon unpacking your Comfyer Portable Milk Warmer, please ensure all items are present:

- Portable Milk & Water Warmer (1)
- USB Cable Charger (1)
- User Manual (1)



Figure 3: Package contents of the Comfyer Portable Milk Warmer.

5. SETUP AND FIRST USE

5.1 Initial Cleaning

Before first use, separate the lid, silicone parts, and inner container. Wash all components that come into contact with milk or water using warm soapy water. Rinse thoroughly and allow to air dry completely to prevent mold growth.

5.2 Charging the Device

For the first use, fully charge the warmer. Connect the provided USB cable to the charging port on the device and a 20W or higher fast charging adapter. A full charge takes approximately 2-3 hours. The LED display will show battery levels.

Ours:

Fully charged in 2 hours, supporting
9-10 heating cycles

Others:

8000mAh 5-6 heating cycles



12000 mAh



Figure 4: Charging options for the portable milk warmer.

6. OPERATING INSTRUCTIONS

The Comfyer Portable Milk Warmer offers precise temperature control and convenient features for preparing your baby's meals.

6.1 Filling the Warmer

1. Open the flip-top lid by sliding the lock mechanism.
2. Pour the desired amount of water, breast milk, or formula into the SUS 316 stainless steel inner container. The capacity is 12 ounces (340ml).
3. Close the lid securely until it clicks, and slide the lock mechanism to the locked position.

6.2 Setting Temperature and Heating

The device features an LED display and control buttons for easy operation.



Figure 5: Display screen and controls.

1. Press the Power On/Off button to activate the device. The real-time temperature will be displayed.
2. Press the Temperature Setting button to cycle through the 5 available temperature options: 98°F, 104°F, 113°F, 122°F, 131°F.
3. The warmer will begin heating to your selected temperature. It can heat water to 104°F in approximately 2 minutes and refrigerated breast milk to 98°F in 4-5 minutes.
4. The real-time LED display shows the current temperature and battery levels.

WHAT'S IN THE BOX ?

Portable milk & water warmer * 1
USB cable charger * 1
User manual * 1



Figure 6: Fast and even heating capability.

6.3 Scheduled Time Feeding

The warmer includes 6 preset timer modes (30, 60, 90, 120, 150, 180 minutes) to preheat and insulate water or milk, saving you time based on your baby's feeding schedule.

1. After setting the desired temperature, press the Preset Timer button.
2. Select your preferred delay time. The warmer will activate and heat the contents after the selected time has elapsed.
3. The device features an auto shut-off function to prevent dry burning and ensure safety.



Figure 7: Preset timer for scheduled feeding.

6.4 Product Operation Video

Video 1: A demonstration of the Comfyer Portable Milk Warmer's operation and use, including filling, temperature setting, and general handling.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and extends the life of your milk warmer.

1. Open the cover and remove the silicone ring.

2. Add water and a mild detergent to the inner container. Use a soft brush or sponge to clean thoroughly.
3. Clean the silicone parts separately with warm soapy water.
4. Rinse all components with clean water and allow them to air dry completely before reassembling or storing.



Figure 8: Steps for cleaning the portable milk warmer.

8. TROUBLESHOOTING

- **Device not charging or charging slowly:** Ensure you are using a fast charging adapter of 20W or higher. Lower wattage adapters may not provide sufficient power for proper charging.
- **Device not heating immediately:** If the preset time function is activated, the product will not begin heating until the scheduled time has elapsed. To heat immediately, ensure the preset time function is not engaged.
- **Leakage:** Verify that the lid is securely closed and the lock mechanism is engaged. Check if the silicone ring is properly seated and free from damage.

9. SPECIFICATIONS

Feature	Detail
Product Dimensions	8 x 8 x 23 cm
Item Weight	789 g
Model Number	BW01
Battery Capacity	12000mAh
Heating Time (Water to 104°F)	Approx. 2 minutes
Heating Time (Refrigerated Milk to 98°F)	Approx. 4-5 minutes

Temperature Options	98°F, 104°F, 113°F, 122°F, 131°F
Charging Time	2-3 hours (with 20W+ adapter)
Temperature Maintenance	Up to 20 hours
Inner Container Material	SUS 316 Stainless Steel

10. WARRANTY AND SUPPORT

The Comfyer Portable Milk Warmer BW01 comes with a manufacturer's warranty. For detailed warranty information, product support, or to report any issues, please refer to the contact information provided in your product packaging or visit the official Comfyer website. Keep your purchase receipt for warranty claims.