

OSALADI 8P226147BM6CWY3HODM

OSALADI Earphone Adapter with Push-to-Talk Button

Model: 8P226147BM6CWY3HODM

1. INTRODUCTION

This manual provides instructions for the proper use and maintenance of your OSALADI Earphone Adapter. This wired acoustic tube earpiece with a push-to-talk (PTT) button is designed for clear communication with compatible 2-pin portable interphones and two-way radios, offering noise reduction and private conversations.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Push-to-Talk (PTT) Button:** Integrated button for easy communication activation.
- **Acoustic Tube Earpiece:** Provides clear sound transmission and discreet listening.
- **Noise Reduction:** Designed to offer comfortable use and effective noise reduction in various environments.
- **2-Pin Connector:** Compatible with most portable interphones and two-way radios featuring a 2-pin headphone connector.
- **Cable Clip:** Allows for secure attachment to clothing for convenience and stability.

2.2 Components

The OSALADI Earphone Adapter consists of the following main components:

1. **2-Pin Connector:** Connects to your radio device.
2. **Coiled Cable:** Provides flexibility and reduces tangling.
3. **Push-to-Talk (PTT) Button/Microphone Unit:** Contains the microphone and the button to transmit audio.
4. **Cable Clip:** Attaches to the PTT/microphone unit cable.
5. **Acoustic Tube:** Transparent tube that delivers sound to the ear.
6. **Earpiece:** Soft, comfortable earbud for the acoustic tube.



Image: Overview of the OSALADI Earphone Adapter components. This image displays the full length of the earphone adapter, highlighting the 2-pin connector, the coiled section of the cable, the PTT button with integrated microphone, the transparent acoustic tube, and the soft earpiece.



Image: OSALADI Earphone Adapter with approximate dimensions. The image shows the earphone adapter laid out, indicating a total length of approximately 31.4 inches (80 cm) and a diameter of 1.0 inch (2.5 cm) for the coiled section.


3. SETUP

1. **Connect to Radio:** Locate the 2-pin audio jack on your compatible two-way radio or interphone. Insert the 2-pin connector of the OSALADI earphone adapter firmly into the radio's jack. Ensure a secure connection for optimal audio performance.
2. **Wear the Earpiece:** Gently insert the soft earpiece into your ear. The acoustic tube is designed to be routed behind your ear for a discreet and comfortable fit.
3. **Position Microphone and PTT:** Position the PTT button and microphone unit in a convenient location, typically near your collar or lapel, where it is easily accessible for speaking and transmitting.
4. **Secure with Clip:** Use the integrated cable clip to attach the PTT/microphone unit cable to your clothing. This prevents the cable from snagging and keeps the unit stable during use.



1 Intercom Earphone

There is a clip on cable on the receiver

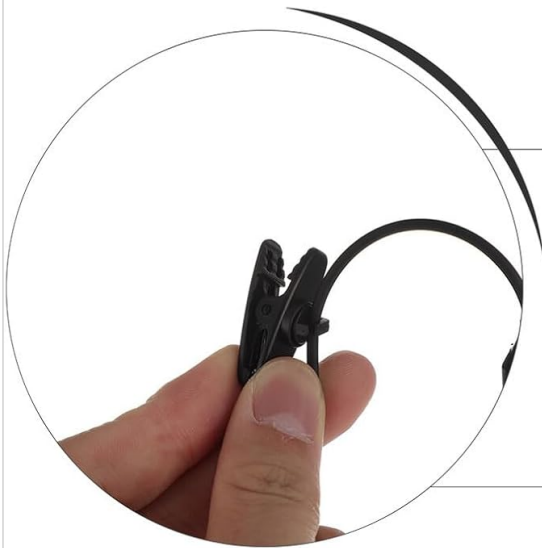

2 Intercom Headset

It's convenient for you to put it on your shirt

Image: Detail of the cable clip. This image shows a close-up of the black plastic clip attached to the earphone cable, designed for securing the cable to clothing.

4. OPERATING INSTRUCTIONS

1. **Listening:** Once connected, audio from your radio will be transmitted directly to your ear via the acoustic tube. Adjust the volume on your radio device as needed.
2. **Transmitting (Push-to-Talk):** To speak, press and hold the PTT button. Speak clearly into the microphone located on the PTT unit. Release the PTT button when you have finished speaking to return to listening mode.



Image: Example of earphone adapter in use. A person is shown holding a two-way radio, with the OSALADI earphone adapter connected and the earpiece worn, demonstrating typical usage.

5. MAINTENANCE

- **Cleaning:** Wipe the exterior of the earphone adapter, including the PTT unit and cables, with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Earpiece Hygiene:** For hygiene, regularly clean or replace the soft earpiece.
- **Storage:** Store the earphone adapter in a clean, dry place away from direct sunlight and extreme temperatures when not in use. Avoid tightly coiling the cables to prevent damage.
- **Inspection:** Periodically inspect the cables and connectors for any signs of wear or damage.

6. TROUBLESHOOTING

- **No Sound:**
 - Ensure the 2-pin connector is fully inserted into the radio's jack.
 - Check the radio's volume level.
 - Verify that the radio itself is functioning correctly.

• **Unclear/Distorted Sound:**

- Ensure the earpiece is properly seated in your ear.
- Check for any kinks or blockages in the acoustic tube.
- Adjust the radio's volume.

• **PTT Button Not Transmitting:**

- Confirm the earphone adapter is securely connected to the radio.
- Ensure the radio is powered on and in a transmitting-ready state.
- Speak directly into the microphone while holding the PTT button.

7. SPECIFICATIONS

Brand	OSALADI
Model Number	8P226147BM6CWY3HODM
Connectivity Technology	Wired
Form Factor	In-ear
Product Dimensions	Approximately 80 x 2.5 x 0.8 cm (31.4 x 1.0 x 0.31 inches)
Components Included	1 set x headset
Compatibility	Most portable interphones with 2-pin headphone connector

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official OSALADI website. Keep your proof of purchase for any warranty claims.