

[Manuals.plus](#) /

> [Caressolove](#) /

> Caressolove Automatic Scalpel Pocket Knife User Manual (Model HST-KNIFE-251022-2)

Caressolove HST-KNIFE-251022-2

Caressolove Automatic Scalpel Pocket Knife User Manual

Model: HST-KNIFE-251022-2

1. INTRODUCTION

Thank you for choosing the Caressolove Automatic Scalpel Pocket Knife. This manual provides essential information for the safe and effective use, maintenance, and care of your new tool. Please read this manual thoroughly before operation and retain it for future reference.



Image 1.1: Caressolove Automatic Scalpel Pocket Knife (Black variant) with its packaging.

2. PRODUCT FEATURES

- **Durable Construction:** Crafted from aluminum alloy using micro-technology (CNC) for a sturdy and practical design.
- **Automatic Retraction Mechanism:** Features a double-action quick-release technology, allowing the blade to extend and retract smoothly with a push-button action.
- **Replaceable Scalpel Blades:** Comes with 5 sterile #60 surgical blades. The blade holder is designed for easy disassembly and secure fixation. Compatible with #23, #24, and #60 scalpel blades.
- **Everyday Carry (EDC) Design:** Portable and lightweight (1.6 oz, 3.85 inches closed) with a pocket clip and keychain hole for convenient carrying.
- **Enhanced Grip:** The anodized aluminum handle features a scored surface for improved gripping.



Double Action Push Button

Our scalpel knife is equipped with an dual action mechanism that can be quickly extended and retracted with just a press of a switch button, while maintaining excellent functionality.

Image 2.1: Close-up of the double-action push button mechanism for blade deployment and retraction.



Pocket Clip

The pocket utility knife is good for everyday carry with a pocket clip. Making it an essential EDC tool for utility tasks and emergencies project. Compact size and lightweight, only 1.6oz and measuring 3.85 inches once closed. Perfect for all utility tasks, easy to cut box, package, rope and craft work.

Image 2.2: View of the integrated pocket clip and keychain hole for convenient carry.

3. SETUP: BLADE INSTALLATION AND REPLACEMENT

The Caressolove Automatic Scalpel Pocket Knife uses replaceable #60 surgical blades (compatible with #23 and #24). Always handle blades with extreme caution.

1. **Safety First:** Ensure the knife is in the fully retracted (closed) position before attempting to remove or install a blade.
2. **Blade Removal:** Using a pair of pliers or tweezers, carefully grip the base of the existing blade. Gently pull the blade upwards and away from the blade holder until it detaches. Dispose of used blades safely in a sharps container.
3. **Blade Installation:** Align the new #60 scalpel blade with the slot in the blade holder. Carefully push the blade down into the holder until it clicks securely into place. Ensure the blade is firmly seated and does not wobble.
4. **Verification:** After installation, gently test the blade's security by attempting to wiggle it. If it moves, re-seat the blade.



Image 3.1: Illustration of the blade replacement process, showing a #60 scalpel blade and the knife's blade holder.

WARNING: Blades are extremely sharp. Always use appropriate protective gear, such as cut-resistant gloves, when handling blades. Keep out of reach of children.

4. OPERATING INSTRUCTIONS

The automatic mechanism allows for quick and easy blade deployment and retraction.

1. **Deploying the Blade:** Locate the push button on the side of the knife handle. Push the button forward firmly until the blade fully extends and locks into place.
2. **Retracting the Blade:** To retract the blade, pull the push button backward firmly until the blade fully retracts into the handle.
3. **Usage:** This knife is designed for utility tasks such as cutting paper, cardboard, plastic, cartons, leather, PVC, foam, rope, and for craft work. Avoid using it for prying, stabbing, or any task that could damage the blade or mechanism.

CAUTION: Always ensure the blade is fully deployed or fully retracted before and after use. Never attempt to force the

blade if it encounters resistance.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Caressolove Automatic Scalpel Pocket Knife.

- **Cleaning:** The manufacturer recommends **hand washing only**. After use, especially with corrosive materials, clean the blade and handle with a damp cloth. Ensure all parts are dry before storage.
- **Lubrication:** Periodically apply a small amount of light machine oil to the blade channel and moving parts of the automatic mechanism to ensure smooth operation.
- **Storage:** Store the knife in a dry place with the blade fully retracted. Keep it out of reach of children and unauthorized users.
- **Blade Sharpness:** Replace blades as soon as they become dull to maintain cutting efficiency and safety.

6. TROUBLESHOOTING

If you encounter issues with your knife, consider the following:

- **Blade Not Deploying/Retracting Smoothly:**
 - Check for debris in the blade channel. Clean thoroughly.
 - Apply a small amount of lubricant to the mechanism.
 - Ensure the blade is correctly installed and not bent or damaged.
- **Blade Wobbles:**
 - Re-seat the blade to ensure it is securely locked into the holder.
 - If the blade is damaged, replace it with a new one.
- **Blade Safety Mechanism Engages (Blade stops mid-deployment):**
 - This is a safety feature. If the blade hits an obstruction during deployment, it may disengage. Simply pull the blade out manually until it locks back into place, then retract and redeploy.

If problems persist, contact Caressolove customer support for assistance.

7. SPECIFICATIONS

Brand	Caressolove
Model Name	Automatic Scalpel Pocket Knife
Model Number	HST-KNIFE-251022-2
Handle Material	Aluminum
Blade Material	Carbon Steel
Blade Type	#60 Scalpel Blade (Compatible with #23, #24)
Included Blades	5 PCS #60 Scalpel Blades
Blade Length	2.56 Inches (6.5 cm)

Item Length (Closed)	3.85 Inches (9.8 cm)
Item Length (Open)	6.46 Inches (16.4 cm)
Item Weight	1.6 oz (43 Grams)
Special Features	Replaceable Blades, Spring Assist, Pocket Clip, Keychain Hole
Recommended Uses	Camping, Emergency, Fishing, Hiking, Utility, Box Cutting, Craft Work
Power Source	Hand-powered
Hand Orientation	Ambidextrous
Product Care	Hand Wash Only

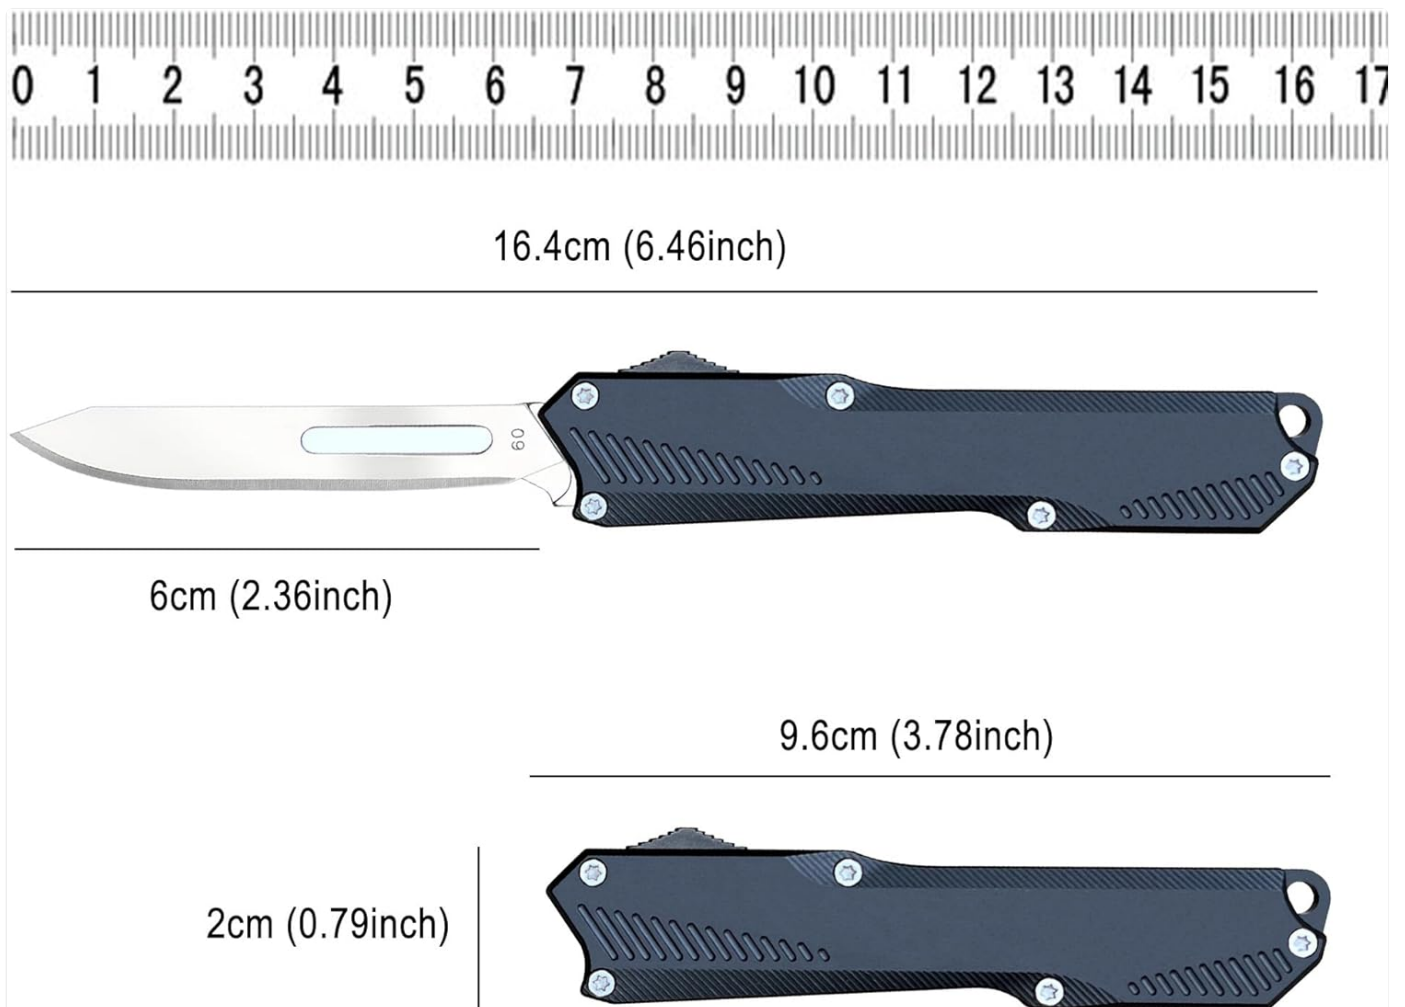


Image 7.1: Dimensions of the Caressolove Automatic Scalpel Pocket Knife.

8. SAFETY INFORMATION

- Always keep the blade retracted when not in use.
- Store the knife in a secure location, out of reach of children and pets.
- Exercise extreme caution when handling the sharp blade.
- Do not use the knife for purposes other than its intended utility.
- Never point the knife at yourself or others.

- Wear appropriate hand protection (e.g., cut-resistant gloves) when changing blades.
- Dispose of used blades responsibly in a designated sharps container.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact Caressolove directly through their official channels. Keep your purchase receipt as proof of purchase.

