

[Manuals.plus](#) /

› [Comfyer](#) /

› Comfyer BW02 Portable Bottle Warmer User Manual

Comfyer BW02

Comfyer BW02 Portable Bottle Warmer User Manual

Model: BW02 | Brand: Comfyer

INTRODUCTION

The Comfyer BW02 Portable Bottle Warmer is designed to provide warm milk or water for your baby conveniently and safely, whether at home or on the go. This device features a large capacity, rapid heating, and an integrated sterilization function to ensure hygiene. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

PERCHÉ SCEGLIERE COMFYER?

			
Sterilizzazione Integrata	×	Autosterilizzazione	×
Capacità	300ml	500ml	300ml
Tempo di riscaldamento 120ml di latte freddo a 40°C	5-6Min	2M40S	5-6Min
Potenza	80W	120W	60W
Selezione modalità	Latte caldo	Latte o acqua calda	Latte caldo
Memoria intelligente	×	✓	×
Sicurezza	Non completamente	Certificato senza BPA	Non completamente

Image: The Comfyer BW02 bottle warmer in a family outdoor setting, highlighting its portability.

SETUP

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed below are present and undamaged:

- Comfyer BW02 Portable Bottle Warmer x1

- USB Charging Cable x1
- User Manual x1

COSA C'È NELLA SCATOLA?

- Scaldabiberon e Acqua Portatilex1
- Cavo USBx1
- Manuale Utentex1



Image: The package contents, showing the bottle warmer, USB cable, and user manual.

2. Initial Cleaning

Before first use, clean the internal stainless steel container and all removable parts with warm water and mild soap. Rinse thoroughly and allow to air dry. Do not immerse the main unit in water.

3. Charging the Device

Connect the provided USB charging cable to the Type-C port on the device and to a suitable USB power adapter (not included). The battery indicator on the display will show charging progress. A full charge (from 0%) takes approximately 2 hours with a 45W charger. Ensure the device is fully charged before its first use for optimal performance.

OPERATING INSTRUCTIONS

1. Filling the Container

Open the lid and pour the desired amount of milk or water into the stainless steel container. The container has a 500ml capacity. Ensure the liquid level does not exceed the maximum fill line.

2. Power On/Off and Mode Selection

Press and hold the power button to turn the device on or off. The display will illuminate. The device features separate buttons for 'Heat Water' and 'Heat Milk' modes for intuitive operation.



Image: An overview of the control panel, indicating buttons for auto-sterilization, heat milk, heat water, power, battery level, and real-time temperature display.

3. Temperature Settings

The device offers 5 precise temperature settings: 37°C, 40°C, 45°C, 50°C, and 55°C. Select the desired temperature using the dedicated temperature control buttons. The device will remember the last temperature setting used for convenience.




Image: The bottle warmer in a nighttime setting, illustrating its intelligent memory for temperature settings.

4. Heating Process

Once the liquid is added and the temperature is set, press the appropriate heating button (milk or water). The device will rapidly heat the liquid. For example, it heats water to 40°C in approximately 2.5 minutes. The display will show the real-time temperature.

DOPPIA MODALITÀ (LATTE & ACQUA)

Riscaldamento rapido senza perdita di nutrienti.
Senza bruciatura sul fondo del biberon.

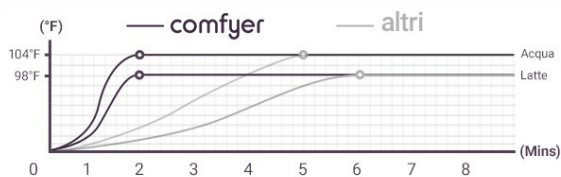

Riscalda **120ml** di
acqua in soli **2 min**

Per preparare il latte artificiale



Riscalda **60ml** di latte
freddo in soli **2 min**

Riscaldamento
Scientifico del Latte



Image: Dual heating modes for milk and water, showing rapid heating without nutrient loss and no scorching.

5. Sterilization Mode

To sterilize the internal container, ensure it is empty and clean. Activate the sterilization mode. The device will heat the interior to 75°C for 60 seconds to disinfect it. This helps maintain a germ-free environment for your baby's milk or water.

	BW02	BW01
Dimensioni	89*89*235mm	80*80*230mm
Capacità del biberon	500ML	340ML
Capacità della batteria	16000mAh	12000mAh
Riscalda latte e acqua	Pulsante integrato	Bouton intégré
Peso	800g	620g
Sterilizzazione integrata?	Sì	Non
Tempo di riscaldamento	2m 20s	2m 10s
Funzione di prenotazione	No	Oui
Diametro dell'apertura del biberon	7.5cm	5.2cm
Scala interna	Sì	Non
Approvato per il volo	No	Oui

Image: The auto-sterilization feature, showing the internal container being disinfected at 75°C.

6. Automatic Shut-off

The device is equipped with an automatic shut-off feature. After reaching the set temperature, it will maintain the warmth for 20 minutes and then automatically power off to conserve energy and prevent overheating.

MAINTENANCE

1. Daily Cleaning

After each use, empty any remaining liquid. Disassemble the lid and remove the silicone ring. Wash the internal stainless steel container, lid, and silicone ring with warm water and mild, baby-safe detergent. Use a soft brush to clean the interior thoroughly. Rinse all parts well and allow them to air dry completely before reassembling or storing.

COME PULIRE?



1
Aprire il coperchio e rimuovere l'anello in silicone.



2
Aggiungere acqua e detergente per spazzolarlo.



3
Pulire le parti in silicone.

Image: Step-by-step guide on cleaning the bottle warmer, including disassembling the lid, scrubbing the interior, and cleaning silicone parts.

2. Descaling

Over time, mineral deposits may accumulate inside the heating plate. To descale, fill the container with a mixture of water and white vinegar (1:1 ratio) or a commercial descaling solution. Let it soak for 30 minutes to an hour, then heat the solution for a few minutes. Pour out the solution, rinse thoroughly several times with clean water, and wipe dry. Perform descaling regularly, depending on water hardness and frequency of use.

3. Storage

Store the bottle warmer in a clean, dry place away from direct sunlight and extreme temperatures. Ensure all parts are completely dry before storage to prevent mold or mildew growth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on	Low battery; Device not charged	Charge the device fully using the provided USB cable.
E3 error displayed	Dry-run protection activated (no liquid in container)	Turn off the device, add liquid, and restart. Ensure there is always liquid when heating.
Liquid not heating or heating slowly	Insufficient battery; Lid not closed properly; Too much liquid	Ensure the device is fully charged. Close the lid securely. Reduce the amount of liquid if it exceeds the maximum line.
Leakage from the device	Lid not properly sealed; Silicone ring misplaced or damaged	Ensure the lid is tightly closed. Check if the silicone ring is correctly seated and undamaged. Replace if necessary.

SPECIFICATIONS

- **Model:** BW02
- **Dimensions:** 8.9 x 8.9 x 23.5 cm
- **Weight:** 980 grams
- **Capacity:** 500 ml

- **Battery:** 16000 mAh Lithium Polymer (included)
- **Material:** SUS 316 Medical-grade Stainless Steel (inner), SUS 304 (outer), BPA-free
- **Charging:** Type-C USB, 45W fast charging
- **Temperature Settings:** 37°C / 40°C / 45°C / 50°C / 55°C
- **Heating Time:** Approx. 2.5 minutes to heat water to 40°C (for 150ml)
- **Sterilization Temperature:** 75°C for 60 seconds
- **Maintenance:** Hand wash recommended



IDEA REGALO PER UN DOLCE BABY SHOWER

Regala questo scaldabiberon premium in tonalità eleganti — un gesto pratico che mantiene il latte del bambino alla temperatura perfetta e dimostra la tua cura fin dalla prima poppata.

Image: Close-up of the interior, emphasizing the SUS 316 stainless steel for safety and durability.



Image: Various design elements including the flip-top for one-hand use, integrated handle, food-grade materials, and Type-C charging port.

WARRANTY INFORMATION

The Comfyer BW02 Portable Bottle Warmer comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging or visit the official Comfyer website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, technical assistance, or support regarding your Comfyer BW02 Portable Bottle Warmer, please contact our

customer service team. You can find contact information on the official Comfyer website or through the retailer where you purchased the product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question