

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Okin](#) /

> [Okin Overbed Bedside Table with Wheels \(Model: OKPM50502716WAS\) Instruction Manual](#)

Okin OKPM50502716WAS

Okin Overbed Bedside Table with Wheels

MODEL: OKPM50502716WAS

1. Introduction

This manual provides instructions for the assembly, operation, and maintenance of your Okin Overbed Bedside Table with Wheels, Model OKPM50502716WAS. This versatile table is designed for various uses, including reading, writing, eating, or using a laptop, and features adjustable height and a tilting desktop for ergonomic comfort.

15 Minutes Quick Installation

All accessories and detailed assembly instructions



Image 1.1: The Okin Overbed Table is suitable for various scenarios, including use over a bed, next to a couch, or with a chair.

2. Safety Information

- **Maximum Load Capacity:** Do not exceed the maximum static load capacity of **22 lbs (10 kg)** on the desktop. Overloading can cause instability and damage.
- **Stability:** Ensure the table is placed on a flat, stable surface. Lock the wheels when the table is in a stationary position to prevent unintended movement.
- **Tilting Section:** When the desktop is tilted, ensure items placed on it are secure and will not slide off. Avoid placing heavy or fragile items on the tilting section when it is not flat.
- **Liquids:** Exercise caution when placing beverages on the table, especially near electronic devices. Use the integrated cup holder for added security.

- **Assembly:** Follow all assembly instructions carefully. Ensure all screws and fasteners are tightened securely before use.
- **Children:** Keep children away from the table during assembly and adjustment to prevent injury.



Image 2.1: The H-base design provides stability, supporting up to 22 lbs (10 kg) of weight. Always adhere to the maximum load capacity.

3. Package Contents

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Desktop with tilting mechanism and cup holder
- Main Support Column (with pneumatic lifting system)
- Base Frame
- Hidden Wheels (pre-installed or to be installed)
- Assembly Guide
- Installation Tool (Hex key/Wrench)

4. Assembly Instructions

Assembly typically takes approximately 15 minutes. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Main Support Column to Base:** Secure the main support column to the base frame using the provided screws and installation tool. Ensure it is firmly attached.
3. **Attach Desktop to Main Support Column:** Connect the desktop assembly to the top of the main support column. Align the mounting points and secure with the provided fasteners.
4. **Check Stability:** Once assembled, gently shake the table to ensure all connections are secure and the table is stable.

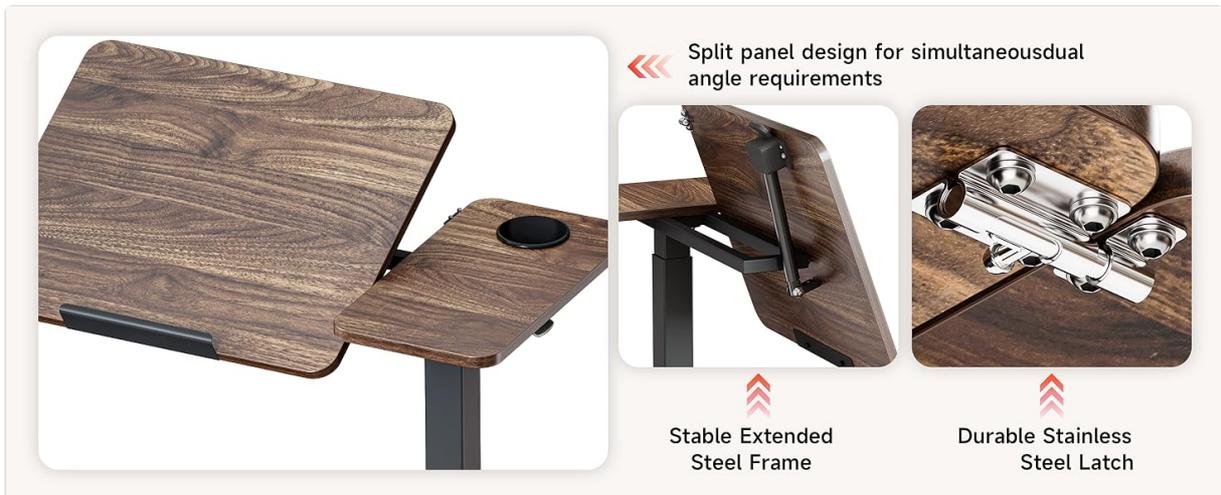


Image 4.1: Visual guide illustrating the quick installation process, typically completed within 15 minutes.

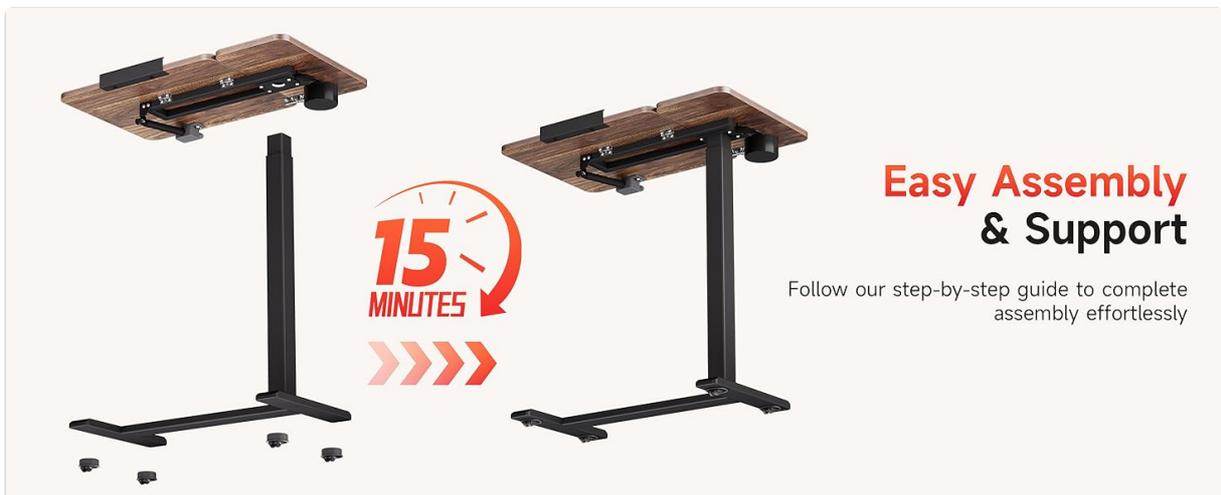


Image 4.2: An exploded view of the table components, demonstrating how they fit together for assembly.

5. Operating Instructions

5.1. Height Adjustment

The table features a gas spring pneumatic lifting system for smooth and quiet height adjustment. To adjust the height:

1. Locate the height adjustment lever, typically found under the desktop.
2. Press and hold the lever.

3. Gently raise or lower the desktop to your desired height (range: 29.7 to 43.3 inches).
4. Release the lever to lock the desktop in place.



Image 5.1: The pneumatic lift system allows for easy and smooth height adjustments, accommodating both sitting and standing postures.

5.2. Desktop Tilt Function

The desktop is designed with a split surface: a larger section that tilts and a smaller fixed section with a cup holder. The tilting section can be adjusted from 0° to 70°.

1. To tilt the desktop, locate the adjustment mechanism (usually a lever or knob) underneath the tilting section.
2. Engage the mechanism to unlock the tilt.
3. Adjust the tilting section to your desired angle. An anti-slip edge is present to prevent items from sliding off.
4. Release the mechanism to lock the tilt in place.
5. The smaller, fixed section remains flat, providing a stable surface for drinks or other items.

Overbed Table **Right Side Use**



Image 5.2: The desktop can be tilted to various angles (0-70 degrees) for comfortable reading or laptop use, with a fixed section for beverages.



Image 5.3: The table features a movable desktop that tilts and a fixed desktop section to keep items steady and secure.

5.3. Mobility

The table is equipped with hidden wheels for easy movement. The low-profile base (1.57 inches high) allows it to slide under most beds and furniture.

1. To move the table, ensure the wheels are unlocked (if applicable).
2. Gently push or pull the table to its desired location.
3. Once positioned, lock the wheels to prevent accidental movement.

Suitable for Various Scenarios



Image 5.4: The table features hidden casters for smooth movement, allowing it to easily slide under furniture.

6. Maintenance

- **Cleaning:** Wipe the tabletop and frame with a dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or harsh chemicals.
- **Regular Checks:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary to maintain stability.
- **Wheel Care:** Keep the wheels free of dust and debris to ensure smooth movement.

7. Troubleshooting

- **Table Wobbles:**
Solution: Ensure all assembly screws are securely tightened. Verify the table is on a level surface.
- **Difficulty Adjusting Height:**
Solution: Check if the height adjustment lever is fully engaged or disengaged. Ensure there are no obstructions in the pneumatic lifting mechanism.
- **Desktop Not Tilting Smoothly:**
Solution: Inspect the tilting mechanism for any obstructions or debris. Ensure the locking mechanism

is fully disengaged before attempting to tilt.

- **Wheels Not Rolling:**

Solution: Check if the wheels are locked. Clean any hair or debris that may be caught in the wheel casters.

8. Specifications



Image 8.1: Detailed dimensions and weight capacity of the Okin Overbed Table.

Feature	Detail
Model Number	OKPM50502716WAS

Feature	Detail
Product Dimensions (D x W x H)	27.6" x 15.8" x 29.7" (minimum height)
Adjustable Height Range	29.7" to 43.3"
Desktop Tilt Range	0° to 70°
Maximum Static Load Capacity	22 lbs (10 kg)
Item Weight	23.4 Pounds
Frame Material	Alloy Steel
Top Material	Wood
Base Height	1.57 inches
Included Components	Assembly Guide, Installation Tool
Product Care Instructions	Wipe with Dry Cloth

9. Warranty and Support

Okin is committed to customer satisfaction. While specific warranty details are not provided in this manual, we offer 24-hour customer service for any pre- or post-purchase issues.

For assistance, please contact us via the Amazon Message Center. Your satisfaction is our priority.