



[Manuals.plus](#) /

› [WELLFOR](#) /

› WELLFOR 44x36 Inch Bathroom Medicine Cabinet with Mirror - Installation and User Manual

## WELLFOR ROSA1636MC-LR+RS1236MC+ROSA1636MC

# WELLFOR 44" x 36" Bathroom Medicine Cabinet with Mirror

Model: ROSA1636MC-LR+RS1236MC+ROSA1636MC

## INTRODUCTION

---

Thank you for choosing the WELLFOR 44" x 36" Bathroom Medicine Cabinet. This manual provides detailed instructions for safe installation, operation, and maintenance of your new cabinet. Please read all instructions carefully before beginning installation and retain this manual for future reference.

## SAFETY INFORMATION

---

- Always wear appropriate safety gear, including safety glasses, during installation.
- Ensure the mounting surface is structurally sound and can support the weight of the cabinet and its contents.
- Handle glass components with care to prevent breakage and injury.
- Keep children and pets away from the installation area.
- If you are unsure about any part of the installation process, consult a qualified professional.

## PACKAGE CONTENTS

---

The WELLFOR 44" x 36" Bathroom Medicine Cabinet is shipped in three separate packages. Please verify all components are present before beginning assembly.



Figure 1: The medicine cabinet components are delivered in three separate boxes.

Each package contains parts for the complete unit, which includes two 16"x36" mirrored cabinets and one 12"x36" open storage mirror cabinet. All necessary hardware and a detailed installation guide are included.

## SPECIFICATIONS

Feature	Detail
Overall Dimensions (Wall-Mount)	44" (W) x 36" (H) x 4.81" (D)
Recessed Cutout Dimensions	43.5" (W) x 35.5" (H) x 3.81" (D)
Material	Anodized Chrome Aluminum
Hinges	Blum Soft-Close Hinges

Feature	Detail
Shelves	Adjustable 8mm Ultra-Clear Tempered Glass Shelves, Fixed Aluminum Shelves
Weight Capacity (per shelf)	Up to 35 lbs
Installation Type	Surface Mount or Recessed Mount
Number of Doors	2 (mirrored cabinets)
Door Opening Angle	100 degrees maximum
UPC	732265895373



Figure 2: Detailed dimensions for surface mount and recessed cutout.

## INSTALLATION

## Choosing Installation Method: Surface Mount or Recessed Mount

This medicine cabinet offers flexibility for either surface (wall-mounted) or recessed installation. A surface mount kit is included. Review the dimensions in the specifications section to ensure proper fit for your chosen method.

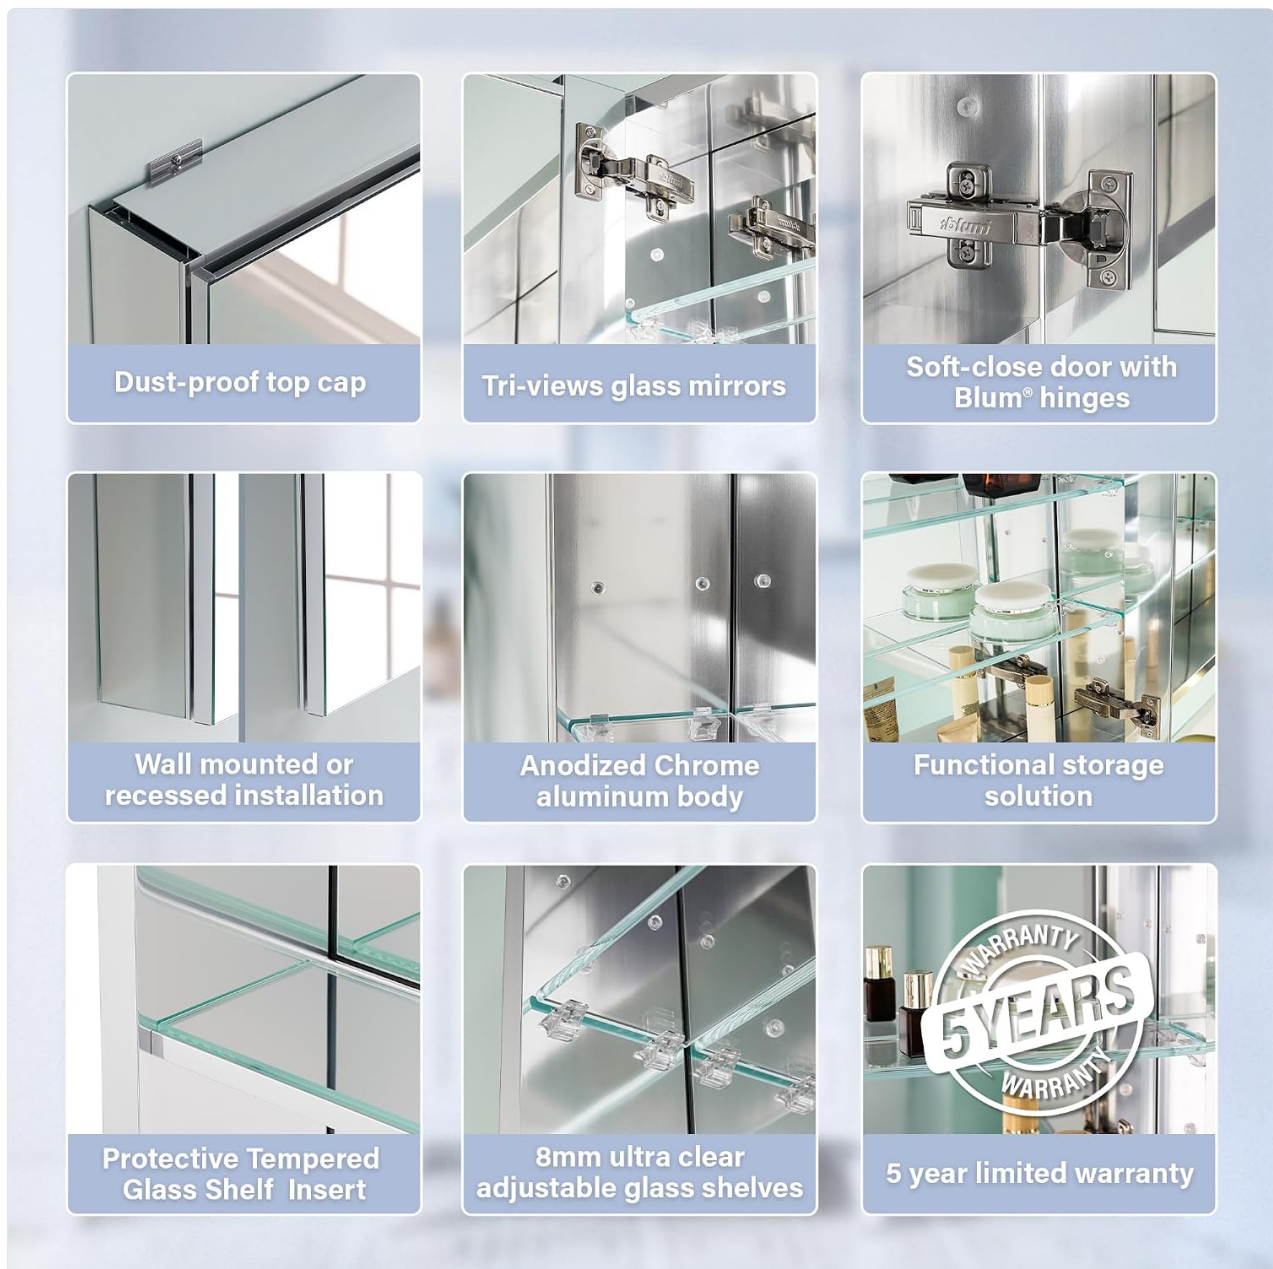


Figure 3: Comparison of Wall-Mount and Recessed-Mount installations.

## Reversible Door Design

The mirrored cabinet doors can be configured to open from either the left or the right, adapting to your bathroom layout and personal preference. This flexibility is determined during the assembly process.



Copper-free Glass Mirror



Austria Blum Soft-close Hinges



8mm Ultra Clear  
Adjustable Glass Shelves



Mirrored Back Panel Design

Figure 4: Versatile door opening design adaptable to any bathroom layout.

### General Installation Steps (Refer to included manual for detailed steps):

1. **Prepare the Wall:** For recessed mounting, create a cutout in the wall according to the specified dimensions. For surface mounting, mark the drilling points.
2. **Assemble the Cabinet:** Follow the instructions to assemble the three cabinet units. Decide on the door opening direction for the mirrored cabinets during this step.
3. **Mount the Cabinet:** Securely attach the cabinet to the wall using the provided hardware. Ensure it is level and stable.
4. **Install Shelves:** Insert the adjustable glass shelves into the desired positions.
5. **Attach Side Mirrors (Surface Mount):** If surface mounting, attach the removable side mirrored panels for a finished look.

Your browser does not support the video tag.

Video 1: Overview of the WELLFOR ROSA medicine cabinet, demonstrating its features and potential installation.

### Adjustable Glass Shelves

The cabinet includes 8mm ultra-clear adjustable glass shelves. To adjust, carefully lift the shelf, reposition the shelf clips to the desired height, and then place the shelf back onto the clips. Ensure clips are securely seated before placing items on the shelf.

## Versatile Door Opening Design Adaptable to Any Bathroom Layout

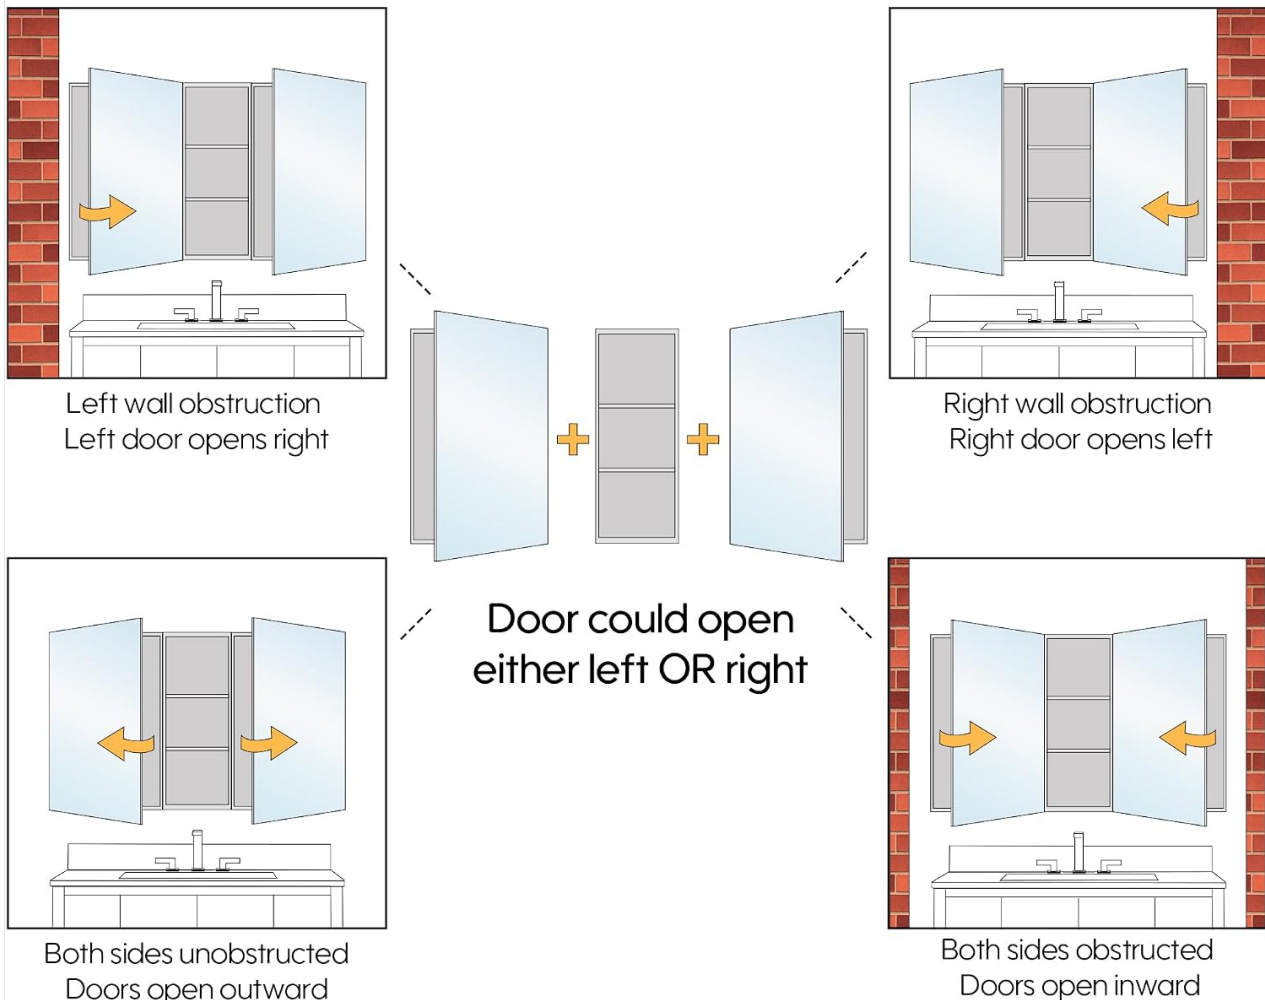


Figure 5: Protective tempered glass shelf insert.

### Soft-Close Doors

Equipped with premium Blum soft-close hinges, the cabinet doors will close gently and silently. Avoid forcing the doors shut, as the soft-close mechanism is designed for smooth operation.



Figure 6: Blum soft-close hinges ensure quiet operation.

### 100-Degree Opening Angle

The doors offer a maximum opening angle of 100 degrees, providing easy access to the cabinet's contents.

# Combination Set



## Delivered in Three Boxes

Note: Three boxes may arrive separately



Figure 7: Doors open to a 100-degree angle for full access.

Your browser does not support the video tag.

Video 2: Demonstration of the soft-close hinges and storage capacity of the medicine cabinet.

## MAINTENANCE

---

To ensure the longevity and appearance of your WELLFOR medicine cabinet, follow these maintenance guidelines:

- **Cleaning the Mirror and Aluminum Surfaces:** Use a soft, damp cloth and a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive materials that can scratch the mirror or damage the aluminum finish.
- **Cleaning Glass Shelves:** Remove shelves and clean with glass cleaner. Ensure they are dry before reinserting.
- **Hinge Maintenance:** The Blum soft-close hinges are designed for durability and typically require no maintenance. If any issues arise, refer to the troubleshooting section or contact support.

- **Removable Side Mirrored Panels:** For surface mount installations, the side panels can be removed for easier cleaning or if you wish to change the aesthetic.



Figure 8: Removable side mirrored panels for easy cleaning.

## TROUBLESHOOTING

If you encounter any issues with your medicine cabinet, please refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Doors do not close softly.	Hinges may be obstructed or damaged.	Check for any obstructions. Ensure hinges are clean and free of debris. If damaged, contact customer support for replacement parts.

Problem	Possible Cause	Solution
Cabinet appears uneven after installation.	Improper leveling during installation.	Re-check the level of the cabinet and adjust mounting hardware as needed. Ensure all screws are tightened securely.
Shelves are wobbly.	Shelf clips not properly seated.	Ensure all four shelf clips are fully inserted into the cabinet holes and the shelf rests evenly on them.

Your browser does not support the video tag.

Video 3: A general overview of the WELLFOR ROSA bathroom medicine cabinet, showcasing its design and functionality.

## WARRANTY AND SUPPORT

This WELLFOR medicine cabinet comes with a **5-year limited warranty** against manufacturing defects. Please retain your proof of purchase for warranty claims.



Figure 9: The product includes a 5-year limited warranty.

For technical assistance, replacement parts, or warranty inquiries, please contact WELLFOR customer support through the retailer where the product was purchased or visit the official WELLFOR website.