

[Manuals.plus](#) /

› [OLIXIS](#) /

› OLIXIS Criss Cross Office Chair with Wheels (Model CH-7295BKN) - User Manual

## OLIXIS CH-7295BKN

# OLIXIS Criss Cross Office Chair with Wheels (Model CH-7295BKN) - User Manual

Brand: OLIXIS | Model: CH-7295BKN

## 1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your OLIXIS Criss Cross Office Chair with Wheels. Please read all instructions carefully before use and retain this manual for future reference.

### Safety Warning:

Do not use this chair as a stationary chair without engaging the wheels. Exceeding the maximum weight limit of 300 lbs may cause instability or damage to the chair.

## 2. PRODUCT OVERVIEW

The OLIXIS Criss Cross Office Chair is designed for comfort and versatility in various settings, including home offices, vanity areas, and study rooms. Key features include:

- **360° Swivel & Smooth Rolling:** Allows for easy movement and rotation across your workspace.
- **Elegant PU Leather & Ergonomic Comfort:** Constructed with premium PU leather and high-density foam for durability and support. Features an ergonomic U-shaped cushion and supportive backrest to reduce hip and lower back strain.
- **Spacious Seat for Cross-Leg Sitting:** A wide 26.8" x 26.8" seat provides ample space to sit cross-legged or adjust positions.
- **Adjustable Height & Recline:** Customize seat height from 34.8"–37.8" and recline the backrest up to 22° for personalized comfort.
- **Stable Heavy-Duty Base:** Supported by a sturdy criss-cross metal frame, capable of holding up to 300 lbs for stability.



Figure 2.1: OLIXIS Criss Cross Office Chair (Black Leather with Wheels)



Figure 2.2: Ergonomic and High-End Design Features

### 3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- **(A) Seat Cushion:** 1 piece
- **(B) Backrest:** 1 piece
- **(C) Mechanism Plate:** 1 piece (with height adjustment lever and rocking tension knob)
- **(D) Gas Lift Cylinder:** 1 piece
- **(E) Base Star:** 1 piece
- **(F) Legs:** 5 pieces
- **(G) Wheels (Casters):** 5 pieces (or **(H) Fixed Feet:** 5 pieces, depending on model)
- **(I) Backrest Support Bracket:** 1 piece
- **(J) Screws (M6\*18mm):** 5 pieces (for mechanism plate)
- **(K) Screws (M6\*20mm):** 4 pieces (for backrest support bracket)
- **(L) Screws (M6\*30mm):** 4 pieces (for backrest support bracket)
- **(M) Screws (M6\*25mm):** 4 pieces (for base star)
- **(N) Allen Wrench:** 1 piece

## 4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your OLIXIS Criss Cross Office Chair. An assembly video is provided below for visual guidance.

### 1. Assemble the Chair Base:

- Insert the 5 legs (F) into the central base star (E). Secure them using the M6\*25mm screws (M) and the Allen wrench (N).
- Attach either the 5 wheels (G) or the 5 fixed feet (H) to the ends of the legs. Push firmly until they click into place.
- Insert the gas lift cylinder (D) into the center of the assembled base.

### 2. Attach Mechanism Plate to Seat Cushion:

- Place the seat cushion (A) upside down on a soft, clean surface.
- Align the mechanism plate (C) with the pre-drilled holes on the underside of the seat cushion. Ensure the height adjustment lever is on the right side when facing the front of the seat.
- Secure the mechanism plate (C) to the seat cushion (A) using the M6\*18mm screws (J) and the Allen wrench (N). Tighten all screws evenly.

### 3. Attach Backrest to Seat Cushion:

- Unzip the fabric on the backrest (B) to expose the screw holes.
- Attach the backrest support bracket (I) to the backrest (B) using the M6\*20mm screws (K) and the Allen wrench (N).
- Align the backrest support bracket (I) with the corresponding holes on the mechanism plate (C).
- Secure the backrest (B) to the mechanism plate (C) using the M6\*30mm screws (L) and the Allen wrench (N). Tighten all screws evenly.
- Zip up the fabric on the backrest.

### 4. Final Assembly:

- Carefully place the assembled seat and backrest onto the gas lift cylinder (D) on the chair base. Press down firmly to ensure a secure connection.

**Your browser does not support the video tag.**

Video 4.1: OLIXIS Criss Cross Chair with Wheels Installation Guide

This video demonstrates the step-by-step assembly process for the OLIXIS Criss Cross Chair with Wheels. It covers attaching the legs to the base, installing the gas lift, securing the mechanism plate to the seat, and finally connecting the

backrest and placing the assembled top onto the base.

## 5. OPERATING INSTRUCTIONS

Your OLIXIS Criss Cross Office Chair offers several adjustable features for optimal comfort and functionality.

### 5.1 Height Adjustment

To adjust the seat height:

- To raise the seat: Lift the height adjustment lever while taking your weight off the seat. The seat will rise automatically. Release the lever at the desired height.
- To lower the seat: Lift the height adjustment lever while seated. The seat will lower. Release the lever at the desired height.

### 5.2 Rocking Mode

The chair features a rocking function for added comfort:

- To activate rocking: Pull the height adjustment lever outwards. The chair will now allow for a gentle rocking motion (108°-130°).
- To lock the chair in an upright position: Push the height adjustment lever inwards.
- To adjust rocking tension: Rotate the round knob located underneath the seat. Turn clockwise to increase tension (making it harder to rock) or counter-clockwise to decrease tension (making it easier to rock).

### 5.3 360° Swivel and Rolling

The chair's design allows for full 360° rotation and smooth movement across most floor surfaces (when equipped with wheels).

- Simply rotate the seat to change direction.
- Push the chair to move it around your workspace.

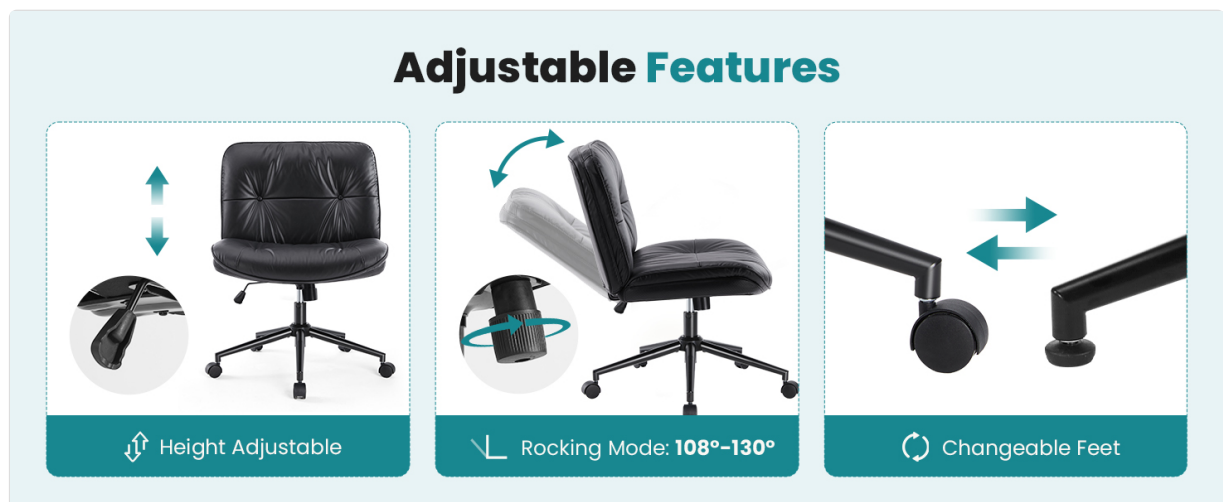


Figure 5.1: Adjustable Features



Figure 5.2: Rocking Mode in Use

## 6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your chair.

- **Cleaning:** Wipe clean with a damp cloth. For faux leather, use a mild soap solution if necessary, then wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Tightening Bolts:** Before using the chair, check to ensure that all bolts are fully tightened. Lubricate all moving parts and tighten all bolts every 6 months or whenever needed to maintain stability and prevent loosening.
- **Inspection:** Regularly inspect the chair for any signs of wear, damage, or loose components. Address any issues promptly.

## 7. TROUBLESHOOTING

If you encounter any issues with your chair, refer to the following common problems and solutions:

| Problem                                     | Possible Cause                                      | Solution                                                                                                                               |
|---------------------------------------------|-----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Chair does not adjust height.               | Gas lift cylinder malfunction or lever not engaged. | Ensure the height adjustment lever is fully engaged. If the issue persists, the gas lift cylinder may need replacement.                |
| Chair feels wobbly or unstable.             | Loose bolts or uneven assembly.                     | Check and tighten all assembly bolts. Ensure the chair is on a flat, even surface.                                                     |
| Wheels do not roll smoothly.                | Debris in casters or damaged wheels.                | Clean any hair or debris from the wheels. If wheels are damaged, consider replacing them.                                              |
| Rocking function is too stiff or too loose. | Rocking tension knob adjustment needed.             | Adjust the rocking tension knob located underneath the seat. Turn clockwise for stiffer rocking, counter-clockwise for looser rocking. |

## 8. SPECIFICATIONS

Detailed technical specifications for your OLIXIS Criss Cross Office Chair:

- **Brand:** OLIXIS
- **Model Name:** Criss Cross Legged Chair

- **Item Model Number:** CH-7295BKN
- **Color:** Black
- **Material:** Faux Leather (Upholstery), Foam (Fill Material)
- **Product Dimensions:** 19.3"D x 26.31"W x 36.71"H
- **Seat Size:** 26.8 inches x 26.8 inches
- **Adjustable Height:** 34.8" - 37.8"
- **Back Style:** Pillow Back
- **Arm Style:** Armless
- **Leg Style:** Cross Leg
- **Special Features:** Adjustable Height, Back Support, Rolling, Wide Seat, 360° Swivel, Rocking Function (up to 22° recline)
- **Maximum Weight Recommendation:** 300 Pounds
- **Item Weight:** 32 pounds
- **Recommended Uses:** Computer, Gaming, Office
- **Product Care Instructions:** Wipe Clean

## Upgraded Comfort



**Wide & Deep Seat**  
More seating space for extra comfort



**Ergonomic Back**  
Turn on the Rocking mode to enjoy a cozy life

Figure 8.1: Product Dimensions

## 9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact OLIXIS customer support directly. If you require assistance with assembly, parts, or troubleshooting, please reach out to our support team through the retailer where the product was purchased.