

MINISO MS215

MINISO MS215 AI Translator Earbuds User Manual

Model: MS215

INTRODUCTION

Thank you for choosing the MINISO MS215 AI Translator Earbuds. These intelligent earbuds are designed to facilitate real-time communication across language barriers, offering a blend of translation, communication, and high-fidelity audio features. This manual provides essential information for setting up, operating, and maintaining your device.

PRODUCT OVERVIEW

Key Features


- **4-in-1 Functionality:** Combines real-time translation, video calls, phone calls, and high-fidelity music playback.
- **Real-time Translation:** Less than 0.5-second delay with up to 98% accuracy, supporting 135 languages worldwide including Spanish, Chinese, English, Japanese, Korean, German, and French.
- **Multi-Scenario Translation Modes:**
 - Hands-free mode (real-time communication)
 - Dual-ear control (click operation)
 - Live photo translation (text recognition via camera)
 - AI conversation mode (fluent dialogue)
 - Conference mode (multilingual meetings)
 - Dual mode (music & translation in parallel)
 - Voice memos (automatic transcription)
- **Active Noise Cancellation (ANC):** Effectively blocks background noise for clear communication and immersive audio.
- **HD Stereo Sound:** Advanced technology for crystal-clear audio.
- **Compatibility:** Compatible with iOS and Android devices.
- **Optimized Microphones:** Improved precision for superior signal-to-noise ratio, excellent voice

localization, and advanced noise suppression.

- **Long Battery Life:** Up to 8 hours of playback per earbud on a single charge, with a total playback time of up to 48 hours with the charging case.
- **IPX5 Water Resistance:** Resistant to sweat and water splashes, suitable for exercise.

Package Contents

- MINISO MS215 AI Translator Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual

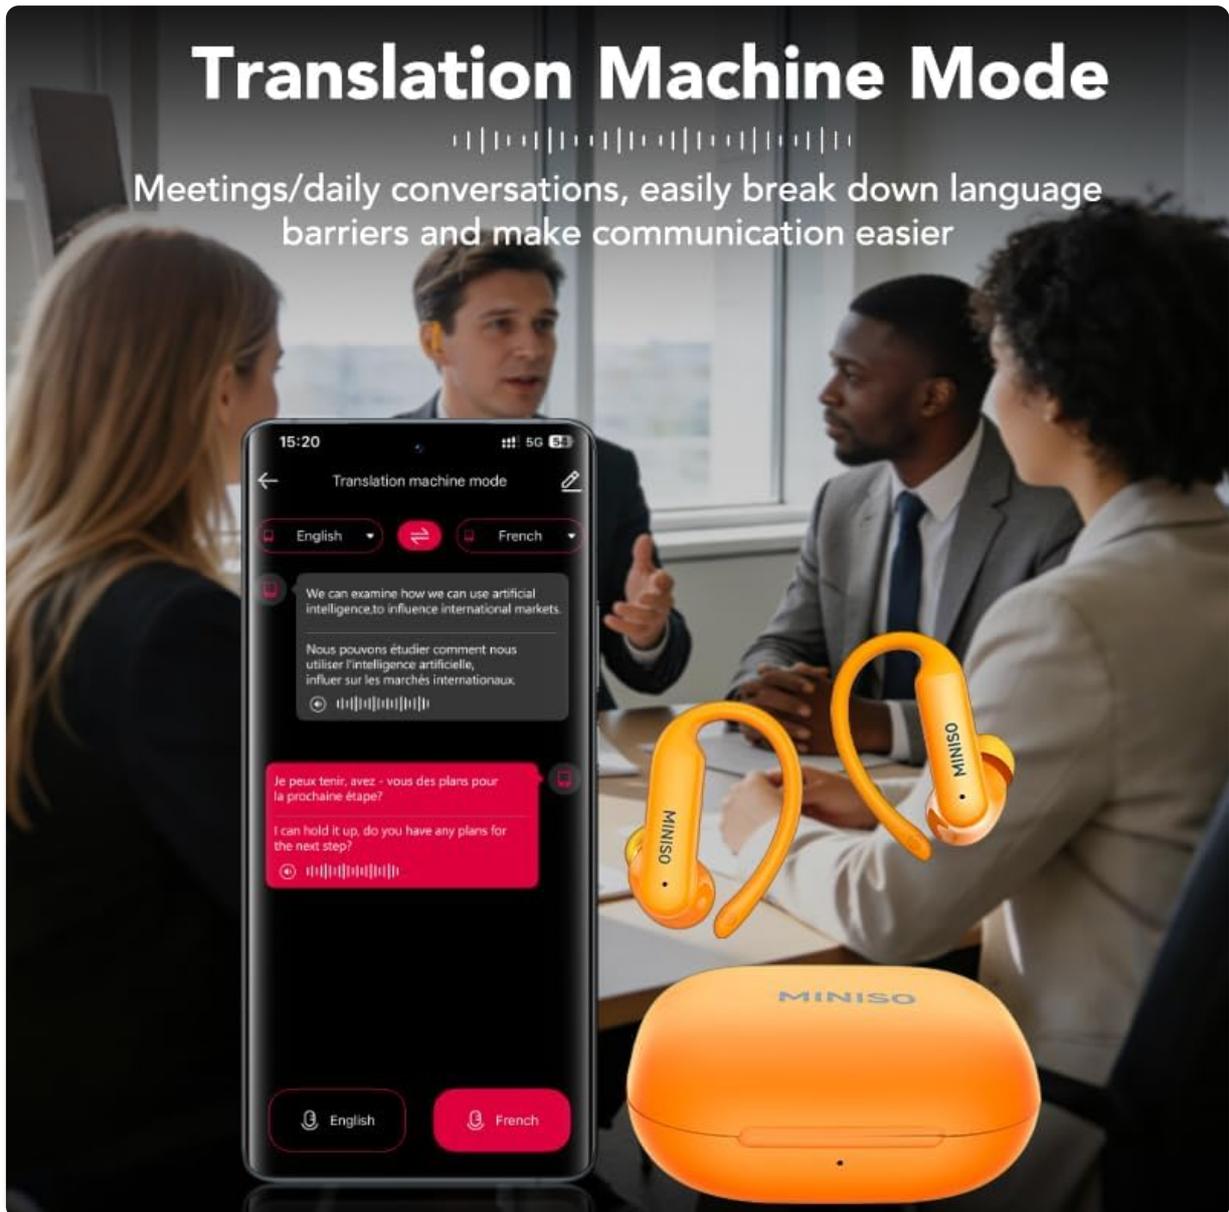

The MINISO MS215 AI Translator Earbuds and their charging case.

SETUP

1. Charging the Earbuds and Case

Before first use, ensure both the earbuds and the charging case are fully charged.

1. Place the earbuds into the charging case.

2. Connect the USB charging cable to the charging port on the case and to a power source.
3. The indicator lights on the case will show the charging status. A full charge typically takes approximately 1.5 hours.

Longer battery life

With the charging case, the total playback time can last up to **48** hours.
Each earbud provides up to 8 hours of playback on a single charge.



The charging case provides extended battery life for the earbuds.

2. Downloading the Saymi App

The translation function requires the Saymi APP. This app supports permanent free translation without a subscription.

1. Scan the QR code provided in the physical manual or search for "Saymi" in your device's app store (App Store for iOS, Google Play Store for Android).
2. Download and install the application.

Your browser does not support the video tag.

Video demonstrating the MINISO MS103 APP download and usage. The process is similar for the MS215 model.

3. Pairing with Your Device

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your smartphone, go to **Settings > Bluetooth**.

3. Select "MINISO-MS215" (or similar model name) from the list of available devices to connect.
4. Once connected, open the Saymi APP. The app will guide you through connecting the earbuds within the application interface.


Your browser does not support the video tag.

Preview video demonstrating how to connect the earbuds to the AurallIntelli app (similar to Saymi app).

OPERATING INSTRUCTIONS

Translation Modes

The MINISO MS215 earbuds offer various translation modes through the Saymi APP to suit different communication needs.

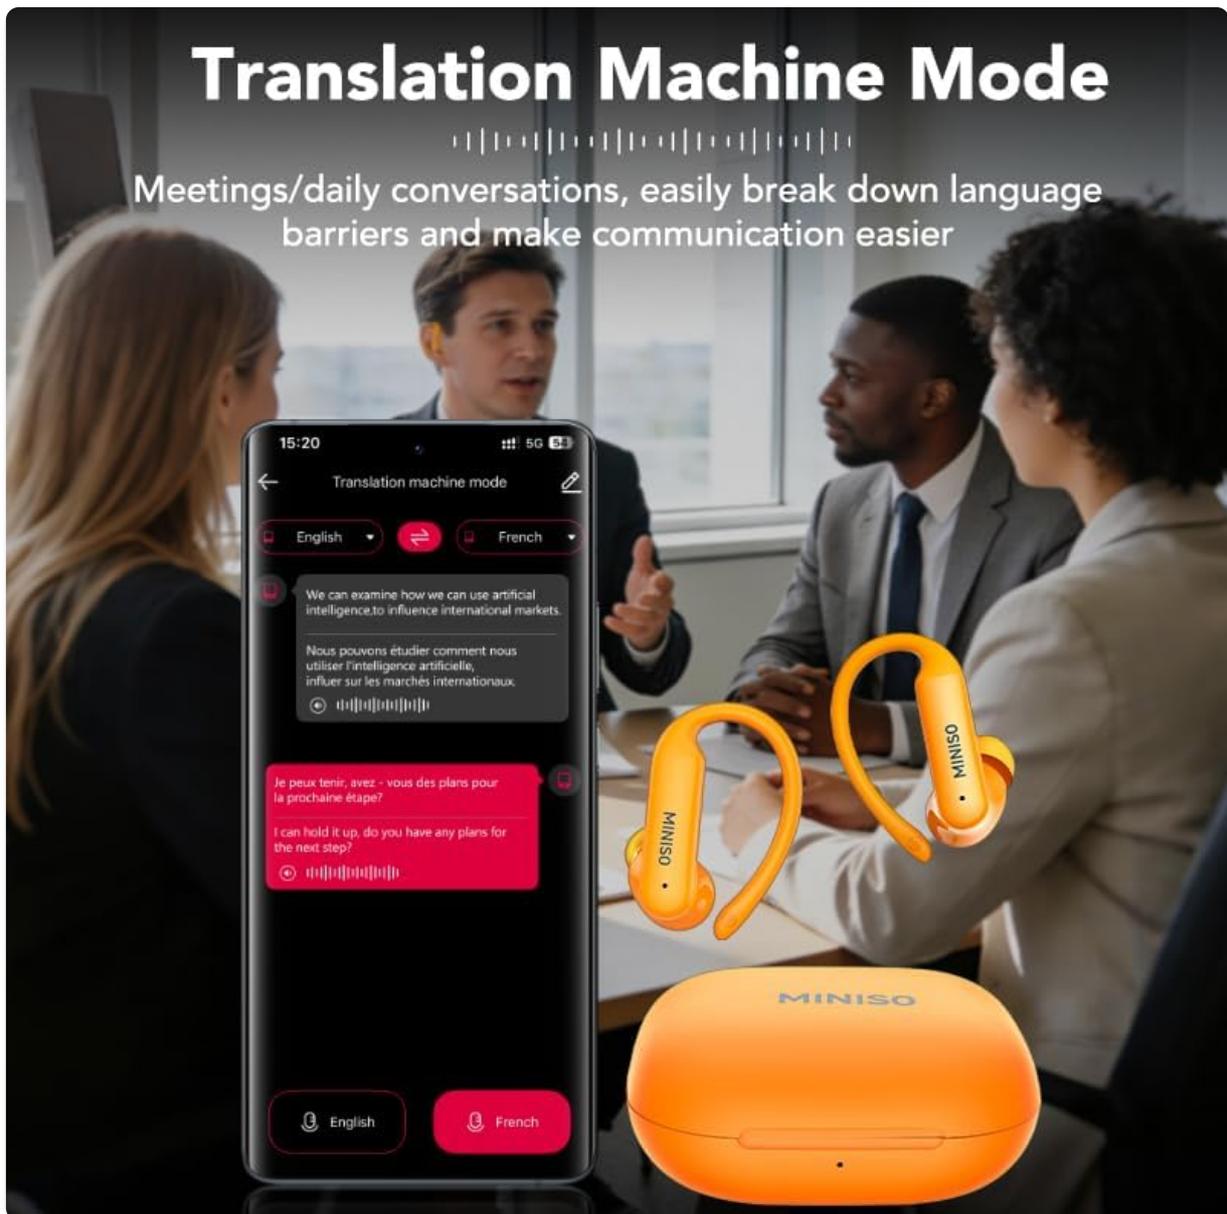

The app interface for "Translation Machine Mode" facilitating real-time conversations.

AI Dialogue Mode



Communicate with AI in real time, find inspiration and answers, answer your questions and be your voice consultant



The app interface for "AI Dialogue Mode" for interacting with AI.

Free Talk Mode

Support two-way voice translation for global negotiations or travel



Using the earbuds in "Free Talk Mode" for two-way voice translation.

Your browser does not support the video tag.

Video demonstrating touch operations for the MINISO MS103, which are similar for the MS215 model.

Headphone Control Instructions

Earbud Touch Controls

Action	Function
Press once	Play/Pause, Answer/Hang up call
Press twice (Right earbud)	Next song, Volume up
Press twice (Left earbud)	Previous song, Volume down
Press three times	Wake up voice assistant
Long press	Reject call
Press and hold right side for 2 seconds	Game mode
Press and hold for 2 seconds again	Music mode

The charging case also features a touchscreen display that allows you to play music, switch songs, and adjust the volume directly.



Features like secure fit, personalized spatial audio, and IPX5 water resistance enhance the user experience.

MAINTENANCE

- Keep the earbuds and charging case clean and dry. Use a soft, dry cloth to wipe them.
- Avoid exposing the device to extreme temperatures, direct sunlight, or corrosive liquids.
- Store the earbuds in their charging case when not in use to protect them and ensure they remain charged.
- Do not attempt to disassemble or repair the device yourself, as this will void the warranty.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Solution
-------	----------

Issue	Solution
Earbuds not pairing	Ensure earbuds are charged. Place them back in the case, close, then reopen to re-enter pairing mode. Check your device's Bluetooth settings.
Translation not working	Verify the Saymi APP is installed and the earbuds are connected within the app. Check your internet connection for real-time translation.
Poor audio quality	Ensure earbuds are properly seated in your ears. Clean any debris from the earbud speakers. Check the audio source device.
Short battery life	Ensure both earbuds and charging case are fully charged. Battery life can vary based on volume and usage.

SPECIFICATIONS

Feature	Detail
Model Name	MS215
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.4
Earpiece Shape	In-Ear
Noise Control	Active Noise Cancellation
Special Feature	Noise Cancellation, HD Stereo Sound
Control Method	App, Touch
Material	Metal, Plastic
Item Weight	3.53 ounces
Batteries	1 9V batteries required (included)
UPC	850073442838

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official MINISO website or contact their customer service directly. The Saymi APP also provides support resources.

If you have any questions or encounter issues not covered in this manual, please feel free to contact us for assistance.

