

[Manuals.plus](#) /

› [Babymoov](#) /

› Babymoov NutriSmart+ Bottle Warmer and Sterilizer Instruction Manual

Babymoov A002034

Babymoov NutriSmart+ Bottle Warmer and Sterilizer

INSTRUCTION MANUAL

1. INTRODUCTION AND OVERVIEW

The Babymoov NutriSmart+ is a versatile 5-in-1 device designed to warm and sterilize baby bottles, breast milk pouches, and food jars, both at home and on the go. It intelligently adjusts heating times based on content quantity and initial temperature, ensuring optimal serving temperature without overheating. The integrated sterilization lid allows for convenient sterilization of bottles and accessories.

NutriSmart +

El calentador de biberones que calienta y esteriliza para que las comidas estén siempre a la temperatura adecuada, incluso fuera de casa



PRODUCTO
REPARABLE



GARANTÍA
DE POR
VIDA*



Image 1.1: The NutriSmart+ bottle warmer and sterilizer in use, showing its compact design. It is designed for both home and travel, offering convenience for parents.



5 en 1: calienta al vapor, al baño maría, descongela y esteriliza biberones Y potitos.

Tiempo de calentamiento ajustado según la cantidad y la temperatura del contenido (ambiente, frigorífico o congelador).



Image 1.2: This image highlights the 5-in-1 functionality of the NutriSmart+, including steam heating, bain-marie, defrosting, and sterilization. It also emphasizes the automatic heating time adjustment based on content volume and temperature.

2. SAFETY INSTRUCTIONS

- Read all instructions before use and keep them for future reference.
- Ensure the product is placed on a stable, flat, heat-resistant surface.
- Do not immerse the main unit in water or any other liquid.
- Always supervise the device during operation, especially when children are nearby.
- Exercise caution when handling hot components or liquids. Use the anti-scald silicone rim on the lid.
- Unplug the device when not in use and before cleaning.
- This product is made from polypropylene and ABS, and is BPA-free, conforming to current regulations.
- Do not operate the appliance if it has been damaged in any way. Contact customer support.

3. PACKAGE CONTENTS

Please check that all components are present in the package:

- NutriSmart+ Main Unit
- Heating Basket
- Sterilization Lid with silicone rim
- Car Lighter Adapter (12V)
- Mains Power Adapter (220/240V)



Image 3.1: An exploded view illustrating all included components: the main unit, the heating basket, the sterilization lid, the car adapter, and the mains power adapter.

4. SETUP

4.1 Initial Cleaning


Before first use, wipe the internal and external surfaces of the main unit with a damp cloth. The basket and sterilization lid can be washed in a dishwasher or by hand with warm soapy water.

4.2 Connecting to Power

- **For Home Use:** Connect the mains power adapter to the device and then plug it into a standard 220/240V electrical outlet.
- **For Car Use:** Connect the car lighter adapter to the device and then plug it into your vehicle's 12V cigarette lighter socket.

5. OPERATING INSTRUCTIONS

The NutriSmart+ features an intuitive control panel for easy operation.

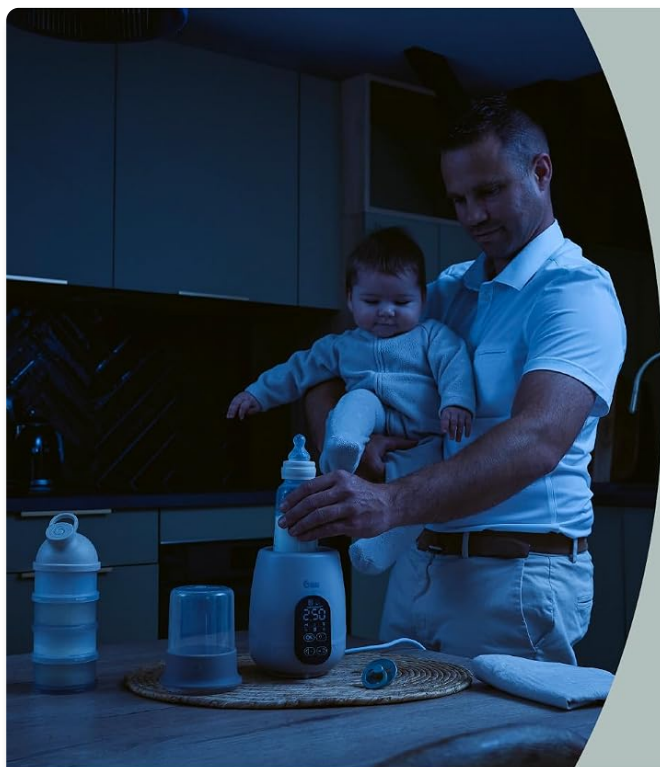

Práctico

- Tiempo de calentamiento optimizado con su tapa esterilizadora
- Programación, inicio diferido de 15 minutos a 12 horas
- Mantiene el calor durante 1 hora

Fácil de usar

Panel de control intuitivo para iniciar o programar el calentamiento o la esterilización.



Image 5.1: The NutriSmart+ being used at night, demonstrating its practical features like programmable start and the 1-hour keep-warm function, ideal for nighttime feedings.

5.1 General Use

1. Place the bottle, breast milk pouch, or food jar (up to 8 cm diameter) into the heating basket.
2. Add the appropriate amount of water to the heating chamber as indicated in the manual (refer to specific mode instructions).
3. Place the sterilization lid on top of the unit.
4. Select the desired program using the control panel.
5. Confirm your selection to start the heating or sterilization process.

5.2 Operating Modes

The NutriSmart+ offers 5 distinct programs:

- **Steam Heating:** Ideal for quickly warming bottles.
- **Bain-Marie (Water Bath):** Perfect for preserving the nutrients in breast milk.
- **Defrosting:** Safely thaws frozen breast milk or baby food.
- **Sterilization:** Eliminates bacteria from bottles, teats, and accessories.
- **Jar/Pouch Reheating:** Specifically designed for warming baby food jars and pouches.



Multifunción

Esteriliza, descongela y calienta biberones, bolsas de leche materna y potitos.

Completo

- Modo baño maría para conservar todos los beneficios de la leche materna
- Modo vapor para calentar a la temperatura exacta deseada más rápidamente (ideal para los biberones)
- Modo esterilización para eliminar el máximo de bacterias



Image 5.2: This image demonstrates the multifunctionality of the NutriSmart+, capable of sterilizing, defrosting, and warming various types of bottles, breast milk pouches, and food jars.

5.3 Automatic Heating Time Adjustment

The device automatically calculates the optimal heating time based on the volume of liquid or food and its initial temperature (room temperature, refrigerated, or frozen). This ensures precise heating without guesswork.

5.4 Programmable Delayed Start

You can program a delayed start from 15 minutes up to 12 hours. This feature is particularly useful for preparing meals in advance, such as for nighttime feedings.

5.5 Keep Warm Function

After heating, the NutriSmart+ can maintain the temperature of the bottle or food jar for up to 1 hour, ensuring it's ready when your baby needs it.

5.6 Car Use

To use the NutriSmart+ in your car, connect it using the provided 12V car lighter adapter. This allows for convenient warming and sterilizing while traveling.



Image 5.3: The NutriSmart+ positioned in a car's cup holder, connected via the car adapter, demonstrating its portability and convenience for travel.

6. MAINTENANCE

6.1 Cleaning the Main Unit

Wipe the internal and external surfaces of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.

6.2 Cleaning Accessories

The heating basket and sterilization lid are dishwasher-safe. Alternatively, they can be washed by hand with warm soapy water and rinsed thoroughly.

6.3 Descaling

Regular descaling is recommended to maintain optimal performance, especially in areas with hard water. Follow the

descaling instructions provided in the full product manual or on the Babymoov website.

7. TROUBLESHOOTING

If you encounter any issues with your NutriSmart+, please refer to the following general advice:

- **Device not turning on:** Ensure the power adapter is securely connected to both the device and a functioning power outlet (home or car).
- **Heating not effective:** Check that the correct amount of water has been added for the selected mode and that the lid is properly sealed. Ensure the bottle/jar is within the specified diameter (up to 8 cm).
- **Error message on display:** Consult the full product manual for specific error codes and their solutions. If the issue persists, contact Babymoov customer support.

8. SPECIFICATIONS

Model	A002034
Dimensions	14.8 x 14.8 x 23 cm
Weight	800 g
Materials	Polypropylene, ABS (BPA-free)
Home Power	220/240 V - 500 W
Car Power	12 V - 100 W
Compatibility	All types of bottles and jars up to 8 cm diameter



Image 8.1: The NutriSmart+ unit with its key dimensions (height 28 cm, width 12 cm) clearly marked for reference.

9. WARRANTY AND SUPPORT

The Babymoov NutriSmart+ comes with a lifetime warranty, emphasizing its durability and commitment to quality. The product is also designed to be repairable, extending its lifespan.

For detailed terms and conditions regarding the lifetime warranty and repair services, please visit the official Babymoov website. Registration is typically required within 2 months of purchase to activate the lifetime warranty.

For any support inquiries, troubleshooting assistance, or warranty claims, please contact Babymoov customer service through their official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question