

ALLJOY AJHDM2601

ALLJOY Hand Massager (Model AJHDM2601) Instruction Manual

Your guide to safe and effective use

INTRODUCTION

This manual provides instructions for the safe and effective use of your ALLJOY Hand Massager, Model AJHDM2601. Please read this manual thoroughly before operation and retain it for future reference.



This image illustrates the ALLJOY Hand Massager, highlighting its design and key features. It shows the device from a top-down perspective, emphasizing its ergonomic shape and control panel.

IMPORTANT SAFETY INFORMATION

To ensure safe operation, please observe the following precautions:

- Read all instructions before using this appliance.
- Do not use if you have a pacemaker.
- Do not use if you have a recent hand injury.
- Do not use if you have skin conditions on your hands or wrists.
- Pregnant women should consult a doctor before use.

- Keep the device away from water and moisture.
- Do not disassemble or attempt to repair the device yourself.
- Ensure the power adapter is compatible with your local power supply.
- Unplug the device when not in use or before cleaning.
- This device is for household use only.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.



This image provides guidance on suitable users for the hand massager and lists conditions under which its use is not recommended, such as with a pacemaker, recent hand injury, skin conditions, or during pregnancy.

SETUP

1. **Unpacking:** Carefully remove the hand massager from its packaging. Retain all packaging materials for storage or future transport.
2. **Initial Charge:** Before first use, fully charge the device. Connect the USB-C charging cable to the massager's charging port and the other end to a compatible USB power source (e.g., wall adapter, power bank, laptop). The charging indicator will show the charging status.
3. **Placement:** Place the massager on a stable, flat surface.

Fast Charging & Automatic Timer



Type-C
Interface



3000mAh
Battery



10/15/20
Mins Timer



2H Running
time



This image demonstrates the charging flexibility of the ALLJOY Hand Massager, showing it connected to both a wall plug and a portable power bank via USB-C.

OPERATING INSTRUCTIONS

1. **Power On:** Press the power button on the control panel to turn on the device. The display will illuminate.
2. **Insert Hand:** Gently insert your hand into the massager, ensuring your palm and wrist are comfortably positioned.
3. **Select Mode:** Use the mode selection buttons to choose from 9 available massage modes.
4. **Adjust Intensity:** Use the intensity adjustment buttons to select one of 9 intensity levels for the

airbag compression. For new users or sensitive hands, start with Mode 1, Intensity 1.

5. **Set Timer:** Select a massage duration (10, 15, or 20 minutes) using the timer button. The device will automatically shut off after the selected time.
6. **Power Off:** Press the power button again to turn off the device. The device also features an auto-shutoff function.




This image depicts a user operating the ALLJOY Hand Massager, with their hand comfortably placed inside the device and the control panel visible.

Massage Modes and Intensity Levels

The ALLJOY Hand Massager offers 9 distinct massage modes and 9 intensity levels to customize your

experience.

- **Modes:** Each mode provides a different pattern of airbag compression and kneading.
- **Intensity Levels:** These control the strength of the airbag compression. Levels 1-3 are for relaxing massage, Levels 4-6 for strong massage, and Levels 7-9 for deep massage.

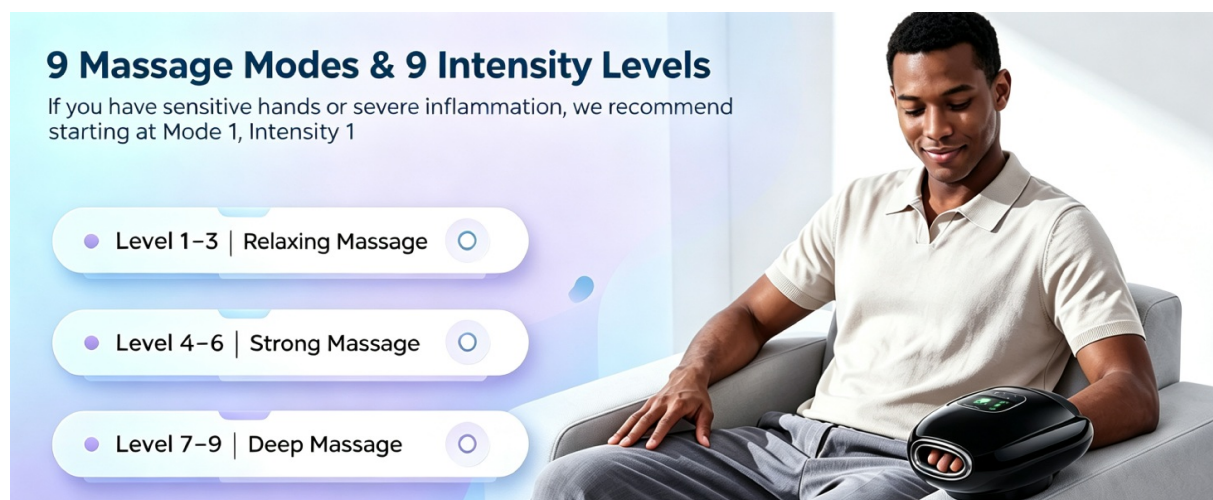

This diagram visually explains the 9 massage modes and 9 intensity levels available on the ALLJOY Hand Massager, categorizing intensity into relaxing, strong, and deep massage.

Heat Therapy

The massager provides deep heat therapy with four precise temperature settings: 104°F, 113°F, 122°F, and 131°F. Use the heat button to cycle through the available temperatures. Heat therapy can help ease stiffness and improve circulation.

Cooling Function

The open-air cooling design with a quiet fan helps dissipate heat and moisture, keeping hands dry during extended sessions. **Note:** Heating and cooling functions cannot be used simultaneously.



This image illustrates the internal workings of the hand massager, showing both the heating elements and the fan for cooling airflow.

Emergency Safety Deflate

The device includes a physical safety pressure-release valve. In case of discomfort or emergency, activate the valve to quickly release air pressure. Ensure the valve is in the "OFF" position for normal massage operation.

Why Do You Need ALLJOY Hand Massager?



Cold Hand



Finger Numbness



Palm Pain



Mouse Hand

This diagram shows the emergency safety deflate valve on the ALLJOY Hand Massager, indicating its "ON" position for emergency deflation and "OFF" position for normal massage.

MAINTENANCE

- Cleaning:** Wipe the exterior of the massager with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.
- Storage:** Store the massager in a cool, dry place, away from direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in frequent use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is low or depleted.	Charge the device fully using the provided USB-C cable.
No compression or weak compression.	Intensity level is set too low. Emergency deflate valve is open.	Increase the intensity level. Ensure the emergency deflate valve is in the "OFF" position.
Heat function not working.	Heat function not activated. Cooling function is active.	Press the heat button to activate. Ensure the cooling function is off, as they cannot be used simultaneously.
Device shuts off unexpectedly.	Timer has expired. Battery is low.	Check the timer setting. Recharge the device.

SPECIFICATIONS

Model Number	AJHDM2601
Product Dimensions	10.75 x 6.73 x 5.29 inches
Item Weight	3.31 Pounds

Brand	ALLJOY
Material Type	Polyester
Color	Black
Massage Modes	9
Intensity Levels	9
Heat Settings	4 (104°F, 113°F, 122°F, 131°F)
Battery Capacity	3000mAh
Operating Time	Up to 120 minutes (wireless)
Timer Settings	10, 15, 20 minutes
Special Features	Auto Shut-Off, Open-Air Cooling Design, Wrist Airbag Compression, Memory Function

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official ALLJOY website. Please have your model number (AJHDM2601) and purchase date available when contacting support.

Manufacturer: ALLJOY