

[Manuals.plus](#) /

› [Pebble](#) /

› Pebble Onyx Smart Glasses 5.4 User Manual

Pebble Onyx PWH04

Pebble Onyx Smart Glasses 5.4 User Manual

Model: Onyx PWH04

1. INTRODUCTION

Thank you for choosing the Pebble Onyx Smart Glasses 5.4. These smart glasses integrate advanced audio technology, Bluetooth calling, and voice assistant capabilities into a stylish and comfortable design. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.

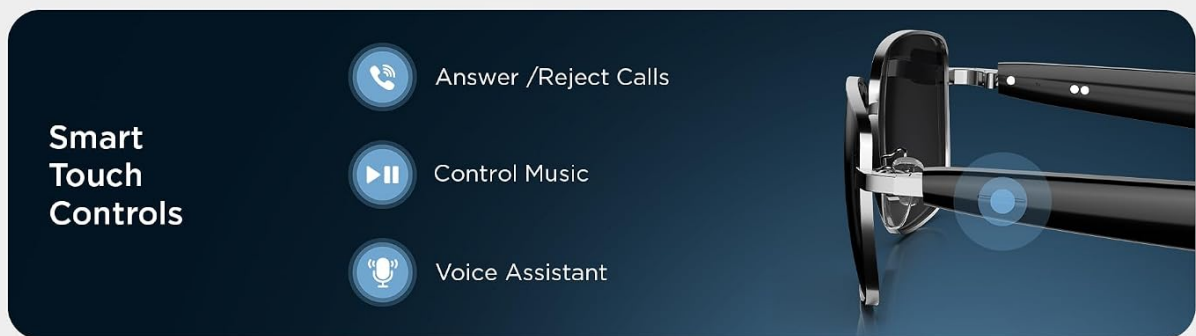
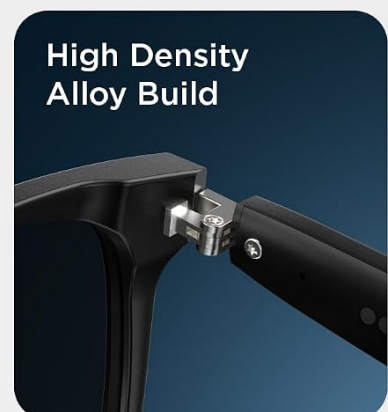
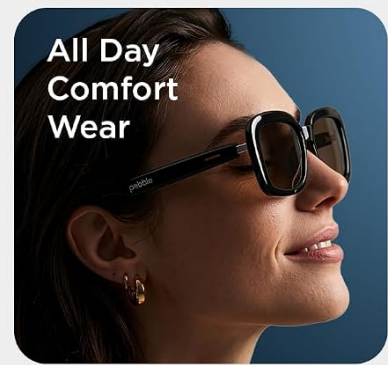


Image 1.1: Overview of Pebble Onyx Smart Glasses features, including OpenWaveX Tech, Dual ENC Mic, All Day Comfort Wear, Built For All, High Density Alloy Build, and Smart Touch Controls.

2. WHAT'S IN THE BOX

Please verify that all items are present in the package:

- 1N Pebble Onyx Smart Glasses (PWH04)
- 1N USB Charging Cable
- 1N User Manual (this document)
- 1N Warranty Card

3. SETUP

3.1 Charging the Glasses

Before first use, fully charge your Pebble Onyx Smart Glasses. Connect the provided USB charging cable to the

charging port on the glasses and to a standard USB power adapter (not included). A full charge takes approximately 1.5 hours and provides up to 10 hours of usage time or 15 days of standby time.

3.2 Bluetooth Pairing

1. Ensure the smart glasses are powered off.
2. Press and hold the power button on the glasses until the LED indicator flashes rapidly, indicating pairing mode.
3. On your smartphone or device, enable Bluetooth and search for available devices.
4. Select "Pebble Onyx" from the list of found devices.
5. Once connected, the LED indicator will stop flashing and remain solid.

3.3 Lens Customization

The Pebble Onyx Smart Glasses feature prescription-ready frames. The stock lenses can be easily swapped with tinted or prescription lenses by a local optical expert. This allows for personalized vision correction or preferred lens type.

~~Compromise~~ Customise

Prescription-ready frames that can easily be swapped at your local optical expert. Simply pop out the stock lenses and easily swap with tinted or prescription lenses.



Image 3.3: Illustration of the Pebble Onyx Smart Glasses frames with removable lenses, demonstrating the ability to customize with

prescription or tinted lenses.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** Press and hold the power button for 3 seconds until the LED indicator lights up.
- **Power Off:** Press and hold the power button for 5 seconds until the LED indicator turns off.

4.2 Audio Playback (OpenWaveX™ Sound)

The glasses feature dual OpenWaveX™ speakers for rich, directional audio while maintaining awareness of your surroundings.

Introducing OpenWaveX™ Sound.

Dual **OpenWaveX™** speakers deliver rich, directional audio while keeping you connected to your environment.



Image 4.2: A visual representation of the OpenWaveX™ Sound technology, showing sound waves directed towards the ear from the smart glasses' speakers.

- **Play/Pause:** Tap the touch control area once.
- **Next Track:** Double-tap the touch control area.

- **Previous Track:** Triple-tap the touch control area.
- **Volume Control:** Adjust volume directly from your connected device.

4.3 Call Management

Built-in dual microphones with noise reduction ensure clear, hands-free conversations.

Rise Above The Chaos.

Crowded metro? Loud streets? Doesn't matter. Advanced dual ENC mics dampen background noise, creating crystal clear conversations during calls.



Image 4.3: A person wearing Pebble Onyx Smart Glasses while driving, highlighting the effectiveness of the dual ENC microphones in noisy environments for clear calls.

- **Answer Call:** Tap the touch control area once.
- **End Call:** Tap the touch control area once during a call.
- **Reject Call:** Press and hold the touch control area for 2 seconds.

4.4 Voice Assistant

Access your smartphone's voice assistant directly from the glasses.

Total Control, In A Tap.

Seamless accessibility to calls, music and voice assistants, all without touching your smartphone.



Image 4.4: Close-up view of the smart touch control area on the temple of the Pebble Onyx Smart Glasses, illustrating how to activate voice assistants like Siri or Gemini.

- **Activate Voice Assistant:** Press and hold the touch control area for 2 seconds (when not on a call).

5. MAINTENANCE

5.1 Cleaning

To clean your smart glasses, gently wipe the lenses and frame with a soft, lint-free cloth. For stubborn smudges, use a lens cleaning solution specifically designed for eyewear. Avoid harsh chemicals or abrasive materials.

5.2 Water Resistance

The Pebble Onyx Smart Glasses are rated IP65 for water and dust resistance. This means they are protected against low-pressure water jets from any direction and are dust-tight. They are suitable for use in light rain or during workouts where sweat may occur. However, they are not designed for submersion in water. Avoid exposing them to strong water jets or prolonged immersion.

Defies All Odds.

IP65 protection against rain, sweat, or dust makes Onyx your perfect partner during life's adventures.



 pebble
Delivering More
Power To Your
Everyday.

15M+
#PebbleSquad
Members

0:04s
Avg. Duration b/w
New Devices Sold

900+
Pan-India
Service Centres

Image 5.2: Pebble Onyx Smart Glasses shown with water droplets, illustrating their IP65 protection against rain, sweat, or dust.

6. TROUBLESHOOTING

If you encounter issues with your Pebble Onyx Smart Glasses, refer to the following common solutions:

- **No Power:** Ensure the glasses are fully charged. Connect to the charger and check the LED indicator.
- **Cannot Pair:** Make sure Bluetooth is enabled on your device and the glasses are in pairing mode (rapidly flashing LED). Try restarting both the glasses and your device.
- **No Sound:** Check the volume level on both the glasses (if applicable) and your connected device. Ensure the glasses are properly connected via Bluetooth.
- **Poor Call Quality:** Ensure the microphones are not obstructed. Move closer to your connected device.
- **Unresponsive Controls:** Try restarting the glasses. If the issue persists, ensure the touch control area is clean and dry.

For further assistance, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Name	Onyx
Model Number	PWH04
Connectivity	Bluetooth
Battery Type	Lithium Polymer
Battery Capacity	300 mAh (Approximate)
Usage Time	Up to 10 hours
Standby Time	Up to 15 days
Charging Time	Approx. 1.5 hours
Water Resistance	IP65
Weight	300 Grams
Special Features	Dual Speakers, BT Calling, Voice Assistant, Activity Tracker

8. WARRANTY & SUPPORT

8.1 Warranty Information

The Pebble Onyx Smart Glasses (PWH04) come with a **1 Year Warranty** from the date of purchase. Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

8.2 Customer Support

For technical support, warranty claims, or any other inquiries, please contact the manufacturer:
Manufacturer: SRK Powertech Pvt. Ltd.
Address: A-12, Hoseiry Complex Phase-2, Noida, UP-201305
Please refer to the warranty card included in your package for detailed terms and conditions and contact information.

© 2024 Pebble. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question