



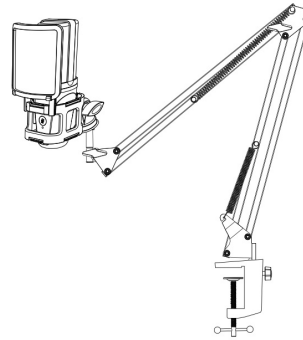

AUDIO ARRAY AM-C7 USB 2 in 1 Plug and Play Condenser Microphone Kit User Manual

[Home](#) » [AUDIO ARRAY](#) » AUDIO ARRAY AM-C7 USB 2 in 1 Plug and Play Condenser Microphone Kit User Manual 

AUDIO ARRAY AM-C7 USB 2 in 1 Plug and Play Condenser Microphone Kit

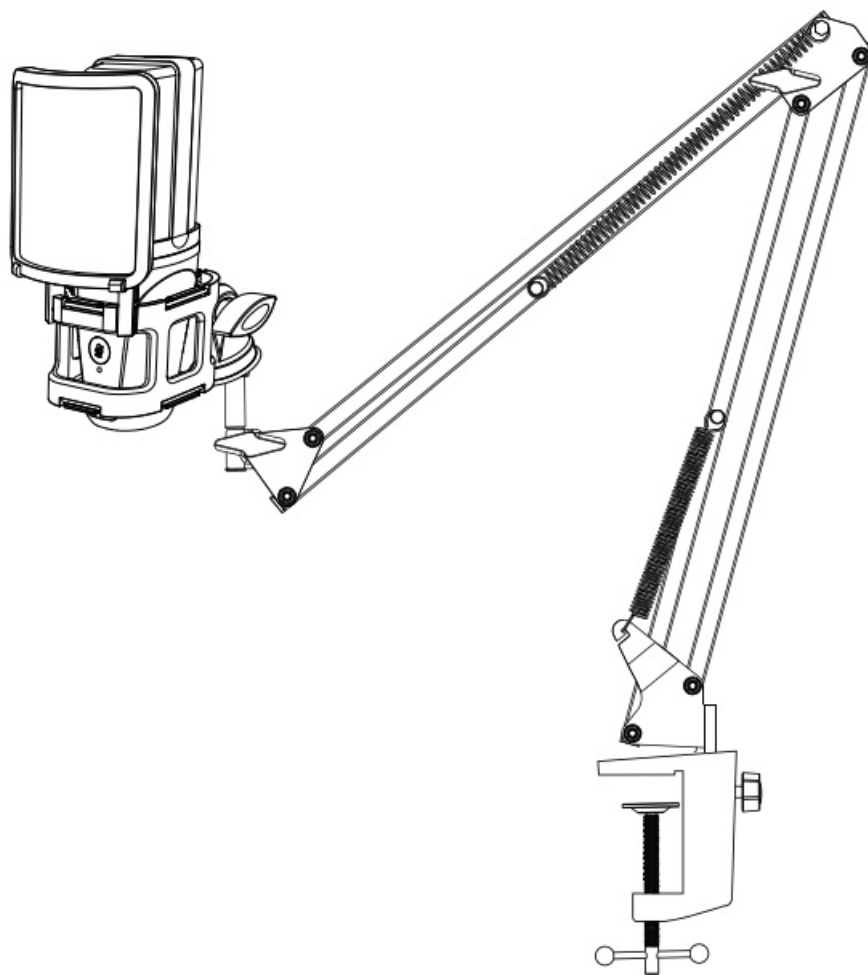

Contents


- [1 ACCESSORIES](#)
- [2 INSTRUCTIONS](#)
- [3 SPECIFICATIONS](#)
- [4 COMPUTER SETUP](#)
 - [4.1 macOS](#)
- [5 Customer Support](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

ACCESSORIES

1. Shock Mount




2. Pop Filter

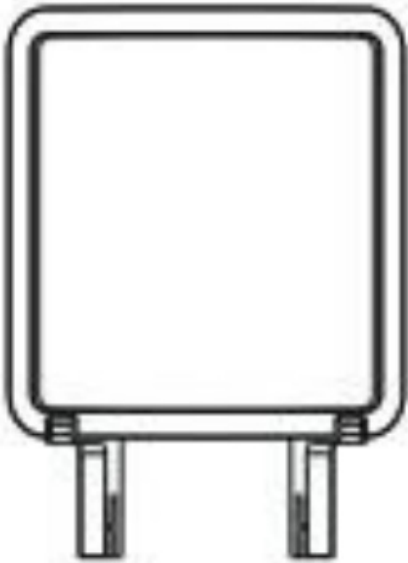

3. Desk Clamp



4. USB Cable

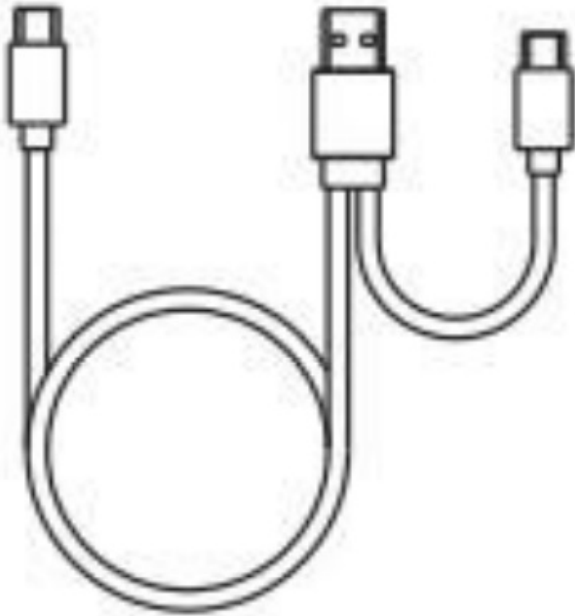

5. Microphone



6. Boom Arm



INSTRUCTIONS

1. Indicator Light

The indicator light is blue when the mic is working.

2. Volume Control Function


Turn left to turn down the volume, turn right to turn up the volume.

3. Mute Function

Press the volume control knob to mute the microphone, meanwhile, the indicator light will turn red.



4. Headphone Monitor Jack

Microphone supports zero latency monitor function.

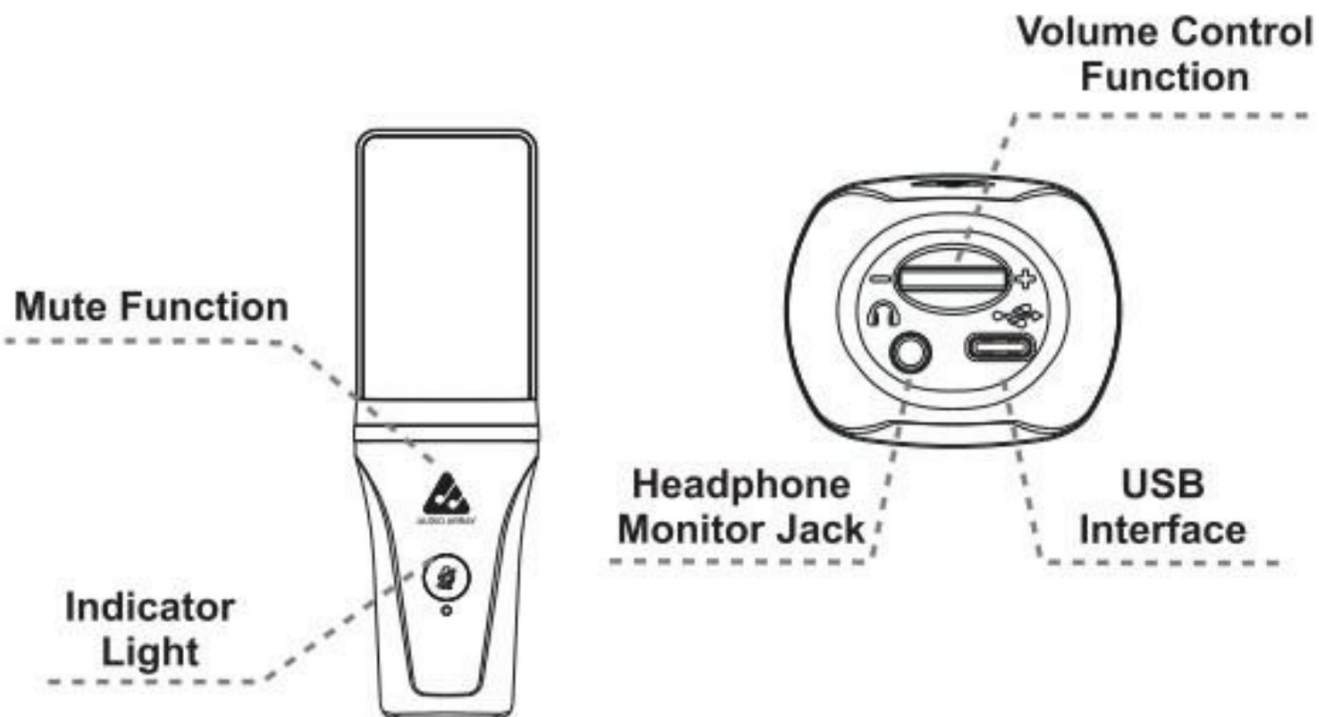

SPECIFICATIONS

Polar Pattern:	Cardioid
Input Sample Rate:	96KHz
Bit Rate:	24Bit
Frequency Response:	20Hz-20KHz
Sensitivity:	-40dB±3dB (OdB=1 V/Pa, at 1KHz)
Output Impedance:	2.2KΩ
Max. SPL:	110dB
THD+N:	<1%
S/N Ratio:	95dB
USB Cable Length:	2m

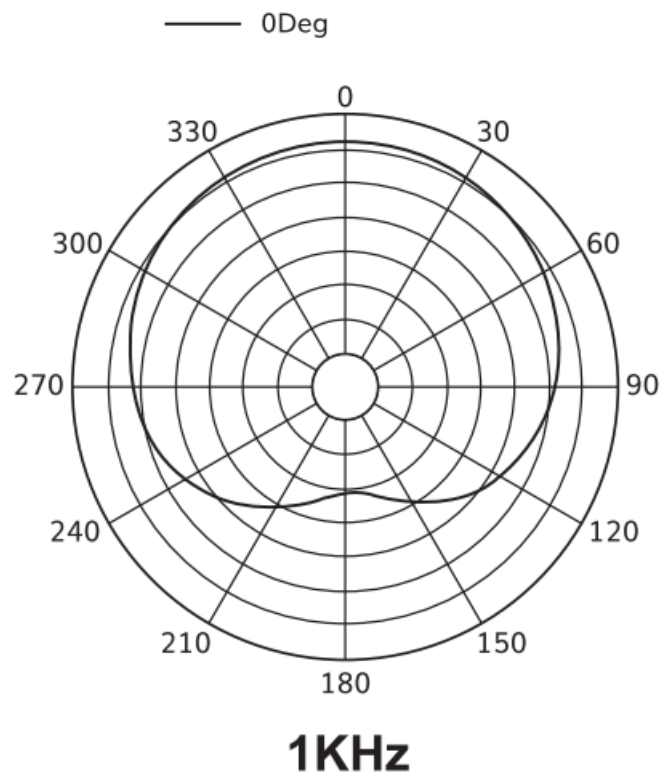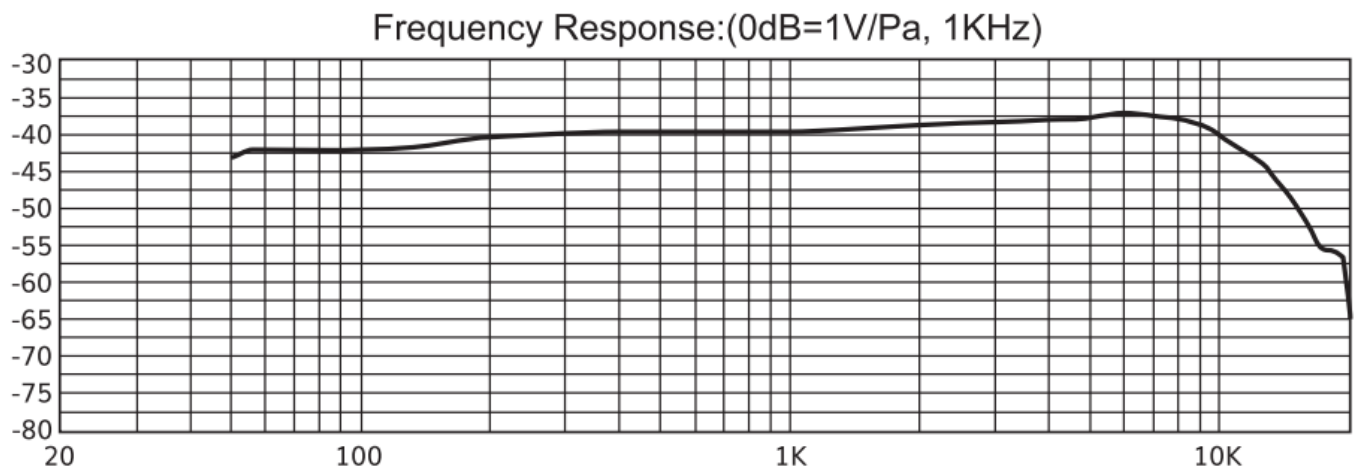

COMPUTER SETUP


Windows

Step 1: Plug the Microphone into your computer. The computer will automatically recognize the USB device and install a driver.

Step 2: Right-click on the sound icon on the system tray and select Sounds.


- Open Volume Mixer
- Spatial sound (Off)
- Playback devices
- Recording devices
- Sounds
- Troubleshoot sound problems

Step 3: Click the Recording tab and select the Audio Array AM-C7 Device and click on the Set Default button.

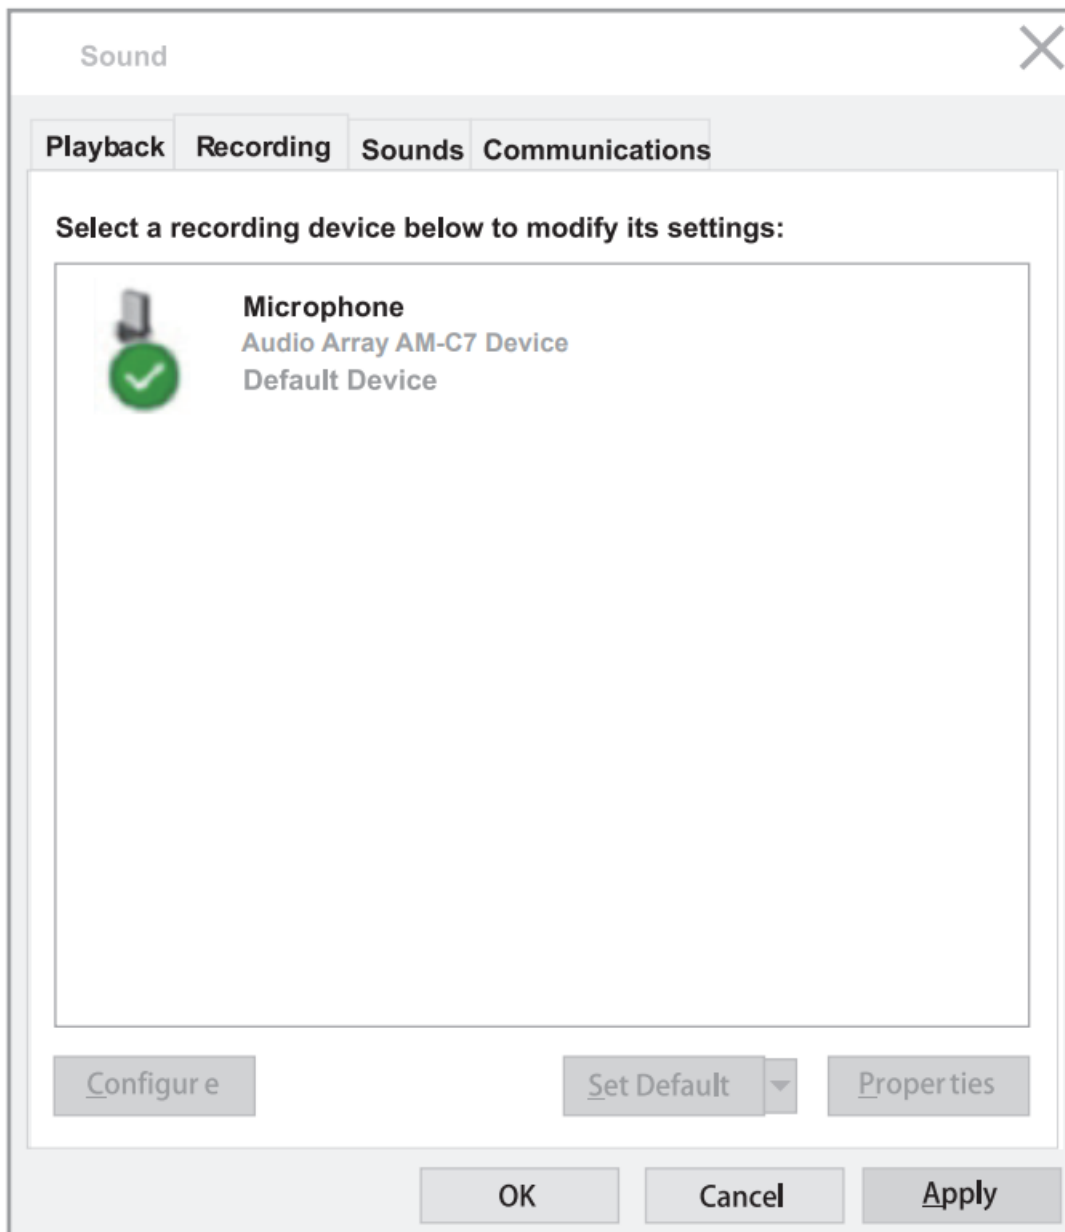

macOS

Step 1: Plug the Microphone into your computer. The computer will automatically recognize the USB device and install a driver.

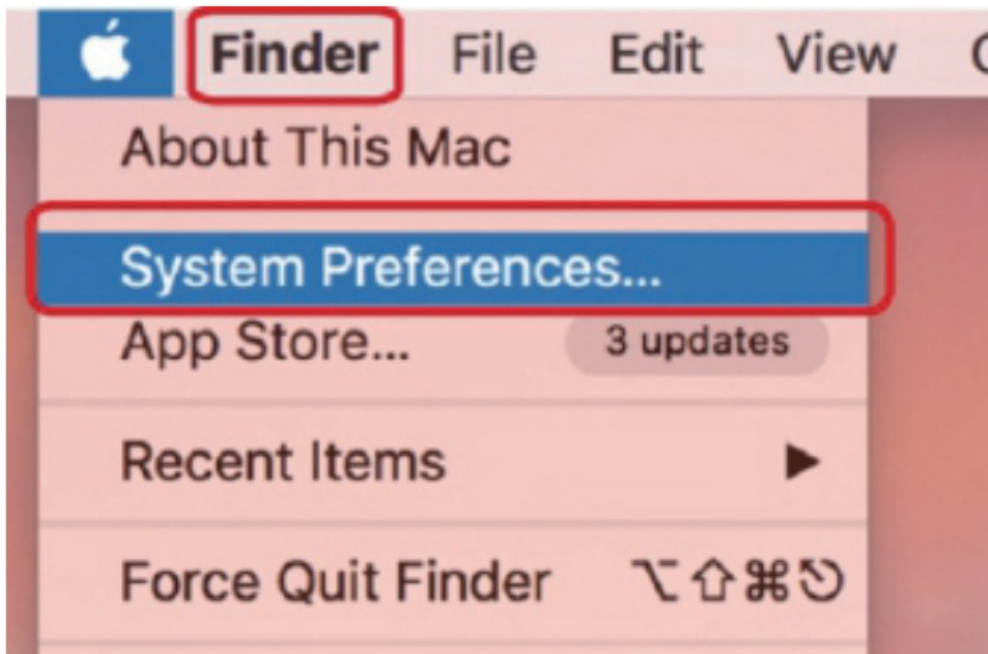


Step 2: Open your System Preferences.

Step 3: Click sound to display the Sound preference pane.



Step 4: Click the Input tab and select the Audio Array AM-C7 Device as the device for sound input.

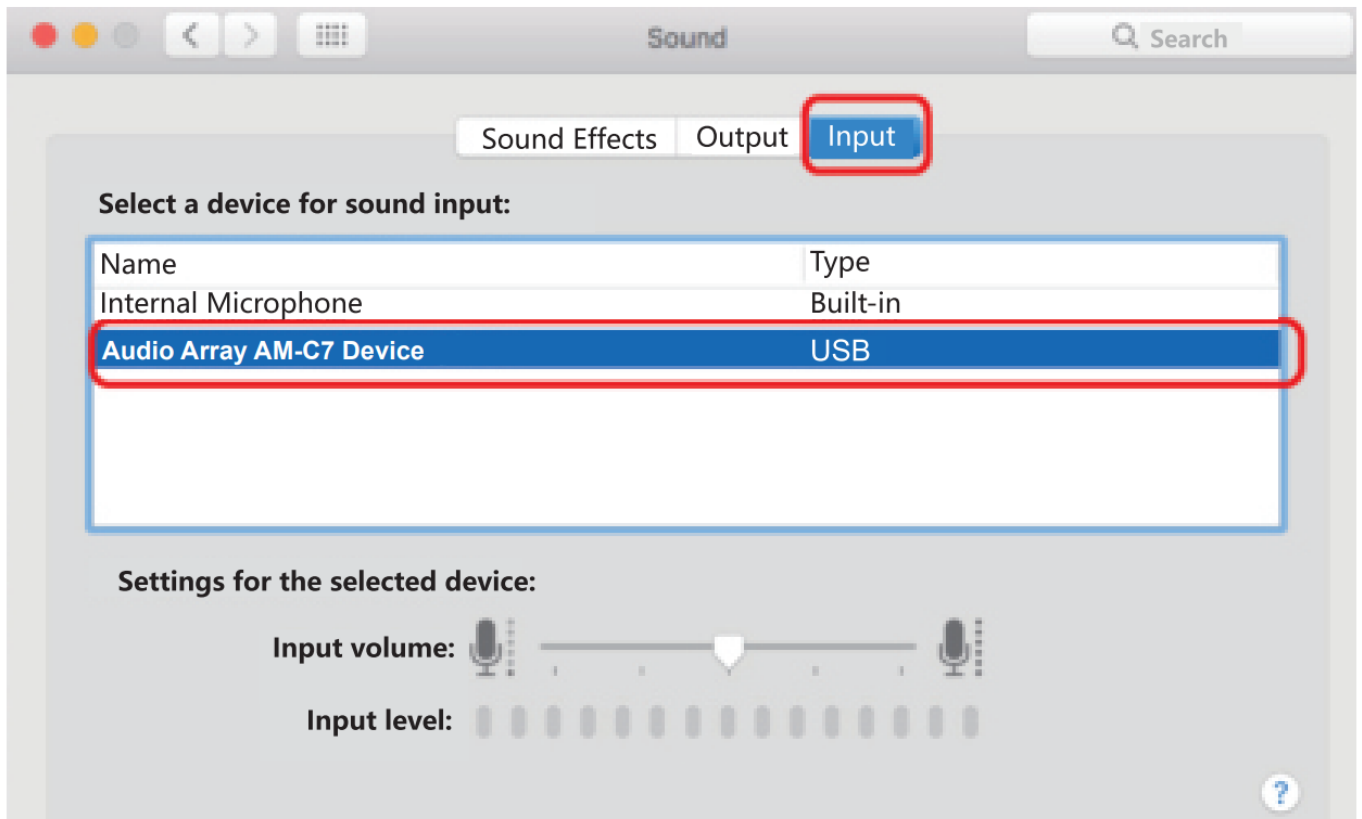

Customer Support



support@audioarray.in



@audioarray.in



audioarray.in



@audioarray.in



/c/ AudioArray



@audio_array



Documents / Resources

	AUDIO ARRAY AM-C7 USB 2 in 1 Plug and Play Condenser Microphone Kit [pdf] User Manual AM-C7 USB 2 in 1 Plug and Play Condenser Microphone Kit, AM-C7, USB 2 in 1 Plug and Play Condenser Microphone Kit, Condenser Microphone Kit, Microphone Kit
--	---

References

- [User Manual](#)