

# August Wireless Presenter Computer User Manual

[Home](#) » [August](#) » August Wireless Presenter Computer User Manual

## *August Wireless Presenter Computer User Manual*

August Wireless Presenter Computer User Manual

Thank you for purchasing the August LP315 Wireless Presenter for Computer. This user manual is designed to familiarise you with all the features of this device. Please take the time to read this user manual carefully, even if you are already familiar with a similar product.

### **Safety**

To ensure the safety of yourself and others, please read the Safety Instructions before using this device. Please do not disassemble the LP315 as it can be unsafe and will invalidate the manufacturer's warranty.

### **Disposal**

Please ensure the product and accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and any other regulations applicable to your country. Always check with the environmental agency and any other relevant authorities for current disposal regulations.

### **Declaration of Conformity**

The Declaration of Conformity can be found on our website at <http://augustint.com/en/declaration/>

### **Customer Service**

You can contact us by phone on: +44 (0)845 250 0586 or by email at: [service@augustint.com](mailto:service@augustint.com) should you require further technical support or customer service.

## Contents [ [hide](#) ]

### 1 Safety Instructions

#### 1.1 Storage and Use

#### 1.2 Maintenance

#### 1.3 Warning

### 2 Main Features

### 3 Box contents

### 4 Part Names and Functions

### 5 Installation

### 6 Operation

#### 6.1 Settings

#### 6.2 Alarm

### 7 Charging






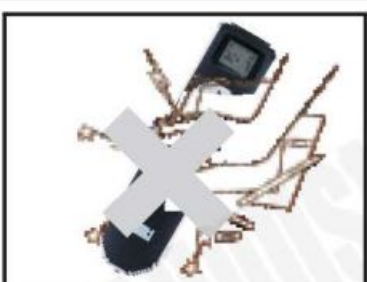
### 8 Specifications

### 9 Documents / Resources

### 10 Related Posts


## Safety Instructions

### Storage and Use

	Keep this machine away from hot or cold places. Working temperature of this device is 0° C ~ 50° C, storage temperature is -10° C ~ 60° C.		Keep the Receiver away from water or damp environment.
	Never expose the receiver to moisture, dust, oil or smoke.		Avoid dropping or exposing to impacts.
	Never put this machine in containers that are unstable as this may cause damage.		Never extrude or chafe this machine with sharp objects.

### Maintenance

Please unplug all connection wires before cleaning this machine.

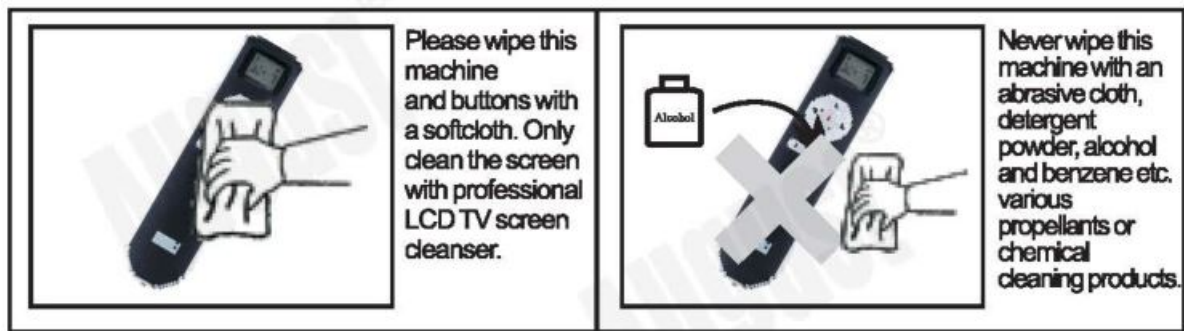

### Warning

1. Laser radiation
2. Class 2 laser product
3. Do not view directly with optical instruments
4. Do not point at people and animals
5. Please keep out of reach of children

### Main Features

- Plug and Play for Computer Power Point Presentation
- Remote Page Changer and Red Laser
- Air Mouse and Vibrating Alarm.
- Internal Storage for USB Signal Receiver
- Operating Range: upto 10m
- Compatible with Windows 10, 8, 7, Vista, XP, 2000, 98 & Mac OS

### Box contents



Wireless Presenter



Case




USB Power Cable




User Manual

### Part Names and Functions

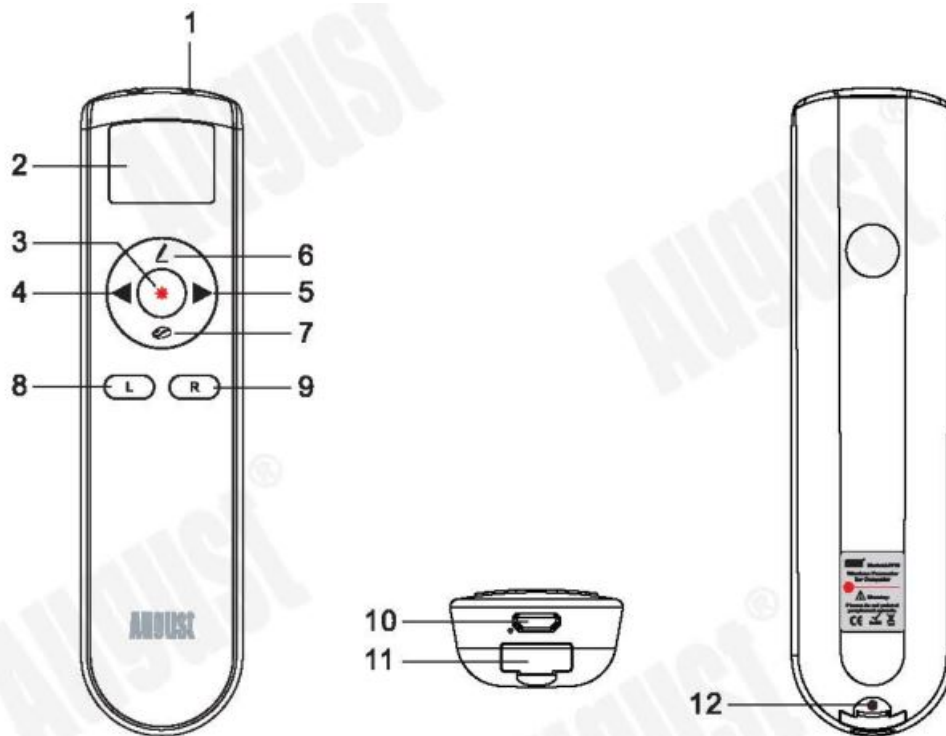

1. Laser emitter
2. LCD display

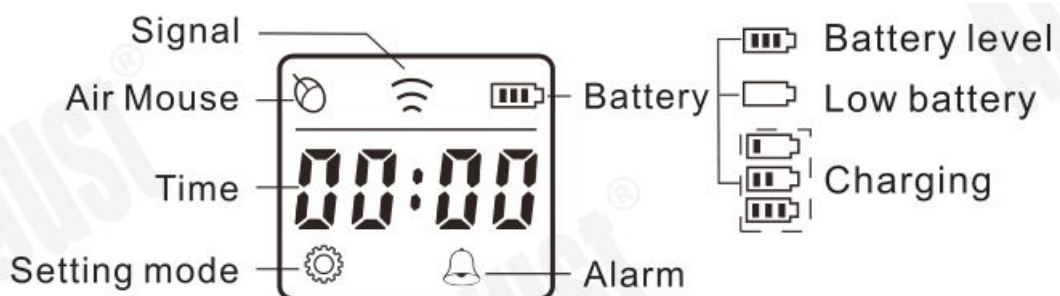

3. Laser button  
Press and hold to light the laser.
4. Page up/ Start slideshow  
Press it to go to the previous page.  
Press and hold it for 2 seconds for start or stop the slideshow.
5. Page down/ Black screen  
Press it to go to the next page.  
Press and hold it for 2 seconds for enter or exit the black screen.
6. Note button  
In slideshow, press and hold it to make notes on the screen.  
Double press it to delete the notes.
7. Air mouse switch  
Double press it to switch the air mouse on or off. The mouse icon will appear on the screen when the air mouse mode is on.  
When the air mouse mode is on, press and hold it to control the cursor by hand movement.
8. Left button  
Press it for left click function.
9. Right button

Press it for right click function.

Press and hold it to enter or exit the setting mode.

10. USB charging port
11. USB receiver
12. Reset



## Installation

Plug the USB receiver into a USB port on your computer. The system will automatically search for the new hardware and complete the installation.


## Operation

### Settings

LP315 allows you to set clock and alarm time.

1. Press and hold "R" button for 2 seconds to start adjusting the alarm time. The LCD will display the  icon, "00:00" appears.
2. Press "page up" or "page down" to select which digit to change, press "note button" or "air mouse" to adjust the flashing digit.
3. Press the laser button to save the alarm time, or press R to cancel.
4. Press and hold "R" for 4 seconds to enter clock setting. The LCD will display the  icon.
5. Press "page up" or "page down" to select which digit to change, press "note button" or "air mouse" to adjust the flashing digit.
6. Press the laser button to save the clock time, or press "R" to cancel.

### Alarm

Once the alarm has been set, the device will remind the user by vibrating when there are 10, 5 and 0 minutes remaining. After the alarm time has passed, the  icon will disappear.

## Charging

This device contains a built-in Lithium rechargeable battery. The battery level shows on the LCD screen. When the power is low, connect the micro USB lead to the device's power socket, and the other end of the USB cable to a powered USB port. The battery icon on the LCD flashes, charge time is approximate 2-3 hours, and the battery icon will stay constant once battery fully charged.

### Note:

- If LCD displays battery level low, the control distance will decrease, please charge the device in time.
- Please only use USB chargers with genuine safety certification.

## Specifications

Presenter	
Technology	Radio Frequency
Frequency	2.4GHz
Operating range	Up to 10m
Laser range	Up to 100m
Battery	3.7V/360mAh Li-ion battery
Laser wavelength	650nm
Laser power	<1mW
Dimensions	123 x 31 x 17mm
Weight	41g

USB Receiver	
Operating systems	Windows 98 / 2000 / XP / Vista / 7 / 8 / 10 and Mac OS
USB version	USB1.1, compatible with USB2.0 and USB3.0
Work voltage	4.5 - 5.5V
Dimension	22 x 12 x 5mm
Weight	2g

**Warning:**

Laser radiation  
 Class 2 laser product  
 Do not view directly with optical instruments  
 Do not point at people and animals  
 Please keep out of reach of children

**Note:**


Please note, these instructions are only intended for reference.  
 August International Ltd reserves rights to revise the product specifications, features and design without notice.

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at <http://www.augustint.com/en/declaration>.



**August International Ltd**  
 United Kingdom  
 Telephone: +44 (0) 845 250 0586  
 Email: [service@augustint.com](mailto:service@augustint.com)  
 Web: [www.augustintl.com](http://www.augustintl.com)

## Documents / Resources

 The image shows the packaging for the August Wireless Presenter Computer, LP315. The box is white with a clear window showing the black device. Text on the box includes 'August', 'User Manual', and 'LP315'. There are also some smaller, less legible text elements and a small graphic of a person presenting.	<p><a href="#">August Wireless Presenter Computer</a> [pdf] User Manual Wireless Presenter Computer, LP315</p>
--	--