




[Home](#) » [AURAL](#) » **LABACOND00 Aural One Instructions** 

Contents [[hide](#)]

- [1 LABACOND00 Aural One](#)
- [2 Specifications](#)
- [3 Product Information](#)
- [4 Opening Side Panels](#)
- [5 Removing Front Components](#)
- [6 Installing Front Closure Basin](#)
- [7 Description](#)
- [8 Contents of the kit](#)
- [9 Side opening](#)
- [10 FAQ](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

Aural

LABACOND00 Aural One

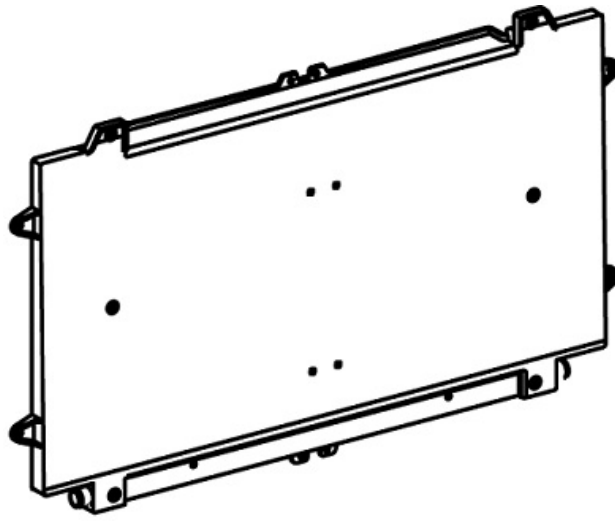

Specifications

- Product Models: LABACOND00, LABACOND01, LABACOND02, LABACOND03, LABACOND04
- Application: Used for collecting condensation in AURAL ONE applications installed horizontally

Product Information

The kit is designed to collect condensation in AURAL ONE applications installed horizontally on the ceiling. It includes components such as a front closure basin, condensate drainage pipe, rubber condensate drainage pipe, upper battery insulation, front basin insulation, transparent cap, safety support for the front grid, cylindrical head screws, and assembly instructions.

Opening Side Panels

1. Remove the top grid by unscrewing the two fixing screws.
2. Open the side door.
3. Unscrew the screw on the left side to release the left panel; move it slightly to the left and lift it.
4. On the opposite side, lift the cover plate, unscrew the screw, move the panel slightly to the right, and lift it.

Removing Front Components

1. Remove the lower front grid.

2. Unscrew the fixing screws of the front panel and remove it.
3. Extract and remove the polystyrene insulators from their slots.
4. Unscrew the fixing screws of the front closure brackets and remove them from the frame.
5. Remove the upper battery insulation.

Installing Front Closure Basin

1. Mount the front closure basin using the six cylindrical head screws included in the kit and seal it with the provided insulation.
2. Ensure the transparent cap is in place at the drainage pipe entrance opposite to the connections for condensate discharge.
3. Make the condensate drainage connections.
4. Place the upper battery insulation included in the kit.
5. Reassemble all previously disassembled components following the reverse disassembly steps. Note: Safety supports for the front grid must be installed in this type of installation.

Note: Product technical data and aesthetic characteristics are subject to change.

FONDITAL reserves the right to modify them at any time without notice.

Mounting the bowl

This instruction is an integral part of the booklet of the appliance on which the kit is installed. Please consult this booklet for general warnings and fundamental safety rules.

Description


The kits are used to collect condensation in the AURAL ONE applications installed horizontally (on the ceiling).

Contents of the kit

A	Front closing bowl	1
B	Condensation drainage pipe	1

C	Condensation drainage rubber hose	1
D	Battery upper insulation	1
E	Front bowl insulation	1

F	Transparent plug D 13 mm	1
G	Front grill safety support	2
H	Cylindrical head screw 4.2×13	6
I	Instructions sheet	

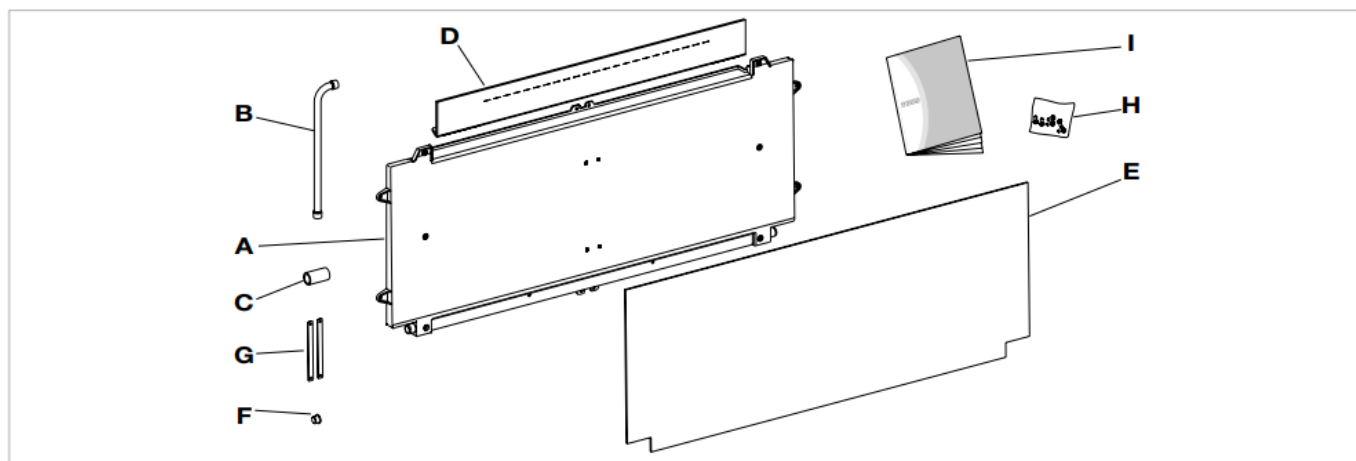


Side opening

- Dismount the upper grill by unscrewing the two fixing screws.
- Open the side inspection flap.
- On the left-hand side loosen the screw that fixes the left panel, then move it slightly to the left and lift it up.
- On the opposite side, lift the cover that protects the screw and unscrew it.
- Move the side panel slightly to the right and lift it out.

A	upper grill
B	fixing screws

C	side inspection flap
F	left side screw


G	left panel
H	cover
L	screw
P	side panel

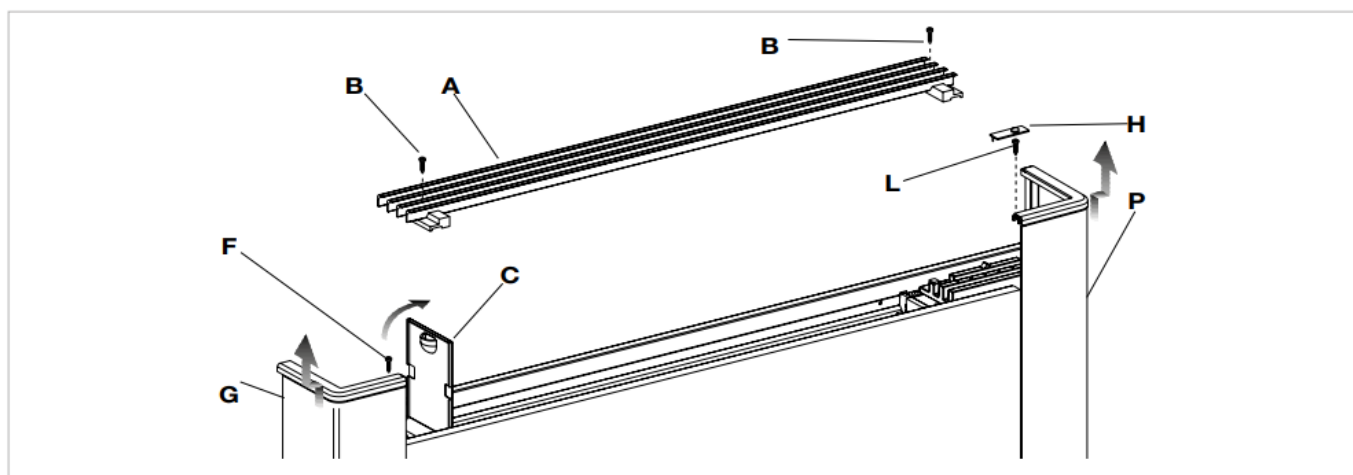

- Remove the lower front grill;
- Loosen the fixing screws on the front panel and dismount it;
- Extract and remove the cut off polystyrene insulation pieces from their special seats;
- Loosen the fixing screws on the front closing brackets and dismount them from the frame;
- Remove the battery upper insulation;

B	front panel fixing screws
E	front panel
I	battery upper insulation
J	cut off polystyrene insulation pieces

K	front closing brackets fixing screws
M	lower front grill
N	front closing brackets

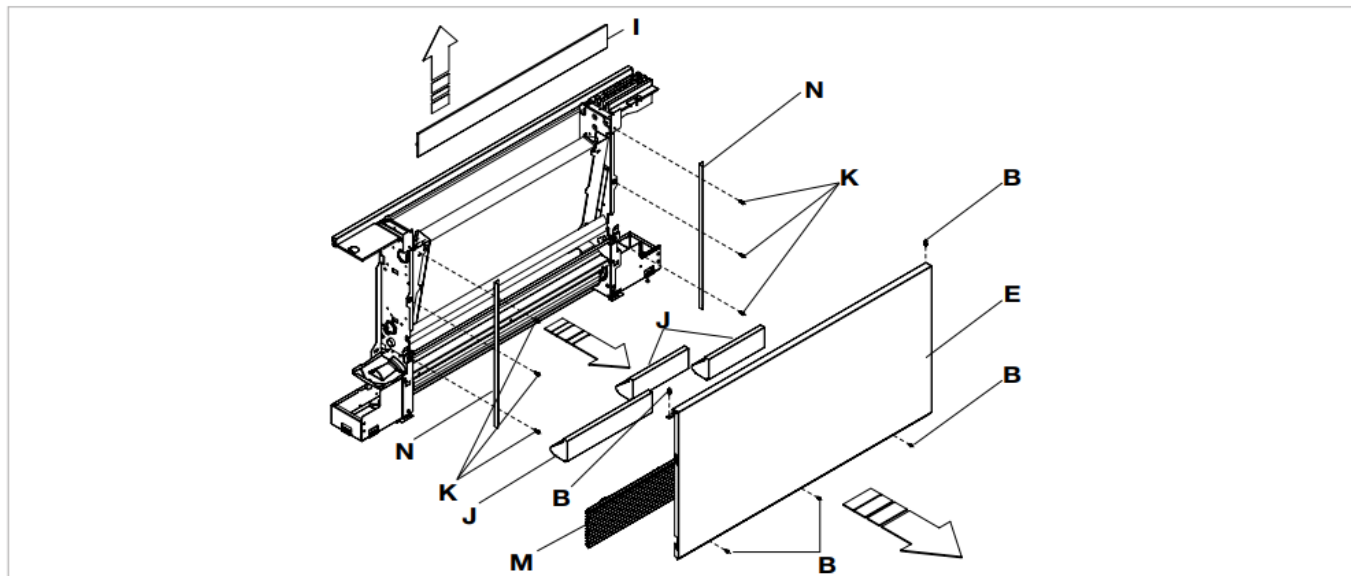


- Mount the front closing bow fixing it with the six cylindrical head screws included in the kit and insulate the front using the special insulation;
- Before proceeding, make sure that the inclination of the unit towards the drainage area is adequate to enable the outflow of water;
- Also check the presence of the transparent plug in the mouth of the drainage pipe opposite the one in which the connections will be made for draining condensation;
- Make the connections for condensation drainage;
- Position the battery upper isolation supplied in the kit; When all the described operations have been completed, remount the components previously dismantled in the first 7 points, following the dismantling operations in reverse order.

Note: in this type of installation, the front grill safety supports must be mounted (see the AURAL ONE installation manual).

O	front closing bowl
Q	connections for condensation drainage
R	special insulation

S	battery upper isolation supplied
W	cylindrical head screws

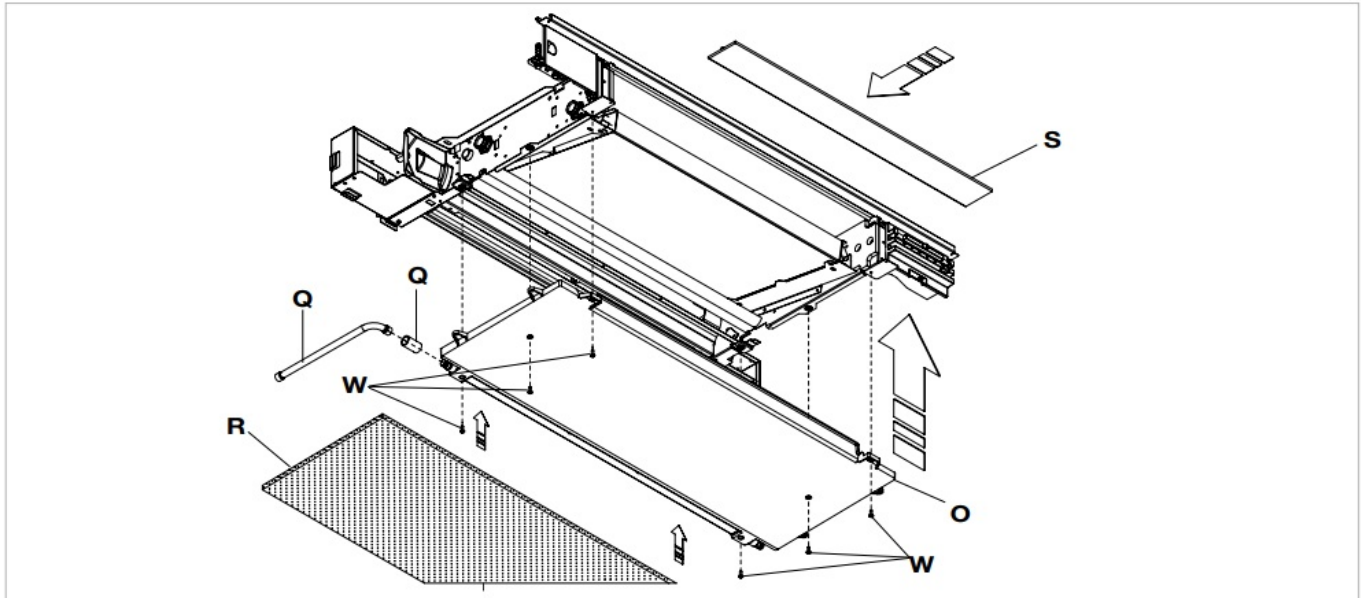

The technical data and aesthetic features of the product can be modified and FONDITAL reserves the right to modify them without notice at any time.

FAQ


- **Q: What are the contents of the kit?**

A: The kit includes a front closure basin, condensate drainage pipe, rubber condensate drainage pipe, upper battery insulation, front basin insulation, transparent cap, safety support for the front grid, cylindrical head screws, and assembly instructions.

- **Q: How do I mount the front closure basin?**

A: To mount the front closure basin, use the six cylindrical head screws provided in the kit and ensure to seal it with the provided insulation material.

Documents / Resources

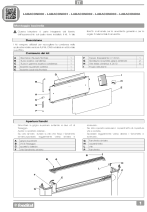

[AURAL LABACOND00 Aural One \[pdf\] Instructions](#)

LABACOND00, LABACOND01, LABACOND02, LABACOND03, LABACOND04, LABACOND00 Aural One, LABACOND00, Aural One, One

References

- [User Manual](#)

Related Posts



[Kindermann 2385579 Front Shelf Instructions](#)

Front Shelf Ref. No. 4013000313 Mounting instructions
2022-04 / 842 230 Subject to alterations Printed in
Germany Kindermann...



[CAKE Makka Front Carrier Instructions](#)

Makka carrier / front Instructions Makka Front Carrier
Items Instructions 1 Remove the plate from the
carrier...



[THULE 321000 Front Stop Instructions](#)

THULE 321000 Front Stop Front load stop to be used
with Thule Side Profiles for roof-mounted racks. parts...



[Intermec PM23c Front Access Door Instructions](#)

PM23c Front Access Door Instructions PM23c Front
Access Door PM23c Front Access Door Instructions
Worldwide Headquarters 6001 36th...

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.