



AUTEL MaxiDAS DS808S-BT Diagnostic Scan Tool User Guide

[Home](#) » [AUTEL](#) » AUTEL MaxiDAS DS808S-BT Diagnostic Scan Tool User Guide 

Contents

- [1 AUTEL MaxiDAS DS808S-BT Diagnostic Scan Tool](#)
- [2 Software Update](#)
- [3 MaxiVCI Mini Firmware Update](#)
- [4 Wireless Data Printing Print via PC](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

AUTEL®

AUTEL MaxiDAS DS808S-BT Diagnostic Scan Tool




Thank you for purchasing this Autel tool. Our tools are manufactured to a high standard and – when used according to these instructions and properly maintained – will provide years of trouble-free performance.

Getting Started

IMPORTANT: Before operating or maintaining this unit, please read these instructions carefully, paying extra attention to the safety warnings and precautions. Failure to use this product properly may cause damage and/or personal injury and will void the product warranty.


- Press and hold the Lock/Power button to turn on the tablet.

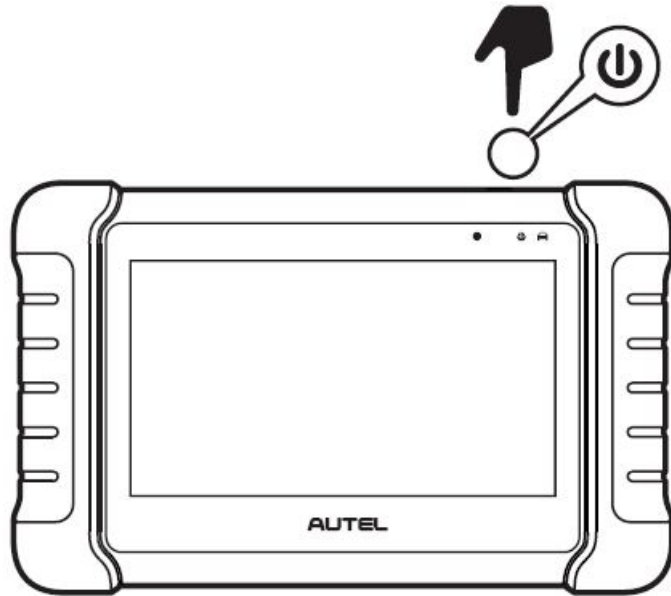

- Scan the above QR code to visit our website at pro.autel.com.
- Create an Autel ID and register the product with its serial number and password.



- Insert the MaxiVCI Mini into the vehicle's DLC, which is generally located under the vehicle dashboard.
- Pair the tablet with the MaxiVCI Mini via Bluetooth to establish the connection.

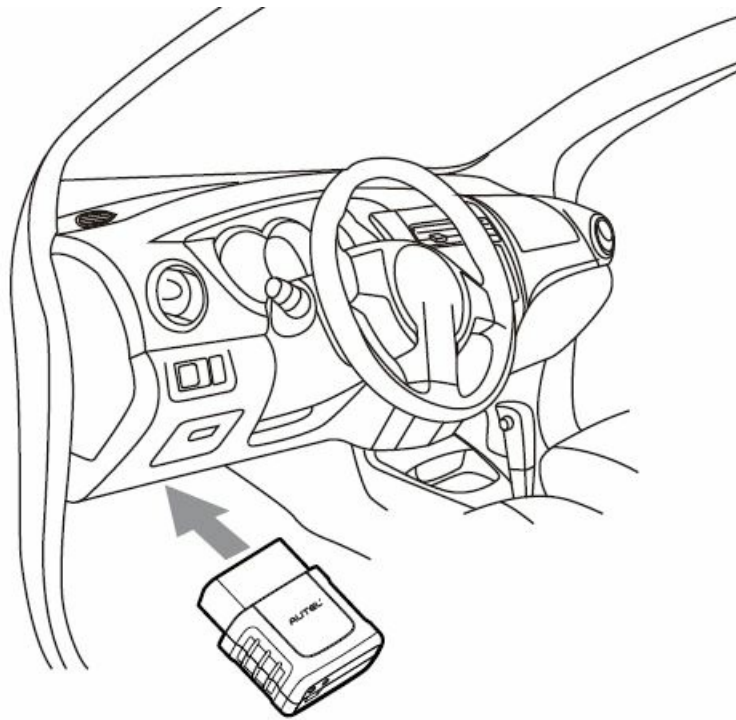

- When the MaxiVCI Mini is properly connected to the vehicle and the tablet, the VCI status button on the bottom bar of the screen will display a green badge at the corner indicating the tablet is ready to start vehicle diagnosis.



Please download the Maxi PC Suite software from www.autel.com > Support > Downloads > Autel Update Tools and install it on your computer.

Software Update

IMPORTANT: Make sure the tablet is connected to the Internet and has sufficient battery or is connected to a power source.

- Tap the Update application button from the Diagnostics Job Menu and the Update screen will display.
- Check for all available updates:
 - if you want to update all the items, tap the Update All button;
 - if you want to update one or some of the items, tap the Update button on the right column of the specific item(s).
- Tap Pause to suspend the updating process. Tap Continue to resume.
- When the updating process is completed, the software will be installed automatically. The previous version will be replaced.

MaxiVCI Mini Firmware Update

- Connect the MaxiVCI Mini to a computer using a USB cable.
- Run the PC Suite software on the computer. This was installed along with the installation of the Maxi PC Suite software.
- Click the MaxiVCI Mini icon on the Device Selection window.
- The driver will automatically detect available update(s) for the device.
- Click Update to complete the operation if an update is available. Or
- Connect the MaxiVCI Mini to the tablet using a USB cable.
- Tap VCI Manager from the Diagnostics Job Menu, and then tap Update to complete the operation if an update for the MaxiVCI Mini is available.

Wireless Data Printing Print via PC

IMPORTANT: Make sure the tablet is connected to the same network as the computer, either via Wi-Fi or LAN, and that the computer is connected to a printer.

1. Run the MaxiSys Printer on the computer. This was installed along with the installation of the Maxi PC Suite software.
2. Click Test Print to make sure the printer is working properly.
3. Tap Print on the toolbar of the tablet. A temporary document will be created and sent to the computer.
 - If the Auto Print option in the MaxiSys Printer is selected, the MaxiSys Printer will print the received document automatically.
 - If the Auto Print option is not selected, click Open PDF File to view all the temporary files. Select the file(s) you want to print and click Print.

Print via APP


If a Wi-Fi printer is available, please purchase a Wi-Fi printer APP and install it onto your tablet. To print a file, simply click on the Print button of a saved file on the tablet.

For service and support, please contact us.

<http://pro.autel.com> / www.autel.com / www.maxitpms.com | support@autel.com / supporttpms@auteltech.com 0086-755-2267-2493 (China HQ) / 1-855-AUTEL-US (288-3587) (North America) / 0049 (0) 6103-2000520 (Europe) / +045 5948465 (APAC) / +971 585 002709 (IMEA) Email: sales@autel.com
Web: www.autel.com

© Autel Intelligent Technology Corp., Ltd. All Rights Reserved.

Documents / Resources

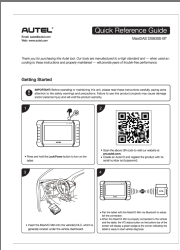	AUTEL MaxiDAS DS808S-BT Diagnostic Scan Tool [pdf] User Guide AUT62060740, 500006379, MaxiDAS DS808S-BT, MaxiDAS DS808S-BT Diagnostic Scan Tool , Diagnostic Scan Tool, Scan Tool
---	--