


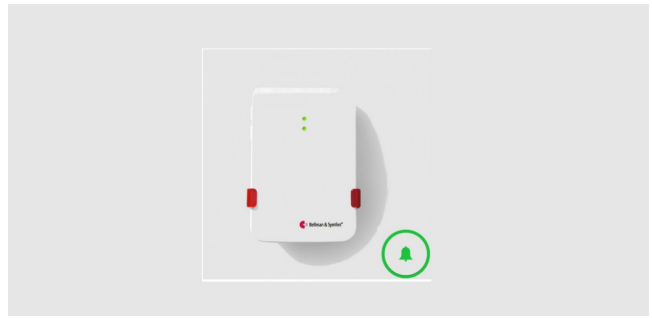

Bellman Symfon BE1431 Visit Reed Switch Transmitter Set User Manual


[Home](#) » [Bellman Symfon](#) » Bellman Symfon BE1431 Visit Reed Switch Transmitter Set User Manual 

Contents

- [1 Bellman Symfon BE1431 Visit Reed Switch Transmitter Set](#)
- [2 Monitors the door and window](#)
 - [2.1 Technical specifications](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)




Bellman Symfon BE1431 Visit Reed Switch Transmitter Set

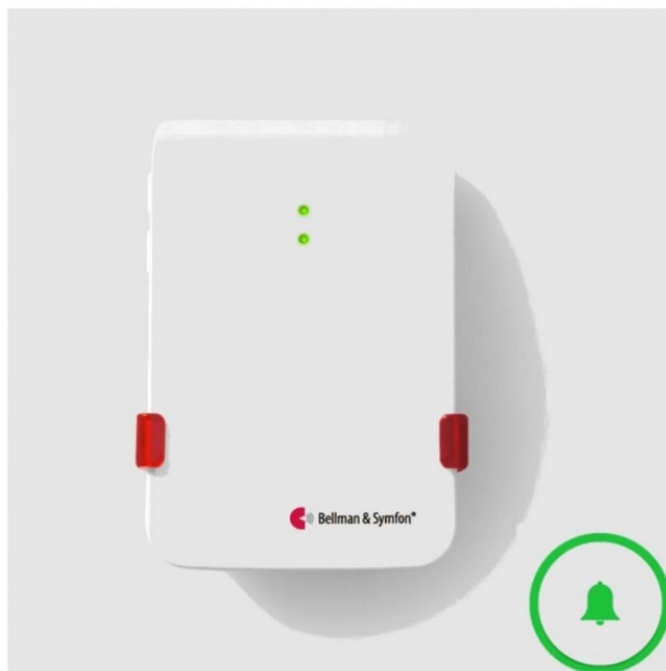

Monitors the door and window

Mount the magnetic switch on the door or window frame and connect it to the telephone transmitter. When the magnets are separated, the transmitter signals the Visit receiver.

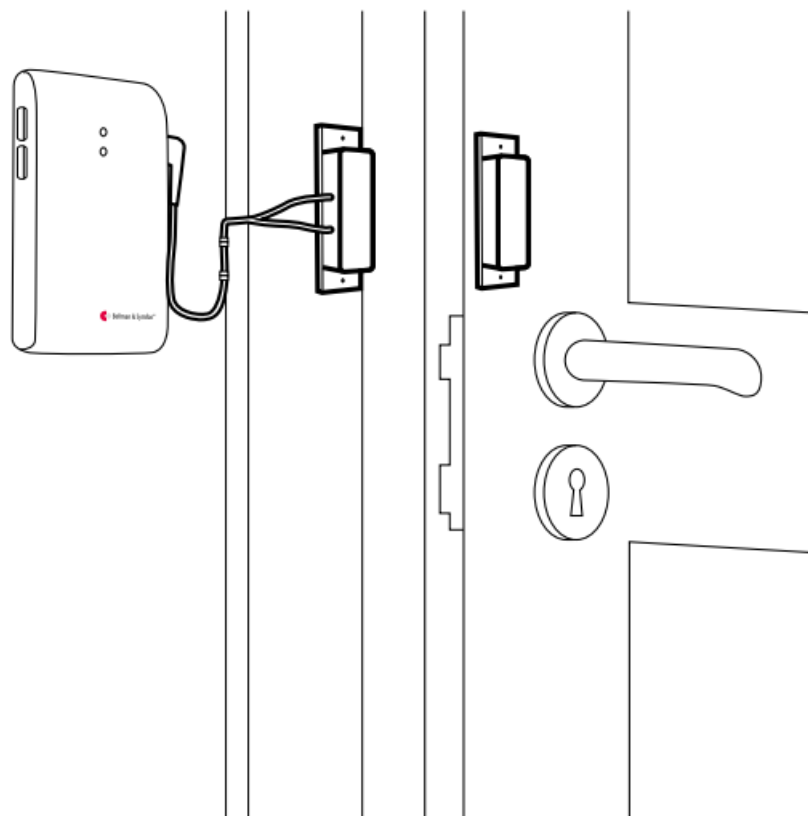


Technical specifications

- Dimensions
25 62 13 mm, 1" 2.5" 0.5"
- Weight
25 g, 0.9 oz.
- Connector
3.5 mm mono jack plug
- Cable length
0.5 m, 1.6'
- Contact breaker
 - Switch ON (door opened) > 2 cm, 0.8" from the magnet
 - Switch OFF (door closed) < 1 cm, 0.4" from the magnet
- Color
White
- Environment
For indoor use only

Documents / Resources

Magnetic switch

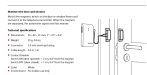

[Bellman Symfon BE1431 Visit Reed Switch Transmitter Set](#) [pdf] User Manual
BE1431, Visit Reed Switch Transmitter Set, Switch Transmitter Set, Reed Switch Transmitter, B
E1431, Switch Transmitter