

BOUNDLESS CFC LITE Aromatherapy Device



BOUNDLESS CFC LITE Aromatherapy Device User Manual

[Home](#) » [BOUNDLESS](#) » BOUNDLESS CFC LITE Aromatherapy Device User Manual 

Contents

- 1 BOUNDLESS CFC LITE Aromatherapy Device
- 2 Product Information
- 3 Product Usage Instructions
- 4 FAQ
- 5 About the LITE
- 6 What is Included
- 7 Key Features
- 8 What's in a CFC LITE Aromatherapy Device?
- 9 How the CFC LITE Works
- 10 Mouthpiece Components
- 11 Documents / Resources
 - 11.1 References



BOUNDLESS CFC LITE Aromatherapy Device



Product Information

Specifications

- Dimensions: 103mm x 34mm x 32mm (3.86 in x 1.34 in x 1.26 in)
- Weight: 9.3 ounces (0.58 lbs)
- Temperature levels: Three preset settings
- Battery Capacity: 1100mAh
- Chamber: Ceramic

Key Features

- Compact and rugged design with textured grooves for comfortable hand placement
- Built with medical and food-grade materials
- Non-combustion aromatherapy device

What's Included in the CFC LITE Aromatherapy Device

- 1 CFC LITE Aromatherapy device
- 5 Stainless steel Mouthpiece Screens
- 5 Stainless Steel Chamber Screens
- 1 Cleaning Brush
- 1 Packing tool
- 1 USB Charger

Product Usage Instructions

How the CFC LITE Works

To turn on the CFC LITE, insert the 18350 battery with the positive side facing up and press the power button five times. The unit will vibrate and cycle through the color of the heating levels. Hold the power button for three seconds to start the heating process.

Mouthpiece Components and Removal

To remove the mouthpiece, push up on either side with your thumb. Fill the bowl with up to 0.4 grams of finely ground herb and reassemble the mouthpiece components by snapping them back into place.

Loading Herb

Ensure the unit is off when loading ground material. Fill the chamber with finely ground herb, not exceeding 0.4 grams, to ensure even heating.

Adjusting Temperature

Hold the power button down for 3 seconds to change the preset temperature.

Cleaning Instructions

Clean the unit right after use to maintain its performance. Remove the mouthpiece plastic and clean with water or isopropyl alcohol. Do not submerge the mouthpiece for longer than ten minutes. Avoid splashing isopropyl alcohol on the body to prevent cosmetic damage.

Cool Down Procedure

Allow the unit to cool down for 5 minutes after two consecutive sessions to protect its longevity and performance.

FAQ

- **Q: How much herb can the CFC LITE chamber hold?**
 - A: The chamber can hold up to 0.4 grams of finely ground herb.
- **Q: What should I do if the device does not power on?**
 - A: Ensure that the 18350 battery is inserted correctly with the positive side facing up and press the power button five times.
- **Q: Can I adjust the temperature settings?**
 - A: Yes, you can adjust the temperature by holding the power button down for 3 seconds to cycle through preset settings.

About the LITE

The CFC LITE has the power and efficiency reminiscent of our bigger units like the CF and CFX but in a smaller fashion. Powered by a removable 18350 battery, the CFC LITE fits comfortably in the palm of your hand and can be easily concealed. There are three preset temperatures which can be easily accessed by holding down the power

button for at least three seconds. Each additional three-second hold will boost the unit to the next available temperature setting. Because the device uses a conduction heating system there is no burning of your herbs which means less odour. The chamber can hold up to .4 of a gram and can be easily maintained by tapping out your used herb after each session.

What is Included

- 1 CFC LITE Aromatherapy device
- 5 Stainless steel Mouthpiece Screens
- 5 Stainless Steel Chamber Screens
- 1 Cleaning Brush
- 1 Packing tool
- 1 USB Charger

Key Features

Dimensions

- 103mm x 34mm x 32mm
- 3.86 in x 1.34 in x 1.26 in
- Weight 9.3 ounces (0.58 lbs)


Temperature levels

- Three preset settings



- Battery Capacity 1100mAh
- Chamber Ceramic
- Compact and Rugged Design
- Features textured grooves for comfortable hand placement.
- Built with medical and food grade material.
- Non-combustion aromatherapy device.

What's in a CFC LITE Aromatherapy Device?

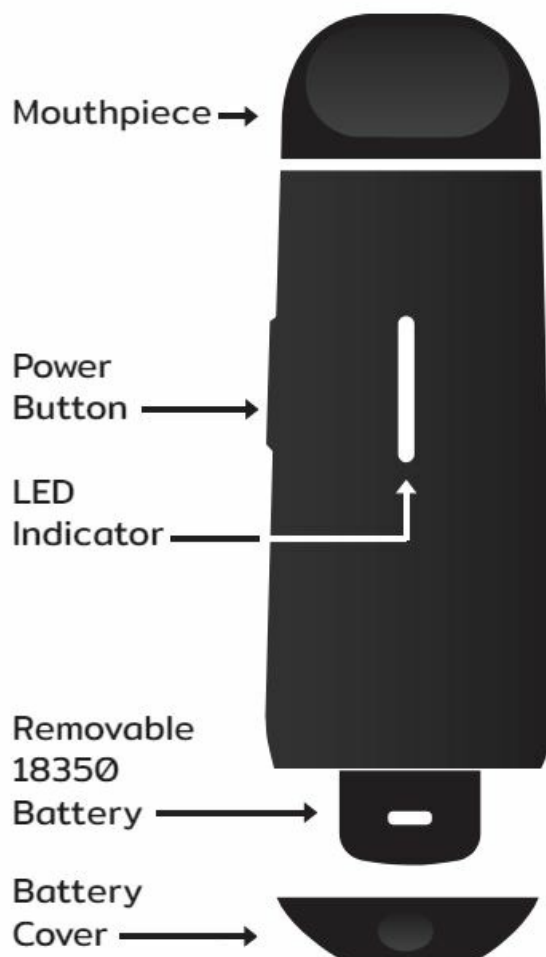

How the CFC LITE Works

The CFC LITE uses conduction heating technology to quickly heat up your herb without the harmful effects of traditional combustion smoke. Battery-operated, the CFC LITE is an efficient unit that is up to .4 of a gram and is perfect for portable on-the-go use. The CFC LITE has an isolated airpath which provides a smooth and even airflow and can produce clouds just as thick as the CF and CFX. The removable 18350 battery can be swapped out when needed; the device can still be charged via USB. When finished with your session make sure to turn off the device by clicking the power button five times consecutively, consequently, the lights will dim off.

How to Power the CFC LITEON

To turn on the CFC LITE be sure to insert the 18350 battery with the positive side facing up and press the power button five times

Please Note

If clicks are too slow the device will not power on. When the device is powered on by inserting the battery, the unit will vibrate and cycle through the colour of the heating levels. You will need to hold the power button for three seconds to start the heating. If the CFC LITE already has the battery inserted:

- a. Device is powered off, click the power button 5 times to turn on it will heat automatically to the last used temperature.
- b. The device is powered on but in Sleep Mode, a three-second hold of the power button will start the heater to the last used temperature.

Mouthpiece Components

Mouthpiece body Silicone encasing Stainless steel screen

How to Remove Mouthpiece

1. With your thumb, push up on either side of the mouthpiece. Once the mouthpiece is removed the white ceramic bowl is clearly visible.
2. Fill the bowl with the desired amount of herb, no more than 0.4 of a gram, and place cap back on. It should easily snap back into place.
3. To disassemble the mouthpiece into separate components tug outwards on the silicon portion that encases the stainless steel screen. Once the silicone is removed you may also pop out the screen if needed




How to Load Herb

*Please make sure the unit is 'OFF' when loading ground material. To load the unit make sure your herb is finely ground up. This will help ensure it is heated evenly. Do not pack the chamber too tightly or overpack. The CFC LITE chamber can hold up to 0.4 grams of finely ground herb.

Adjusting the Temperature



The CFC LITE has three preset temperatures that are indicated by three different colours: green, blue, and red. While the unit is on, hold down the power button for at least three seconds to heat to the first initial preset temperature signalled by the green light; the unit will warm up to 385°F. Hold down the power button for an additional three seconds to heat the device to the next temperature level of 400°F which is indicated by a blue light.

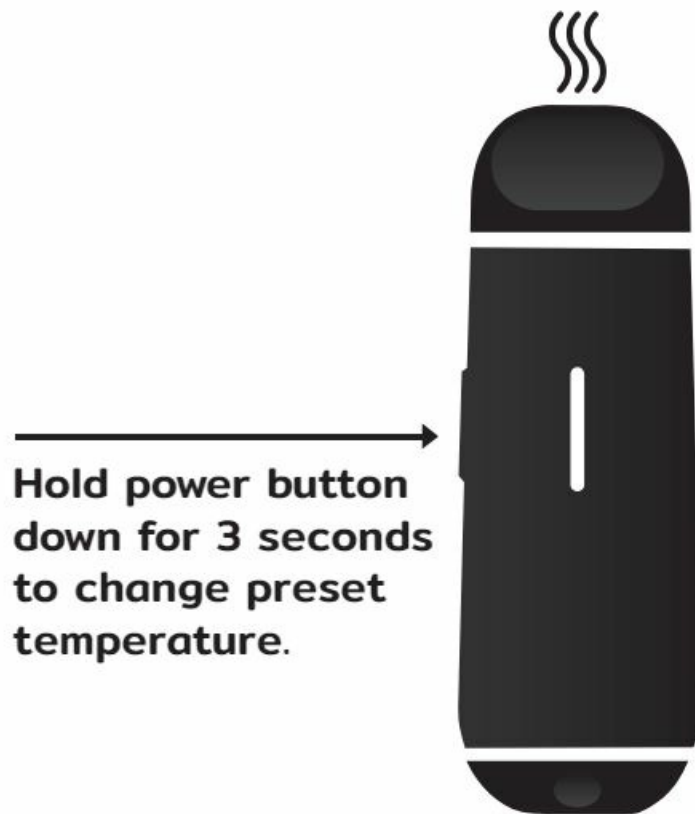

**Hold power button
down for 3 seconds
to change preset
temperature.**

To boost temperature to the highest setting of 425°F hold down the power button for an additional three seconds; once it hits the designated temperature it will be signaled by a red light. With each additional three-second hold down of the power button, the unit will heat to the next preset temperature.

Recommended Cool Down

To protect the overall longevity and performance of the CFC LITE, it is recommended to let the unit cool down for 5 minutes after two consecutive sessions

How to Clean the CFC LITE

- Cleaning the unit right after use is key to keeping your CFC LITE clean and working properly.
- To clean the mouthpiece plastic remove the silicone insert. You may use water or for hard residue use isopropyl alcohol, we recommend 91%.

Do not submerge the mouthpiece in isopropyl alcohol for longer than ten minutes.

The screen can also be taken off individually for an easy clean. Please be advised that only the plastic mouthpiece may be submerged in isopropyl alcohol and NOT the body of the unit. If isopropyl is applied or splashed to the body it WILL cause cosmetic damage and this will not be covered by the warranty. To ensure a long lifespan of the CFC lite be sure to always tap out the used herb when finished and/or clean the chamber with the provided cleaning brush. Please always use caution when cleaning the device.

Battery and Charging

The CFC LITE is equipped with one lithium ion 18350 battery which is located right at the base of the unit. When using the highest setting, 425°F, on average you are able to have 5-6 sessions when the unit is fully charged. Higher temperatures will drain the battery quicker resulting in fewer sessions, conversely, using lower temperatures will increase the number of sessions you are able to have on a full charge. The unit will typically take

about 45 minutes – 1 hour and 30mins to completely charge. Use the USB adapter that was included to charge your device. To check the battery level, simply click the power button one time and the led display will flash between 4 blue led lights to 1 led light. 4 blue flashing lights indicate a full battery charge. It is not advised to use the CFC LITE while charging or to leave it unattended while charging. Also, to prevent overheating do not leave the unit charging overnight or on a bare carpet/rug or leave charging unattended for long periods of time.


Notice

Lithium-ion batteries are subject to degradation and reduced run time over the course of regular use. Boundless Technology took great care in selecting premium quality long-life lithium-ion batteries due to their non-memory features and ability to cycle 300 times preceding degradation battery life will gradually diminish with extended use.

Replacement Parts

Over time there may be some accessories, such as the mouthpiece, mouthpiece screen assembly, screens, and battery that may need to be replaced. To find these accessories please visit www.bndlstech.com.

Documents / Resources

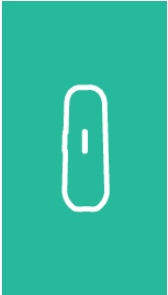	<p>BOUNDLESS CFC LITE Aromatherapy Device [pdf] User Manual CFC LITE Aromatherapy Device, LITE Aromatherapy Device, Aromatherapy Device, Device</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.