

Camplex PULLEYE-1 Pulling Eye Installation Guide


Home » CAMPLEX » Camplex PULLEYE-1 Pulling Eye Installation Guide 🖺

Contents

- 1 Camplex PULLEYE-1 Pulling Eye
- 2 Specifications
- 3 Tools Required
- 4 Installation of Pulling Eye on Multi Fiber Cable
- 5 FAQs
- 6 Documents / Resources
 - **6.1 References**
- 7 Related Posts



Camplex PULLEYE-1 Pulling Eye

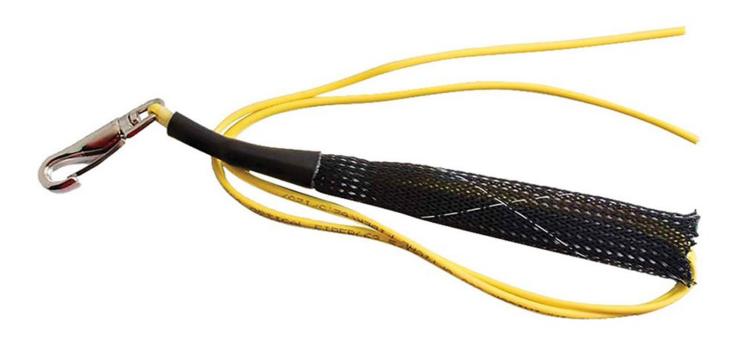

Specifications

• Product Name: Camplex PULLEYE-1 or PULLEYE-2

· Country of Origin: USA

• US ECCN: EAR99

• HTS Code: 8544.42

• US Dept. of Commerce CCATS: N.a

Tools Required

• Electrician Tape (Not Included with PULLEYE-1 or PULLEYE-2)

Installation of Pulling Eye on Multi Fiber Cable

• Step 1

Tape down the central strength legs behind the fanout point.



• Step 2

Cross the legs to form a weave pattern. The length of the weaving depends on the primary cable diameter. Tie it off and trim the excess.




• Step 3

Using electrician tape, wrap the legs firmly.



• Step 4

Pull back the Techflex to insert the connectors.

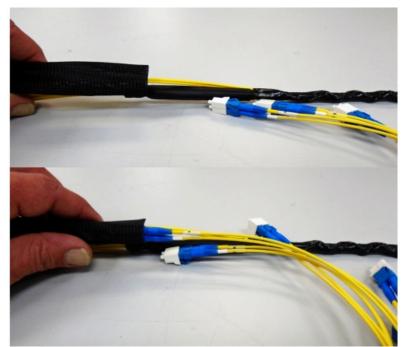

• Step 5

Bring the Techflex over the legs and wrap it with electrician tape.



• Step 6

On final inspection, the tension should occur at the core legs.



Contact Information

• Email: <u>sales@camplex.com</u>

• Website: www.camplex.com

• A Division of Tower Products Incorporated

• Revision #01

FAQs

Q: What should I do if the pulling eye installation is too tight?

A: If the tension is too high when installing the pulling eye, carefully release some of the tension from the core legs before completing the installation.

Q: Can I use regular tape instead of electrician tape for this installation?

A: It is recommended to use electrician tape for this installation as it provides the necessary durability and strength required for securing the central strength legs.

Export Information

Country of Origin: USA US ECCN: EAR99 HTS Code: 8544.42

US Dept. of Commerce CCATS: N.a A Division of Tower Products Incorporated

Revision #01

sales@camplex.com www.camplex.com

Documents / Resources



<u>Camplex PULLEYE-1 Pulling Eye</u> [pdf] Installation Guide PULLEYE-1 Pulling Eye, PULLEYE-1, Pulling Eye, Eye

References

- X Broadcast Fiber Optic Cable Solutions and Accessories
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.