



## datacolor SpyderPro Sensor User Guide

[Home](#) » [datacolor](#) » datacolor SpyderPro Sensor User Guide 

datacolor SpyderPro Sensor



## Contents

- [1 What You Get](#)
- [2 System Requirements](#)
- [3 Support](#)
- [4 Before You Begin](#)
- [5 Installation Instructions](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)

## What You Get

- Spyder Pro Sensor
- Serial Number
- Welcome Card with link to software and support resources


- USB-A Adapter

## System Requirements

- Windows 10, 11 32/64
- Mac OS X 10.14 – Mac OS X 14
- Monitor Resolution 1280×768 or greater, 16-bit video card (24-bit recommended, 1GB of available RAM, 500MB of available hard disk space
- Internet connection for software download
- USB-C or USB-A port

## Support

[support.datacolor.com](https://support.datacolor.com)

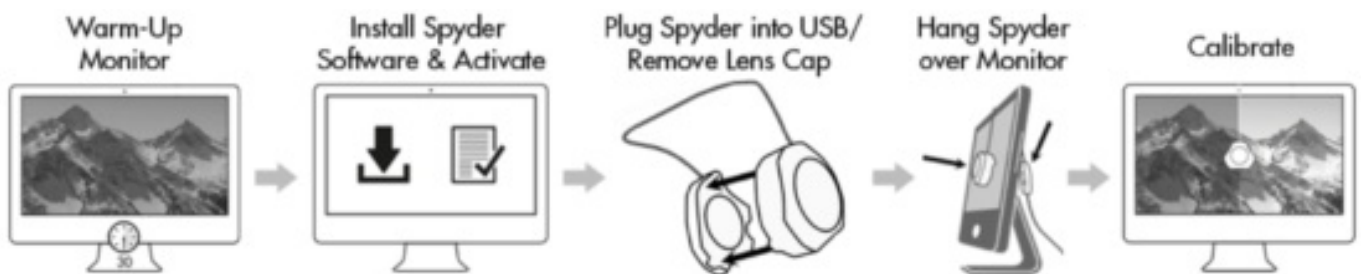

## Before You Begin

Your monitor should be turned on for at least 30 minutes before you begin the calibration process. Make sure that no direct light is falling on your display.




Reset the monitor controls to the factory default settings, if available. Please deactivate any Auto Brightness features on your monitor.

## **Installation Instructions**


### **Step 1 – Install and Activate**

Install the Spyder software from the [Datacolor Website](#). After the installation is complete, plug in your Spyder and launch the software to begin the activation and registration process. This will automatically start your Warranty. Use the Serial Number included in your Spyder package to activate your software.

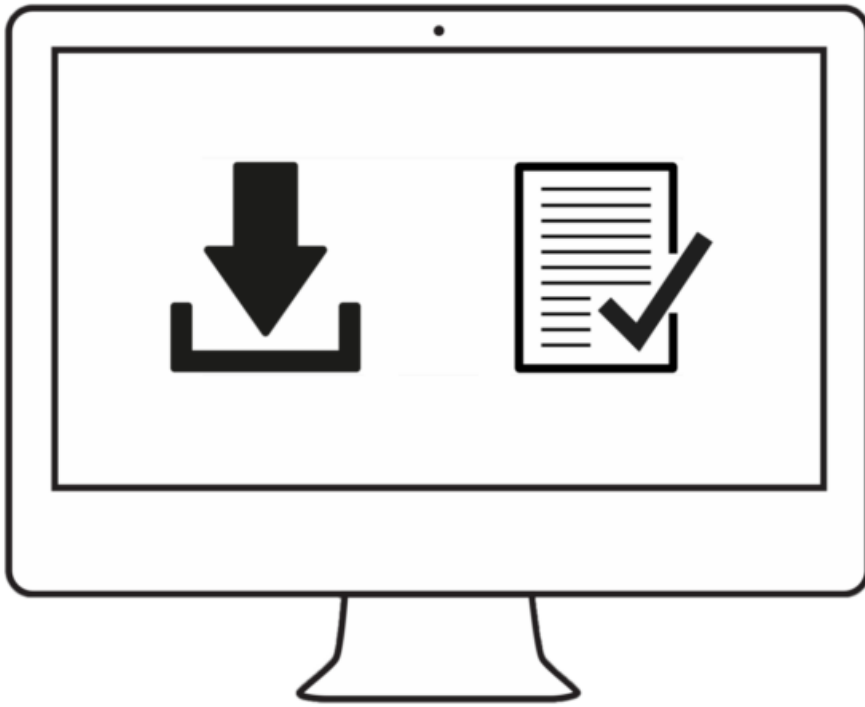


### **Step 2 – Prepare for Calibration**

Ensure your Spyder is plugged into a powered USB port on your computer before you launch the Spyder application. Follow the step-by-step on-screen instructions. Remove the lens cap from the Spyder colorimeter.

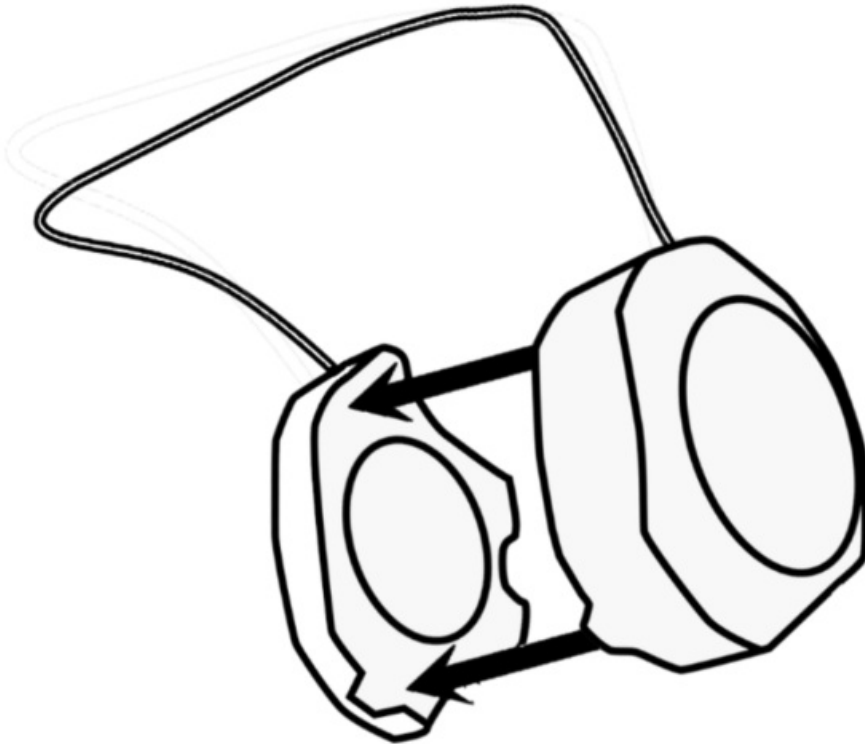

Hang the Spyder unit over your display when asked, using the lens cap, which slides on the USB cable, as a counterweight to keep it in place. If necessary, angle your display back to keep the Spyder flat against your screen.

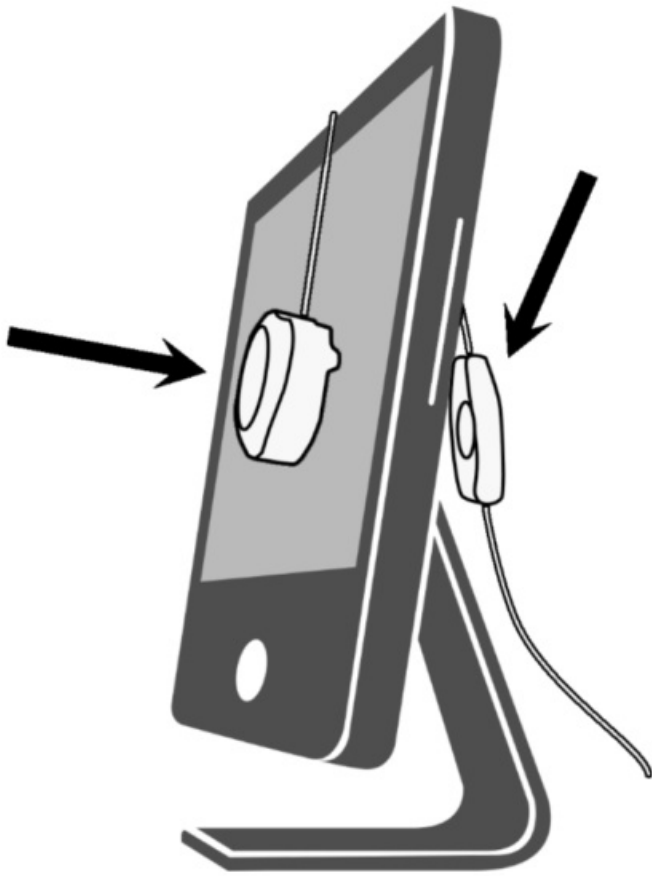

### Step 3 – Calibrate


The Spyder software will walk you through the calibration process and create a custom display profile, which your operating system and color managed applications will use to correct your displayed colors. Click 'Help' in the bottom left corner of the screen to help with any feature of the software. You may also refer to the User Guide or Calibration video for assistance with calibration.



# SpyderPro

# datacolor

## Documents / Resources

	<a href="#">datacolor SpyderPro Sensor</a> [pdf] User Guide SpyderPro Sensor, SpyderPro, Sensor
---	--

## References

- [Datacolor Spyder](#)
- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.