



DELUX MV6DB Ergonomic Wireless Mouse User Manual

[Home](#) » [DELUX](#) » DELUX MV6DB Ergonomic Wireless Mouse User Manual 

Contents

- [1 DELUX MV6DB Ergonomic Wireless Mouse](#)
- [2 overview](#)
- [3 Instructions](#)
 - [3.1 Connection](#)
- [4 Lighting Effects](#)
- [5 Other Functions](#)
- [6 Warranty Conditions](#)
 - [6.1 EU Declaration of Conformity](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)




DELUX MV6DB Ergonomic Wireless Mouse




Dear customer,

Thank you for purchasing our product. Please read the following instructions carefully before first use and keep this user manual for future reference. Pay particular attention to the safety instructions. If you have any questions or comments about the device, please contact the customer line.

overview

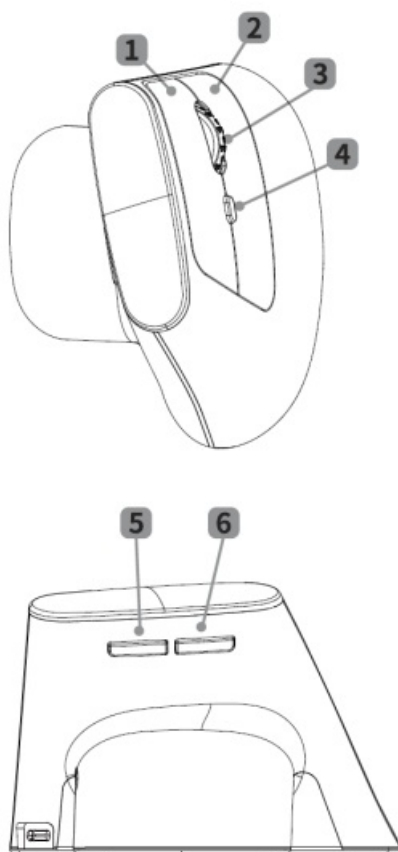

1. Left button
2. Right button
3. Scroll wheel
4. DPI
5. Forward
6. Backward

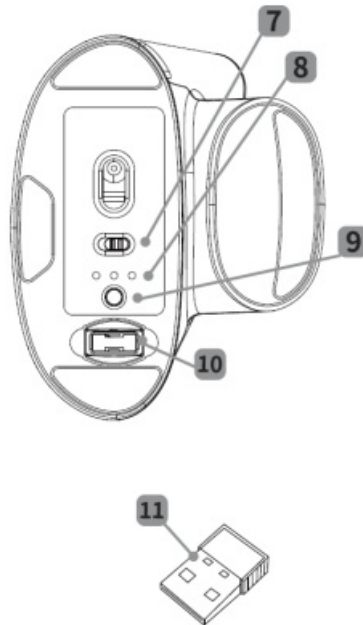

7. On/Off switch Mode indicator
8. Mode switch button
9. Receiver storage slot
10. Receiver

Importer: Alza.cz a.s., Jankovcova 1522/53, Holešovice, 170 00 Praha 7, www.alza.cz

Supported OS: Windows (7/8/10), MacOS

Instructions

Connection

Wired Mode

Connect the mouse to the computer via the USB Type-C port. Tap the mode switch button (9) until the light goes off.

Note: Wired mode cannot be used if the mouse is turned off.

2.4G Wireless Mode

Turn on the mouse after inserting the receiver into the device, then tap the mode switch button (9) to 2.4G wireless mode. The mouse can be used when the corresponding indicator light goes off.

If you need to reset the mode, press the mode switch button for about three seconds when you are in the 2.4G mode, the indicator light flashes quickly, then goes off which means the reset was successful.

Bluetooth Mode

Turn on the mouse, tap the mode switch button to BT1/BT2 mode. The corresponding indicator light flashes, which means you entered the Bluetooth mode. The indicator light will flash quickly when you press the mode switch button for about three seconds, meaning you can search for “BT5.0MOUSE1” or “BT5.0MOUSE2” in

Bluetooth settings of your device. The indicator light will go off when you connect the mouse successfully to your device.

Mode Switching

Short press the mode switch button at the bottom to cyclically switch modes of 2.4G/BT1/BT2. The wireless mode can be shown by the corresponding indicator and the screen displays the current mode name.

DPI Switch

Short press the DPI to cyclically switch DPI. When switching, the light displays the corresponding colour for three seconds, indicating the switching is successful.

- 800 DPI (red light)
- 1200 DPI (green light)
- 1600 DPI (blue light)
- 2400 DPI (purple light)
- 4000 DPI (yellow light)

The driver can furthermore adjust DPI between 600 to 7200 DPI.


Lighting Effects

Press the middle button and backward button to switch lighting modes cyclically: Neon > Cyclical breathing effect > Monochrome light on > Monochrome breathing effect > Off.

Other Functions

- Press the forward and backward buttons for three seconds to turn off their functions to prevent accidental touches.
- Battery detection: The screen displays the battery capacity grid and battery percentage. When the battery voltage is lower than $3.3\pm0.1V$, the battery capacity is about 20%.
- Wired mode and 2.4G wireless mode can be used with driver.
- Working distance is about 10 metres.

Driver Settings: Open the driver setting interface (mouse must be connected prior opening the driver software). Here you can customize keys, macros, DPI, light, parameters and so on.

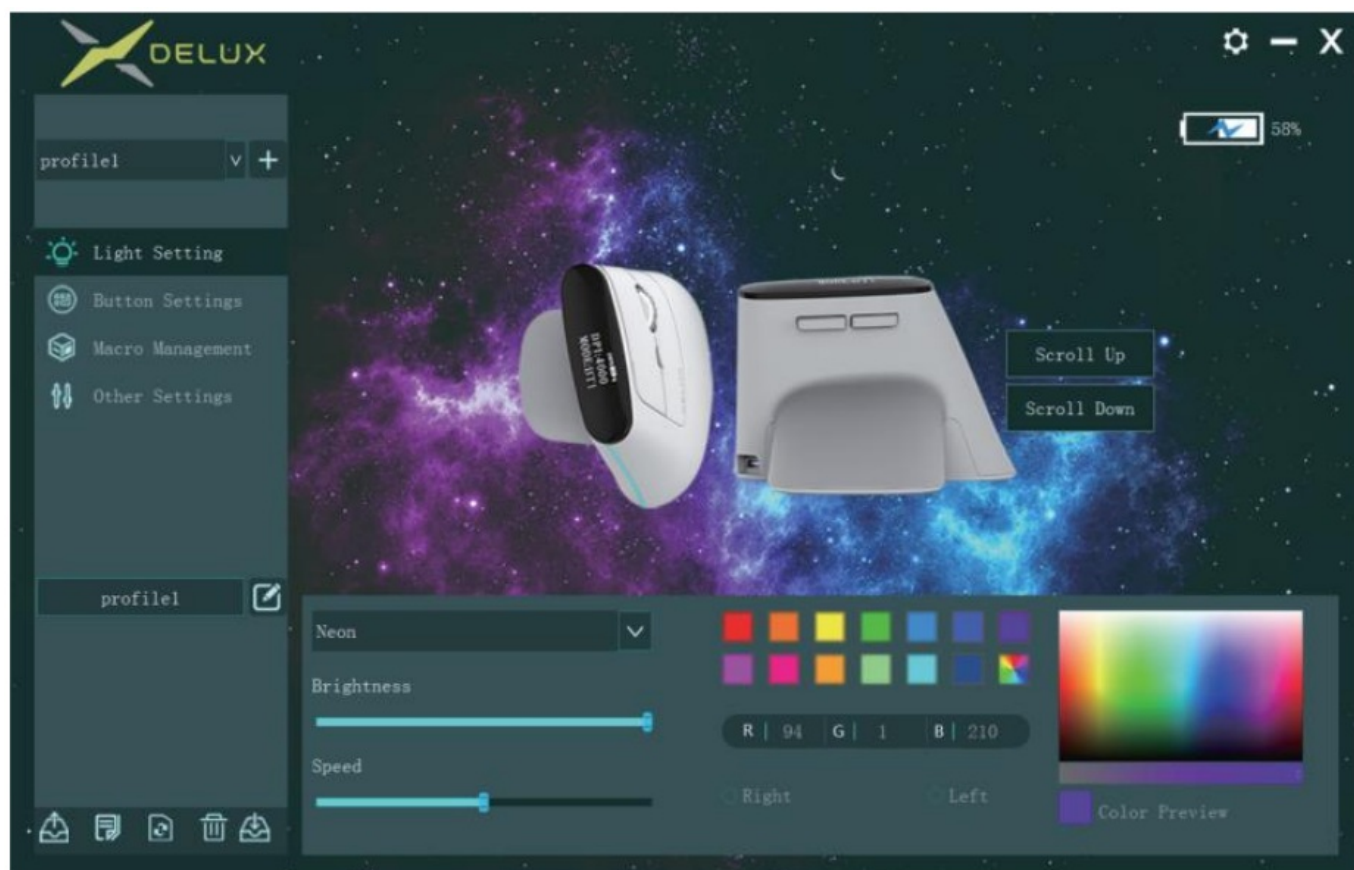

Warranty Conditions

A new product purchased in the Alza.cz sales network is guaranteed for 2 years. If you need repair or other services during the warranty period, contact the product seller directly, you must provide the original proof of purchase with the date of purchase.

The following are considered to be a conflict with the warranty conditions, for which the claimed claim may not be recognized

- Using the product for any purpose other than that for which the product is intended or failing to follow the instructions for maintenance, operation, and service of the product.
- Damage to the product by a natural disaster, the intervention of an unauthorized person or mechanically through the fault of the buyer (e.g., during transport, cleaning by inappropriate means, etc.).
- Natural wear and aging of consumables or components during use (such as batteries, etc.).
- Exposure to adverse external influences, such as sunlight and other radiation or electromagnetic fields, fluid intrusion, object intrusion, mains overvoltage, electrostatic discharge voltage (including lightning), faulty supply or input voltage and inappropriate polarity of this voltage, chemical processes such as used power supplies, etc.
- If anyone has made modifications, modifications, alterations to the design or adaptation to change or extend the functions of the product compared to the purchased design or use of non-original components.

EU Declaration of Conformity

Identification data of the manufacturer's / importer's authorized representative

- **Importer:** Alza.cz a.s.

- **Registered office:** Jankovcova 1522/53, Holešovice, 170 00 Prague 7
- **CIN:** 27082440

Subject of the declaration:

- **Title:** Mouse
- **Model / Type:** Delux MV6DB

The above product has been tested in accordance with the standard(s) used to demonstrate compliance with the essential requirements laid down in the Directive(s):


- Directive No. 2014/53/EU
- Directive No. 2011/65/EU as amended 2015/863/EU
- Prague, 30.9.2022

www.alza.co.uk/kontakt

+44 (0)203 514 4411

WEEE: This product must not be disposed of as normal household waste in accordance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE – 2012/19 / EU). Instead, it shall be returned to the place of purchase or handed over to a public collection point for the recyclable waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Contact your local authority or the nearest collection point for further details. Improper disposal of this type of waste may result in fines in accordance with national regulations.

Documents / Resources

 <p>MV6DB User Manual - Uživatelský manuál - Wirdtely manual - Handblyk handleiding - Kortomhandleiding</p>	<p>DELUX MV6DB Ergonomic Wireless Mouse [pdf] User Manual MV6DB Ergonomic Wireless Mouse, MV6DB, Ergonomic Wireless Mouse, Wireless Mouse, Mouse</p>
---	--

References

- 🌐 Alza.sk – rýchly a pohodlný nákup odkiaľkoľvek | alza.sk
- 🌐 alza.at
- 🌐 alza.co.uk
- 🌐 alza.de
- 🌐 alza.hu
- 🌐 alza.sk