



DOSMONO C201 Translation Pen Real-Time Voice to Text Reading Translator Device User Manual

[Home](#) » [DOSMONO](#) » DOSMONO C201 Translation Pen Real-Time Voice to Text Reading Translator Device User Manual 

Contents

- [1 DOSMONO C201 Translation Pen Real-Time Voice to Text Reading Translator Device](#)
- [2 Product list](#)
- [3 Function button introduction](#)
- [4 Preparation before using](#)
- [5 Battery charging](#)
- [6 Power on and off](#)
- [7 Bluetooth connection](#)
- [8 Status bar](#)
- [9 Troubleshooting](#)
- [10 FCC Warning](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

DOSMONO


DOSMONO C201 Translation Pen Real-Time Voice to Text Reading Translator Device



Product list



Main unit*1 pcs

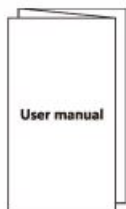

User manual*1 pcs




USB cable*1 pcs

Warning

Do not disassemble, impact, crush or throw into fire. In case of severe swelling, do not continue to use. Do not put it in high temperature environment. Do not use the battery after soaking in water. Use only dedicated chargers.

Function button introduction

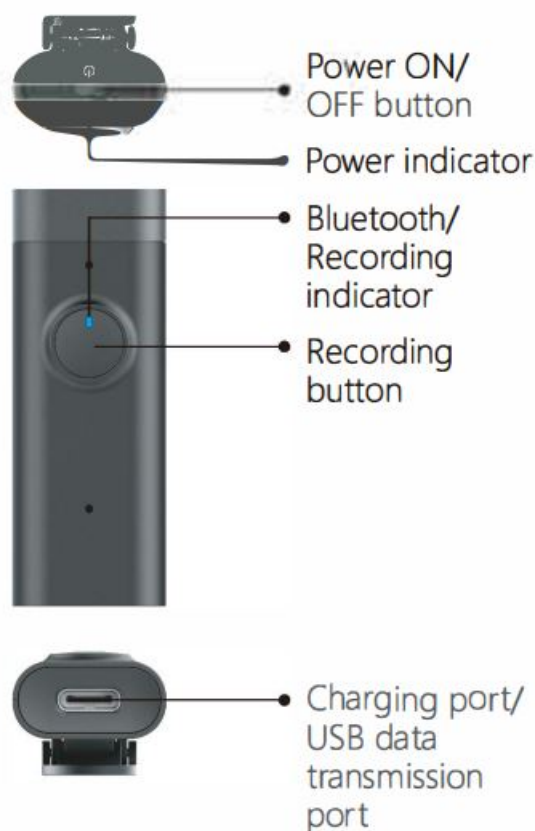

Quick guide

Dimension	60*22*16.2(including the back splint)
Memory EMMC	16GB/32GB
CPU	ATS2837, dual core 240MHZ CK802+400MHZ 32bit DSP
Storage/ Recording time	16GB/ard100H, 32GB/ard210H
Recording time	Around 10H
Connection method	Dual mode、Bluetooth 5.0
Computer OS	WINDOWS XP/VISTA/ WINDOWS7 above
Phone OS	Andriod 5.0 above / IOS9.0
Battery	220mAh
Pickup distance	Less than or equal to 3M
Working Temperature	-10~55℃

Preparation before using

This device can be used alone, and also support a Bluetooth connection to the application “Dosmono voice assistant”. Scan the QR code on the BFTE right and download Support the system the APP”Dosmono voice of ios and Android assistant”, or it is available to search in the APP store and download accordingly. Please connect to the APP and make the activation and pairing the first time to use the device Log in on the “Dosmono voice assistant” APPclick the “Recording” button in the bottom to search for the correct Bluetooth to connect. The device would be automatically activated after connected successfully.

Battery charging

Low battery: when the remaining power is less than 10%, the red power indicator on the top starts to flash. The device will be automatically turned off when the battery level is below the threshold. Please charge the device then. While charging the red power indicator on the top starts to flash; the front blue light stays on when Bluetooth is connected; the light flashes when Bluetooth is not connected; while the Bluetooth is disconnected, the front blue light will be off for three minutes later and the device will be automatically turned off. Charging completed, the red power indicator will stay on

Power on and off

Power on

Push the power switch to the other side and hold for 3 seconds, the device will be turned on, with the red power indicator on.

Power off

Push the power switch to the other side and hold for 3 seconds, the device will be turned off with the red power indicator off

Bluetooth connection

After turned on, the blue light flashes and the device will enter the bluetooth Connection status, Connection is completed, the blue light will stay on.

Status bar

Reset Bluetooth

Push the power switch to the other side and hold for 8 seconds, and the light Bluetooth starts to flash.

Record

Recording Long press the recording button, and the front red indicator flashes. The device will start to record.

Recording pause

Long press the recording button, the front red indicator will be off and shift to blue color. Note: This product is not equipped with a power adapter when it is shipped. If consumers use a power adapter for power supply, they should purchase a power adapter that has obtained CCC certification and meets the standard requirements. The water must not be exposed to such conditions as sunlight, fire or similar Overheating

Troubleshooting

The device cannot connect to APP

1. Please make sure the device is turned On.
2. Please reset the Bluetooth.

None response from the product

- The device is not turned on. Please push the Power ON/OFF button and turn it on.
- The device is not connected to the APP
- It will be automatically turned off three minutes later after the standby status. Please push the power on/off button to the other side to restart. Cannot turn on It may be caused due to the low battery. please retry after charging Use alone, without connection to APP The device can be used independently and the file can be saved in the list in the APP after completed recording while the device is not connected to the APP

How to transfer the recording to text

While the device is connected to the APP it could transfer to text in real-time and saved in audio and text.

AI voice recorder supports upgrade

The firmware would upgrade irregularly. The device will upgrade automatically while it is connected to the "Dosmono voice assistant" APP and the latest upgraded firmware package will download. Only when the product is connected to the "Dosomo voice assistant app can the AI voice recorder upgrade the firmware. While upgrading, please make sure the reminding power is above 30%.


Description of poisonous substances

Description	Poisonous substance or element					
	Pb	Hg	Cd	Cr (VI)	PBDE	PBB
Main unit	X	O	O	O	O	O
USB cable	O	O	O	O	O	O
Package	O	O	O	O	O	O

O: indicates that the contents in the materials of the components are below the limit stipulated in GB/T 26572-2011.

X: indicates that the contents in the materials of the components are above the limits stipulated in GB/T 26572-2011.

(further explanation for the technical reasons is allowed according to the actual situation if it is "X" filled in here).

 The figure on this label means that the environment-friendly using period of the product is 10 years under normal condition. The labels of environment-friendly using period of some parts may be changed, and their environment-friendly using periods are subject to the figures marked on the labels.

Promise that the product complies with the national pollution control and management measures for electronic products (including the limit requirements for toxic and harmful substances in electronic products and the pollution control and labeling requirements for electronic information products). the environmental protection period marked by the product shall not be leaked or mutated in the case of normal use within the corresponding period. The use of the electronic information product shall not cause serious pollution to the environment or serious damage to the person or property of the user

Warranty card:	Products information
User info:	
Name_____Tel_____	
Address_____	
SN No. _____	Purchasing channel_____
Description_____	Order No. _____
_____	If you need after - sales service, please contact the customer service channel or telephone our customer service to answer. Please fill in this card and send it back with the product.

Certificate of Approval

FCC Warning

\$15.19 Labeling requirements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

\$15.21 Changes or modification warnings

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.


Information to the user

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna
- 2. Increase the separation between the equipment and receiver.
- 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Documents / Resources

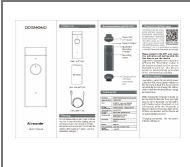	<p>DOSMONO C201 Translation Pen Real-Time Voice to Text Reading Translator Device [pdf] User Manual C201, 2A33KC201, C201 Translation Pen Real-Time Voice to Text Reading Translator Device, C201, Translation Pen Real-Time Voice to Text Reading Translator Device</p>
---	--