




easy home GM-02 White Noise Machine User Manual

[Home](#) » [EASY HOME](#) » easy home GM-02 White Noise Machine User Manual 


easy home GM-02 White Noise Machine User Manual



Contents

- 1 BUTTON INDICATION
- 2 QUICK TIPS
- 3 FEATURES
- 4 PRODUCT SPECIFICATIONS
- 5 PACKAGE INCLUDED
- 6 MAINTENANCE
- 7 CLEANING
- 8 Q&A
- 9 EMC INFORMATION
- 10 WARRANTY
- 11 EXPLANATION OF SYMBOLS
- 12 Documents / Resources

BUTTON INDICATION

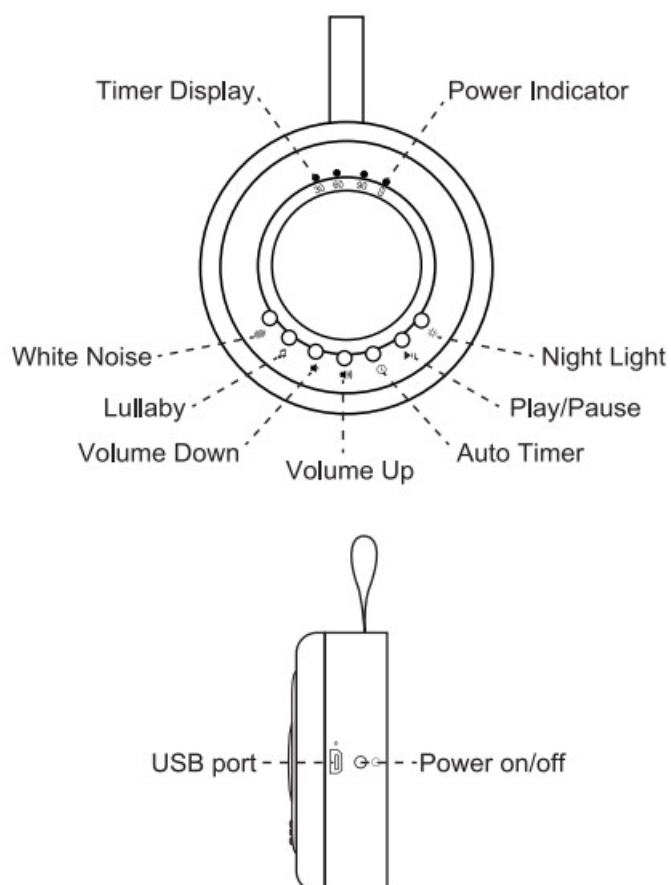

QUICK TIPS



Connect the power cable to the power port and a USB adapter (not included), the power indicator lights up red when charging, and turns green to indicate that the product is fully charged.

NOTE: It cannot be used while charging.




Press the power button to turn the machine ON. A green light will flash one time to indicate the machine is ON. Press the power button a second time to turn the machine OFF.


 Press the Button "Play/Pause"


 Press to play white noise sounds

Press repeatedly to cycle through the different sounds

NOTE: When the sound machine is turned on, it will always default to the last sound used.

 Press to increase or decrease the volume.


(30 60 90) Using the Auto-Timer: When you are listening to a sound you may set a timer 30,60,90 minutes as your desire. So the (30 60 90) machine will automatically turn off as the time you set. Press the timer button once for 30 minutes, a second time for 60 minutes, a third time for 90 minutes and a fourth time to turn the timer OFF. An indicator light will show the timer setting. If the timer indicator is OFF, the timer is OFF.
The timer can only be set when sound is playing.

 Light button. First press for lighting up, second press making the light brighter, third press turning the light off.

FEATURES

Night Light

20 Sounds: 5 white noises, 5 fan sounds, 10 natural sounds (Lullaby 1, lullaby 2, lullaby 3, womb sounds, train, running water, raining, ocean, bonfire burning, bird calls)

Timer: 30, 60, 90 minutes

Memory Function

PRODUCT SPECIFICATIONS

Model: GM -02

Speaker: 28mm, 403W

Input Power: DC5V  1A

Battery Model/Capacity: 103048-1500mAh

Use time: 7h-20h

Product Size: (T)85.6mm*(H)28.5mm

PACKAGE INCLUDED

- 1* White Noise Machine
- 1* Type-C cable
- 1* Instruction
- 1* Hook

ATTENTION

Charge it when it is not in operation.

Never attempt to disassemble or repair the product by yourself to avoid damage to the product.

Keep it away from water.

Keep it away from high temperature or fire.
Clean the product with damp cloth, and dry it with dry cloth immediately.
Never use corrosive cleaner to clean the product.

MAINTENANCE

Keep it away from the water to avoid damage. Keep dry and avoid direct sunlight. Keep it away from the high temperature and fire. Recommended storage temperature -5°C-40°C (23°F-104°F)

CLEANING

Don't clean it with corrosive washing aid.
Please use a soft and wet cloth to wipe the surface.

Q&A

Q1: What should I do if it does not turn on?
A1: Please charge it and try to turn it on again.













EMC INFORMATION

The product conforms to test standard(s):
EN IEC 55014-1:2021; EN 61000-4-2:2009; EN IEC 61000-4-3:2020

WARRANTY

This product is warranted by the dealer for one year from the date of retail purchase. It does not cover damages or wear resulting from an accident, misuse or abuse, commercial use, or an unauthorized adjustment or repair of the product.

EXPLANATION OF SYMBOLS

	Date of Manufacture		Manufacturer
	Batch Code		Authorized representative in the European Community
	Recyclable		Temperature limit of -5°C-40°C (23°F-104°F)
	Keep dry		Keep out of reach of children
	CE marking of conformity		WEEE (Waste Electrical and Electronic Equipment)
	Caution		Keep away from sunlight

Healthcare-Manager.com

Questions or comments?

E-mail: service@healthcare-manager.com

Distributed by: Easy Healthcare Corporation


360 Shore Dr., Burr Ridge, IL USA 60527

Made in China



Scan the code to get the manual in more languages.

Documents / Resources

	easy home GM-02 White Noise Machine [pdf] User Manual GM-02 White Noise Machine, GM-02, White Noise Machine, Noise Machine, Machine
---	--