



ECOLITE 2000281C Ledstripe Crait Rgb Med Transformator 2M Instruction Manual

[Home](#) » [ecolite](#) » ECOLITE 2000281C Ledstripe Crait Rgb Med Transformator 2M Instruction Manual 

ecolite[®]

2000281C Ledstripe Crait Rgb Med Transformator 2M
Instruction Manual




Contents

- 1 2000281C Ledstripe Crait Rgb Med Transformator 2M
- 2 Installation:
- 3 Documents / Resources
 - 3.1 References
- 4 Related Posts

2000281C Ledstripe Crait Rgb Med Transformator 2M

CRAIT

Art. nr: 595174, 595175

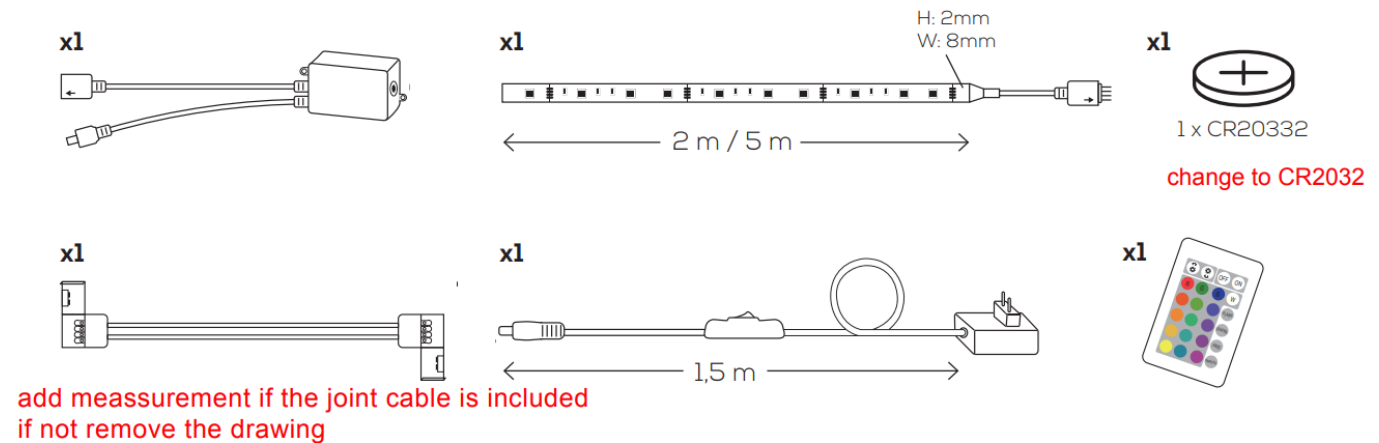

SAFE INSTALLATION


WARNING:

For your protection and safety, carefully read and understand the information provided in this manual completely before attempting to assemble, install or operate this product.

- Lay out the LED strip in the desired location and ensure the area is clean and dry. Do not cut the strips as it will impair the IP rating
- Before use, please check that there is no damage to the product.
- Make sure that the strip is free from all packing before use
- Make sure that the LED strip's voltage corresponds with that of the drive unit and ensure that the polarity is correct.
- When two or more LED strips are connected, make sure the maximum recommended length is not exceeded.
- Make sure the power is switched off during installation and that the LED strips do not overlap to avoid overheating.
- It is important that the LED luminaire's maximum specified ambient temperature is taken into consideration to guarantee its life span, if this is exceeded, the life span can be shortened.
- Use the recommended/approved assembly fittings to ensure the lifespan of the LED strip.

- Do not try to modify the product in any kind of way.
- The LED chip should not be exposed to direct sunlight.
- Do not bend or twist the strips more than 90°.
- Do not operate while the LED strip is coiled.
- This is an electrical product, not a toy! To avoid the risk of injury or electric shock, this product should not be played with or placed where small children can reach it.
- Do not install the fixture near flammable liquids.
- Do not turn on the product before it is completely unpacked.

Installation:

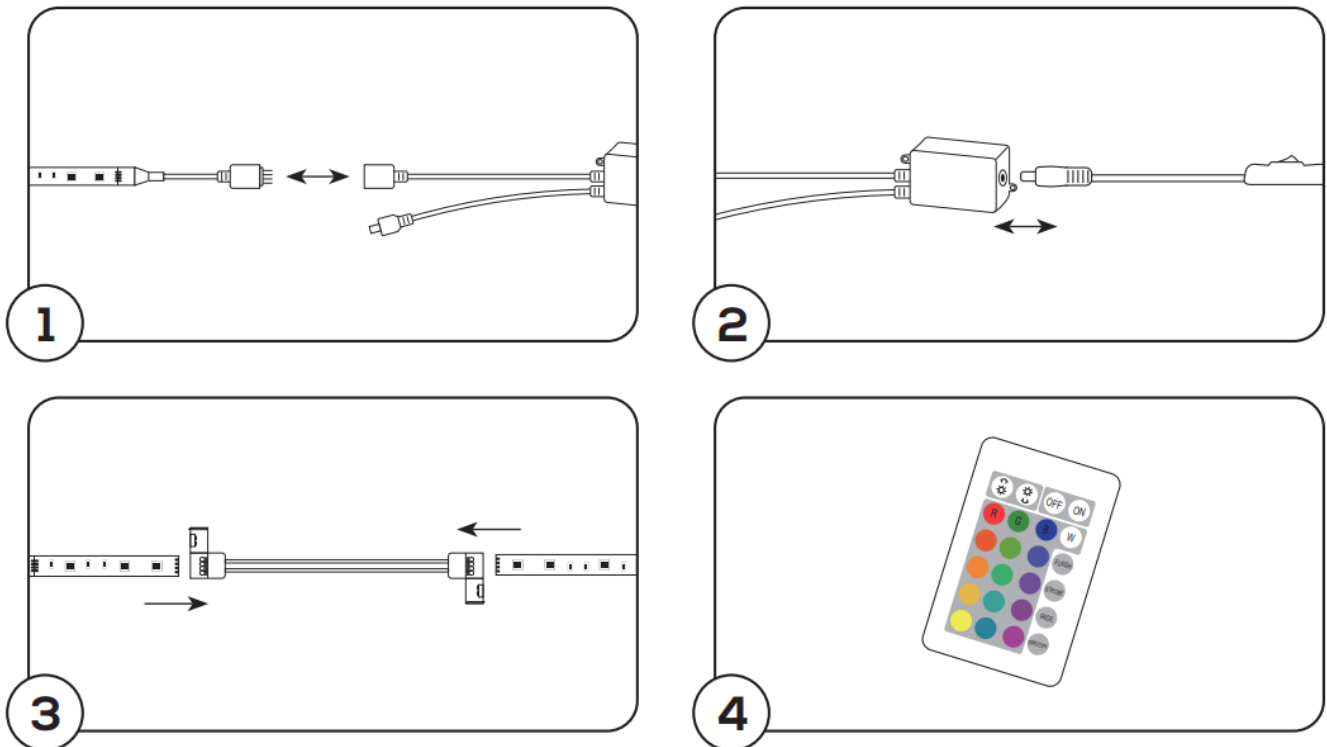

ecolite®

Elektro Elco AB, Tallvägen 5
SE-564 35 Bankeryd, Sweden

www.ecolite.se

UM034

201804

Documents / Resources

	<p>ECOLITE 2000281C Ledstripe Crait Rgb Med Transformator 2M [pdf] Instruction Manual 2000281C Ledstripe Crait Rgb Med Transformator 2M, Ledstripe Crait Rgb Med Transformator 2M, Crait Rgb Med Transformator 2M, Med Transformator 2M</p>
--	--

References

-  h.ecolite.se