

Edaiser B0D7S3GPR4 Magic Keyboard for Apple iPad User Manual

Home » edaiser » Edaiser B0D7S3GPR4 Magic Keyboard for Apple iPad User Manual 🖫



Edaiser BOD7S3GPR4 Magic Keyboard for Apple iPad User Manual

User Manual

for iPad 12.9-inch / 11-inch / 10.9-inch

MAGIC SERIES

Contents

- 1 COMPATIBLE INFORMATION
- **2 SPECIFICATION & ACCESSORY**
- **3 INSTALLATION**
- **4 POWER SOURCES**
- **5 LED INDICATOR**
- **6 BLUETOOTH CONNECTION**
- 7 KEYBOARD FUNCTION for iPad
- 11"/10.9"(P11)
- **8 TRACKPAD GESTURE DESCRIPTION**
- 9 TROUBLESHOOTING
- 10 WARRANTY & TECHNICAL SUPPORT
- 11 Documents / Resources
 - 11.1 References

COMPATIBLE INFORMATION

VERIFY YOUR IPAD IS FULLY MATCHED BEFORE INSTALLATION Compatible for iPad Air 10. 9-inch

iPad Air 10.9 inch 5th Generation 2022 (A2588, A2589, A2591) iPad Air 10.9 inch 4th Generation 2020 (A2324, A2325, A2072, A2316)

Compatible for iPad Pro 11-inch

iPad Pro 11 inch 4rd Generation 2022 (A2759, A2435, A2761, A2762)

iPad Pro 11 inch 3rd Generation 2021 (A2377, A2459, A2301, A2460)

iPad Pro 11 inch 2nd Generation 2020 (A2228, A2068, A2230, A2231)

iPad Pro 11 inch 1st Generation 2018 (A 1980, A2013, A 1934, A 1979)

Compatible for iPad Pro 12.9-inch

iPad Pro 12.9 inch 6th Generation 2022 (A2436, A2764, A2437, A2766)

iPad Pro 12.9 inch 5th Generation 2021 (A2378, A2461, A2379, A2462)

iPad Pro 12.9 inch 4th Generation 2020 (A2233, A2229, A2069, A2232)

iPad Pro 12.9 inch 3rd Generation 2018 (A 1876, A2014, A 1895, A 1983)

Note: If compatibility information is updated without prior notice, You may refer to selling link or contact our seller on Amazon to confirm the latest compatible information .




- 1. Find your iPad model number in settings
 - a, Go to iPad»Settings>General>About
 - b, » Tap on the model number and a model of AXXXX will be appeared.
- 2. Find your iPad model number on the back of your iPad.


SPECIFICATION & ACCESSORY

- Bluetooth operating distance: 10 meters
- Modulation system:GFSK
- Power supply: DC 5V/9V Type-C Charging Port
- Rechargeable battery:500mAh
- Standby time:90 days
- · Charging time:<3hours
- Working time: <5 hours(with backlight)<180hours (with backlight off)
- Works system:iPadOS (abovel 4.6 above)

ACCESSORY INCLUDE

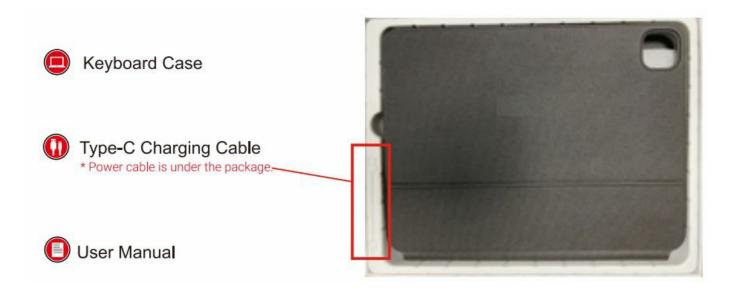

INSTALLATION

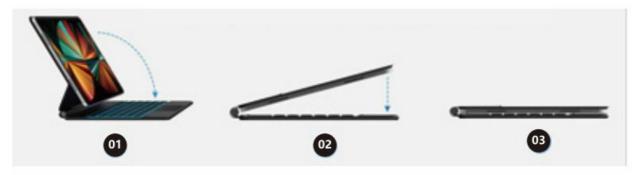

Important: Make sure the back of the iPad is fully attached to the magic cover before folding the cover down or the iPad maybe fall down.





POWER SOURCES



POWER SUPPLY

The keyboard case is charged by TYPE-C



POWER ON/OFF

for iPad Pro 12.9 (P129)

Holding press the power button 1 to turn on the iPad keyboard case. And the LED will be flashed by 3 times once turn it on or off (to press any keys to wake it up during standby mode)



POWER ON/OFF

for iPad Pro 11/iPad Air 10.9(P11)

Double -click(touch) to Power On or Off. (note:single touch time/click is 3 seconds) (the power button is a touch style)

*How to detect the battery level of the keyboard or ensure that the battery level has been successfully charged?

- 1. If the LED charging indicator lights up in red for a long time, it means that is charging.
- 2.After the keyboard is successfully connected to the iPad. swipe right on the iPad home screen. The keyboard battery life is subjeted to the bluetooth icon, see jpg 1.



JPG 1

LED INDICATOR

® INDICATION FOR IPAD PRO 12.9 (P129)

MODEL NO: P129









LED BLUE

- LED Blue Flashing:Bluetooth is waiting for pairing
- LED Blue Lighting:Bluetooth is paired

LED RED

- LED Red Flashing: the battery is low
- LED Red Lighting: the battery is charging

LED GREEN


The battery is fully charged.

WHITE LIGHT

 The light is on when the upper case written, and the light is off when the lower case is written

© INDICATION FOR IPAD PRO 11 & IPAD AIR 10.9 (P11)

MODEL NO: P11

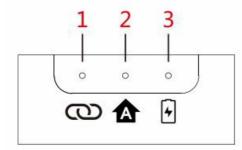

• LED1

Blue Flashing: Bluetooth is waiting for pairing Blue Keep Lighting: Bluetooth is paired

LED2

White: Caps mode is On/Off: Caps mode is Off

• LED3

Red Flashing: Low-battery warning Red Keep Lighting: Undering charging mode Green: Battery is full charged

BLUETOOTH CONNECTION

NOTICE BEFORE CONNECTING:

- 1. Make sure your iPad ios system up to 14.6 or above
- 2. iPad Assistive Touch toggle function on.(Setting/Accessibility/Touch/Assistive Touch.)



STEP 1:


for iPad Pro 12.9 (P129)

Holding press the power button to turn on or off.

for iPad Pro 11/iPad Air 10.9(P11)


Double click the power button to turn on or off.



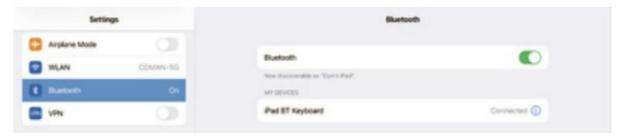

STEP 3:

Find the Pair name on your iPad Settiing - Bluetooth list: " iPad Keyboard "

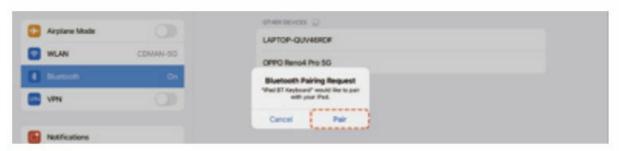

STEP 4

Confirm the pairing request on your iPad.

STEPS FOR CONNECTION: for iPad Pro 12.9 (P129)

- 1. Holding press the power button to turn on the iPad keyboard case.

 (The RGB backlight will turn on and then turn off automatically a second)
- 2. Then to press combination keys 'Fn" and "C" together, blue wireless indicator will flash which shows the keyboard is waiting for pairing mode.
- 3. Turn on your iPad >>> Setting >>> Bluetooth, and search the "ipad-keyboard' on list, then tap it for connection. (device is connected when Bluetooth indicator stops flashing)

STEPS FOR CONNECTION: for iPad Pro 11/iPad Air 10.9(P11)

- 1. Double click/touch the power button \bigcup to turn on the iPad keyboard case. (The RGB backlight will turn on and then turn off automatically a second).
- 2. Then to press combination keys "Fn' and "C" together, blue wireless indicator will flash which shows the keyboard is waiting for pairing mode.
- 3. Turn on your iPad »>Setting »>Bluetooth, and search the "ipad-keyboard" on list, then tap it for connection.

(device is connected when Bluetooth indicator stops flashing).

*How to do if the keyboard can't connect to your iPad?


- 1. Make sure a keyboard has already paired via Bluetooth.
- 2. The Bluetooth keyboard is charged.
- 3. The Bluetooth keyboard is within 33 feet.
- 4. Please delete all devices on your iPad Bluetooth list, then restart your iPad Bluetooth and restart the keyboard.
- 5. Not compatible with multiple device connections, only supports one by one connection.
- 6. When the battery is low, the Bluetooth connection may be interrupted.

NOTE:

- When the keyboard is turned on, if there is no signal input for more than 10 minutes, it will automatically enter sleep mode. At this time, you only need to double-click any button to re-active the keyboard again.
 (do not need to turn on/off the power and reconnected again)
- 2. When reconnecting Bluetooth, the touchpad will a slight delay of about 3 seconds, which is normal, because the touchpad needs to retrieve Bluetooth and connect to it.

KEYBOARD FUNCTION for iPad 11"/10.9" (P11)

A FULL ROW OF HOTKEYS AND MEDIA KEYS

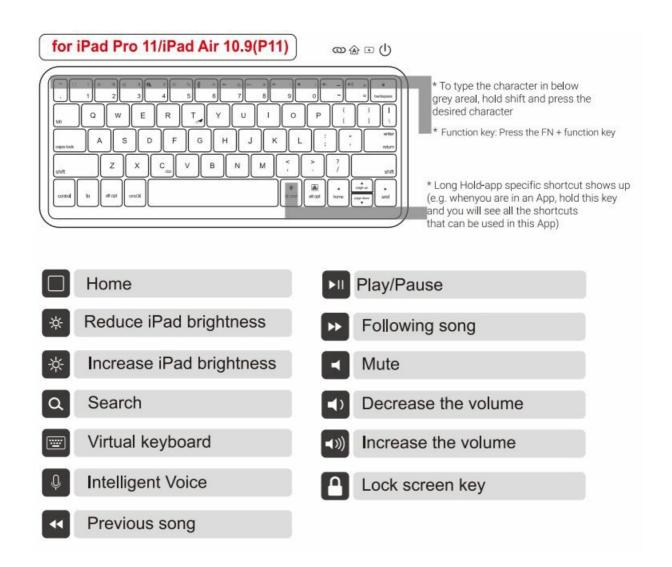


RGB BACKLIGHT:

- 1. 7 Backlight modes: Press fn + to switch 7 different backlight modes or turn off the RGB backlight.
- 2. 3 Brightness backlight mode: press fn + to adjust the brightness of the backlight or turn off the backlit.

NOTE:

For power saving, if you don't touch keyboard for 5 seconds, the backlit would go off automatically, it will light up again when you press any key.

A FULL ROW OF HOTKEYS AND MEDIA KEYS

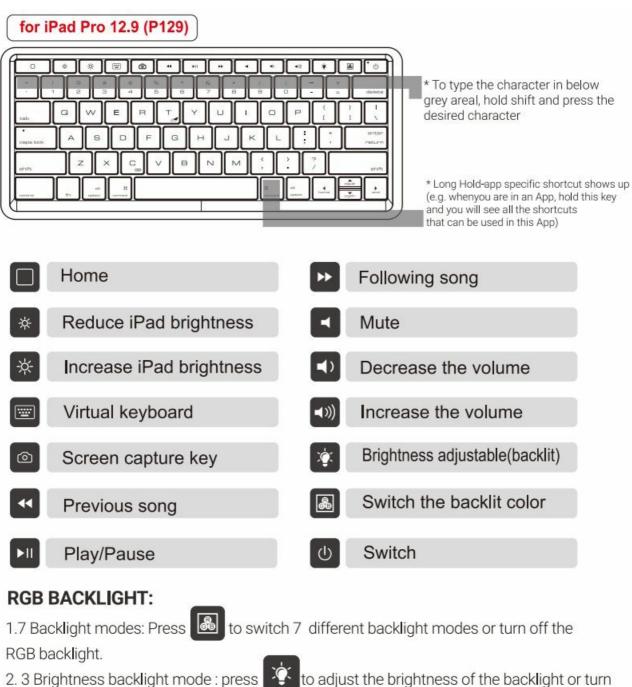

2. 3 Brightness backlight mode: press to adjust the brightness of the backlight or turn off the backlit.

NOTE:

For power saving, if you don't touch keyboard for 5 seconds, the backlit would go off automatically, it will light up again when you press any key.

TRACKPAD GESTURE DESCRIPTION

One Finger



Tap: Press with one finger until it feels a little bit. Tap: and hold Press and hold with one finger.



Open the Dock: Swipe the pointer across the bottom of the screen with one finger.

Go to the home screen: When the dock appears, swipe the pointer across the bottom of the screen again.



Open 'Notification Center': Move the pointer to the status icon in the upper left corner of the screen with one finger, then tap or swipe up again with one finger.

Open 'Control Center': Move the pointer to the

Open "Control Center": Move the pointer to status icon in the upper right comer of the screen with one finger, then tap or swipe up again with one finger.



Drag: Tap and hold the item,then slide your finger on the touch pad to move it.

Double Fingers



Auxiliary tap: Move the cursor to the APP icon with one finger, then tap or tap with two fingers to open the APP menu.



Scroll up or down: Swipe up or down with two fingers Scroll left or right. Swipe left or right with two fingers.



Turn on the Today view. When the home screen or lock screen is visible, swipe right with two fingers.

Open search from the home screen: Swipe down with two fingers.



Zoom: Place two fingers close together, spread to zoom in,or pinch to zoom out.

Three Fingers



Go to the home screen: Swipe up with three fingers



GOpen the APP switcher: Swipe up with three fingers, pause and then lift your finger



Switch between open apps! Swipe right with three fingers, then swipe left or right to switch.

BE SURE THAT TOUCHPAD CAN BE USED ON YOUR IPAD AS BELOW STEPS:

- 1. You need to complete below settings: Settings/Accessibility/Touch/Assistive Touch/Assistive Touch On
- 2. Make sure your iPad Software Version is up to 14.6 or above version.
- Choose right 'Keyboard" on your iPad General/Keyboard/Keyboards/English(US)/QWERTY

*How to updating your iPadOS to 14.6?

To upgrade your iPadOS to the leatest version:

- 1. Open your device's Settings > General > Software Update.
- 2. Tap Download and Install. (If you see Resume Download, tap that instead)



"Touchpad /Gesture

- 1. Make sure the iPadOS operation system up to 14.6 and above.
- 2. Press [Fn]+[T] to turn on/off the touch function.
- 3. After successfully turn on the touch pad, when moving the touchpad with your hand, you will see a cursor appear on the iPad screen.
- 4. The shortcut gestures are based on default setting. Kindly refer to our gesture instructions manual.
- 5. Kindly mind your hands on touchpad when typing, otherwise your cursor may move randomly. you can simply to turn it on or off.
- 6. When every time to connect the Bluetooth, the touch pad will a slight delay of about 3 seconds, which is normal, because the touch pad needs to retrieve Bluetooth and connect to it.

*You can adjust the cursor tracking speed as one of below settings:

- 1. Settings/Accessibility/Touch/Assistive: Touch On the bottom of this page, you can adjust tracking sensitivity, cursor will be slower when it's closer to tortoise, and be more sensitive when it's close to the rabbit.
- 2. Settings/General/Trackpad & Mouse: You can adjust tracking sensitivity, cursor will be slower when it's closer to tortoise and be more sensitive when it's close to the rabbit.

TROUBLESHOOTING

*How to confirm the keyboard need to be charged?

- 1. When the low battery indicator(red sign) blinks, please use the included TYPE-C cable with your iPad charger to recharge it. The red indicator stays on during recharging. After the charging completed, the green indicator would light up.
- 2. If you do not use the keyboard for a long time. Please recharge your keyboard in time (once of two months).

Note: Keep at normal temperature and charge atnormal voltage . If you don' tuse it for long time, you need to charge your keyboard in time(once of two months).

*How to press symbol buttons?

After bluetooth connected well, just press combination Keys: "Shift" and "any symbol". For example, "Shift" and "@ "then you will get"@" on your iPad.

*Why i press A but get a Z

Go to settings / keyboard/ Keyboards/English(US) /QWERTY.

*How to change between lowercase and uppercase on the keyboard?

- 1. The caps lock default function is switch languages. So to type capital letters on the keyboard, please turn off the cap lock default function first.
- 2. Go to your iPad settings–Keyboards setting– hard ware keyboard–turn off the toggle of switch languages using caps lock", then you can change between lowercase and uppercase by press the caps lock key.

*How to do if the space bar doesn't work?

- 1. You can try below settings firstly: Settings/Accessibility/Keyboards/Fu 11 Keyboa rdAccess/Comma nds/
- 2. Then change settings for "Space" from 'activate" to "Clear". If it comes back, then you can also turn Off Full KeyboardAccess.
- 3. Once it is cleared, the space bar would work fine.

*How to do if some keys don't work?

Some of the keys do not work, please try to reset the keyboard by pressing and hold the combination key"L +s+z· for 3s, you'll see the indicator flash once. It shows the keyboard has been reset. After resetting the keyboard, please pair the keyboard with your iPad again.

*If there is delay after you press keys, please kindly check one of iPad Settings as below:

Settings/ Accessibility/Keyboards/Slow Keys Off.


Settings/Accessibility/Keyboards/Slow Keys On 0.1 Seconds.

* If there is repeated characters after you press certain key, please kindly check one of ipad Settings as below:

Settings/ Accessibility/Keyboards/Key Repeat On 0.1 Seconds Settings/ Accessibility / Keyboards/Key Repeat Off.T

*If you have unwanted auto-correction or punctuation, please follow these steps:

- 1. Open Settings app > General> Keyboard > Hardware Keyboard;
- 2. Toggle OFF Auto-Capitalization, Auto-Correction, and"." shortcut (Please refer to the picture below).

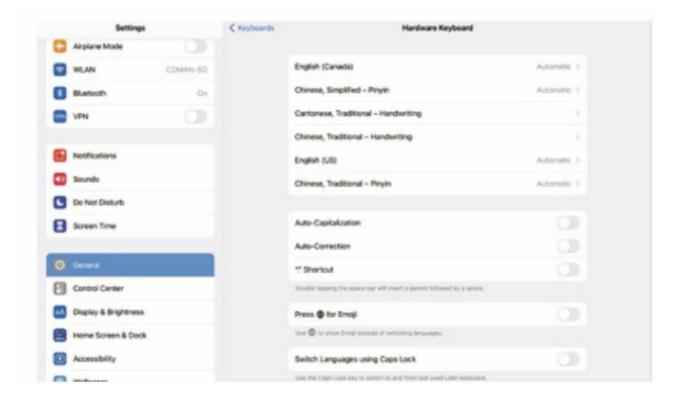

WARRANTY & TECHNICAL SUPPORT

Thank you for purchasing our products. Each product is manufactured under strict quality control. If you have any questions about the product, please contact our brand support or visit our official website to obtain the latest user manual.



Documents / Resources

Edaiser B0D7S3GPR4 Magic Keyboard for Apple iPad [pdf] User Manual
M2 2024, 6th, 5th, 4th, 3rd generation, B0D7S3GPR4 Magic Keyboard for Apple iPad, B0D7S3
GPR4, Magic Keyboard for Apple iPad, Keyboard for Apple iPad, Apple iPad, iPad, Keyboard

References

• <u>User Manual</u>

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.