



edaiser P11 Touch Magic Keyboard Case User Manual

[Home](#) » [edaiser](#) » edaiser P11 Touch Magic Keyboard Case User Manual 

Contents

- 1 edaiser P11 Touch Magic Keyboard Case
- 2 COMPATIBLE INFORMATION
- 3 SPECIFICATION & ACCESSORY
- 4 INSTALLATION
- 5 POWER SOURCES
- 6 LED INDICATOR
- 7 BLUETOOTH CONNECTION
- 8 KEYBOARD FUNCTION
- 9 TRACKPAD GESTURE DESCRIPTION
- 10 Three Fingers
- 11 KEYBOARD FUNCTION
- 12 WARRANTY & TECHNICAL SUPPORT
- 13 Documents / Resources
 - 13.1 References



edaiser P11 Touch Magic Keyboard Case



COMPATIBLE INFORMATION

VERIFY THAT YOUR IPAD IS FULLY MATCHED BEFORE INSTALLATION

Compatible for iPad Air 10.9-inch

- iPad Air 10.9 inch 5th Generation 2022 (A2588, A2589, A2591)
- iPad Air 10.9 inch 4th Generation 2020 (A2324, A2325, A2072, A2316)

Compatible for iPad Pro 11-inch

- iPad Pro 11 inch 4rd Generation 2022 (A2759, A2435, A2761, A2762)
- iPad Pro 11 inch 3rd Generation 2021 (A2377, A2459, A2301, A2460)
- iPad Pro 11 inch 2nd Generation 2020 (A2228, A2068, A2230, A2231)
- iPad Pro 11 inch 1st Generation 2018 (A 1980, A2013, A 1934, A 1979)

Compatible for iPad Pro 12.9-inch

- iPad Pro 12.9 inch 6th Generation 2022 (A2436, A2764, A2437, A2766)
- iPad Pro 12.9 inch 5th Generation 2021 (A2378, A2461, A2379, A2462)
- iPad Pro 12.9 inch 4th Generation 2020 (A2233, A2229, A2069, A2232)
- iPad Pro 12.9 inch 3rd Generation 2018 (A 1876, A2014, A 1895, A 1983)

Note: If compatibility information is updated without prior notice, You may refer to the selling link or contact our seller on Amazon to confirm the latest compatible information.

1. Find your iPad model number in settings a, Go to iPad» Settings>General>About b, » Tap on the model number and a model of AXE will be appeared.
2. Find your iPad model number on the back of your iPad.



SPECIFICATION & ACCESSORY

- **Bluetooth operating distance:** 10 meters
- **Modulation system:** GFSK
- **Power supply:** DC 5V/9V Type-C Charging Port
- **Rechargeable battery:** 500mAh
- **Standby time:** 90 days
- **Charging time:** < 3 hours
- **Working time:** < 5 hours (with backlight) < 180 hours (with backlight off)
- **Works system:** iPadOS (above 4.6 above)

ACCESSORY INCLUDE


 Keyboard Case

 Type-C Charging Cable
* Power cable is under the package.

 User Manual




INSTALLATION

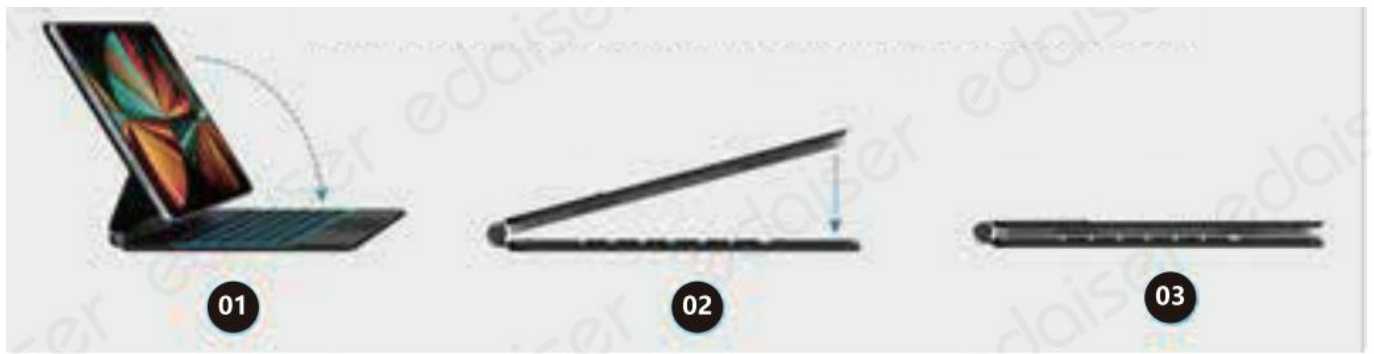

Important: Make sure the back of the iPad is fully attached to the magic cover before folding the cover down or the iPad may fall.



POWER SOURCES

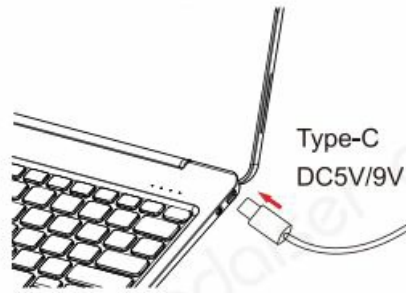

POWER SUPPLY

The keyboard case is charged by TYPE-C

POWER ON/OFF

for iPad Pro 12.9 (P129) Holding press the power button<!> to turn on the iPad keyboard case. The LED will be flashed 3 times once it on or off (to press any keys to wake it up during standby mode)

POWER ON/OFF

for iPad Pro 11/iPad Air 10.9(P11) Double -click(touch) to Power On or Off. (note: single touch time/click is 3 seconds) (the power button is a touch style)

How to detect the battery level of the keyboard or ensure that the battery level has been successfully charged?

1. If the LED charging indicator lights up in red for a long time, it means that is charging.
2. After the keyboard is successfully connected to the iPad. swipe right on the iPad home screen. The keyboard battery life is subjected to the bluetooth icon, see jpg 1.



JPG 1

LED INDICATOR

QINDICATION FOR IPAD PRO 12.9 (P129)

MODEL NO: P129



LED BLUE

- LED Blue Flashing:Bluetooth is waiting for pairing
- LED Blue Lighting:Bluetooth is paired



LED RED

- LED Red Flashing:the battery is low
- LED Red Lighting:the battery is charging



LED GREEN

- The battery is fully charged.




WHITE LIGHT

- The light is on when the upper case is written, and the light is off when the lower case is written

QINDICATION FOR IPAD PRO 11 & IPAD AIR 10.9 (P11)

MODEL NO: P11

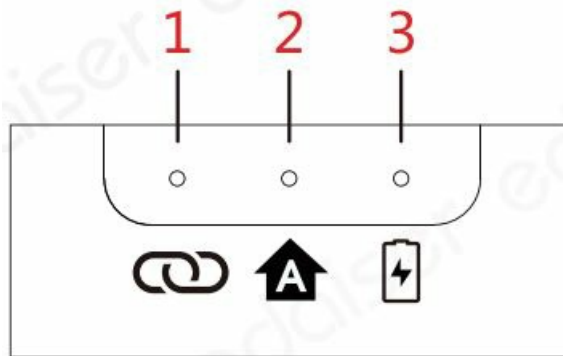

LED1

Blue Flashing: Bluetooth is waiting for pairing Blue Keep Lighting: Bluetooth is paired

LED2

White: Caps mode is On/Off : Caps mode is Off

LED3

- **Red Flashing:** Low-battery warning
- **Red Keep Lighting:** Undering charging mode Green: Battery is fully charged


BLUETOOTH CONNECTION

NOTICE BEFORE CONNECTING


1. Make sure your iPad ios system up to 14.6 or above
2. iPad Assistive Touch toggle function on.(Setting/Accessibility/Touch/AssistiveTouch.)



STEPS FOR CONNECTION: for iPad Pro 12. 9 (PI 29)

1. Holding press the power button  to turn on the iPad keyboard case. (The RGB backlight will turn on and then turn off automatically a second)
2. Then to press the combination keys “Fn” and “C” together, the blue wireless indicator will flash which shows the keyboard is waiting for pairing mode.
3. Turn on your iPad »>Setting »>Bluetooth, and search the “iPad-keyboard” on the list, then tap it for connection. (the device is connected when the Bluetooth indicator stops flashing)

STEPS FOR CONNECTION: for iPad Pro 11/iPad Air 10.9(P11)

1. Double-click/touch the power button  to turn on the iPad keyboard case. (The RGB backlight will turn on and then turn off automatically a second).
2. Then to press the combination keys “Fn” and “C” together, the blue wireless indicator will flash which shows the keyboard is waiting for pairing mode.
3. Turn on your iPad »>Setting »>Bluetooth, and search the “ipad-keyboard” on the list, then tap it for connection. (The device is connected when the Bluetooth indicator stops flashing).

NOTE

1. When the keyboard is turned on, if there is no signal input for more than 10 minutes, it will automatically enter sleep mode. At this time, you only need to double-click any button to re-activate the keyboard. (do not need to turn on/off the power and reconnect again)
2. When reconnecting Bluetooth, the touchpad will a slight delay of about 3 seconds, which is normal, because the touchpad needs to retrieve Bluetooth and connect to it.

STEP 1

- for iPad Pro 12.9 (P129)
 - Holding press the power button to turn on or off.
- for iPad Pro 11/iPadAir 10.9(P11) Double-click the power button to turn on or off.

STEP2


Turn on the Bluetooth and press ‘Fn’ and ‘C’ for connection





STEP 3:

Find the Pair name on your iPad Setting – Bluetooth list: “iPad Keyboard “

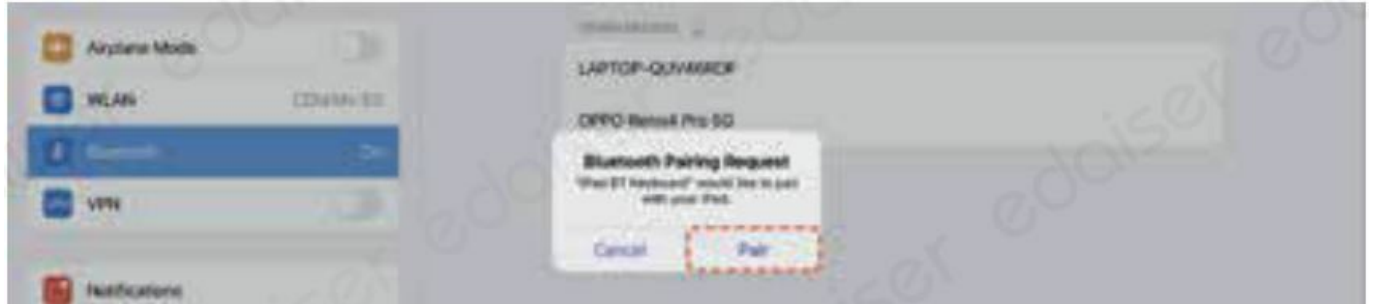

STEP4:

Confirm the pairing request on your iPad.

KEYBOARD FUNCTION

A FULL ROW OF HOTKEYS AND MEDIA KEYS Function key: Press the FN + function key

[for iPad Pro 11/iPad Air 10.9(P11)]







* To type the character in below grey area, hold shift and press the desired character

* Long Hold-app specific shortcut shows up (e.g. when you are in an App, hold this key and you will see all the shortcuts that can be used in this App)



RGB BACKLIGHT

1. 7 Backlight modes: Press  +  to switch 7 different backlight modes or turn off the RGB backlight.
2. 3 Brightness backlight mode: press  +  to adjust the brightness of the backlight or turn off the backlit.


NOTE

For power saving, if you don't touch the keyboard for 5 seconds, the backlit would go off automatically, it will light up again when you press any key.

A FULL ROW OF HOTKEYS AND MEDIA KEYS

Function key: Press the FN + function key

for iPad Pro 12.9 (P129)

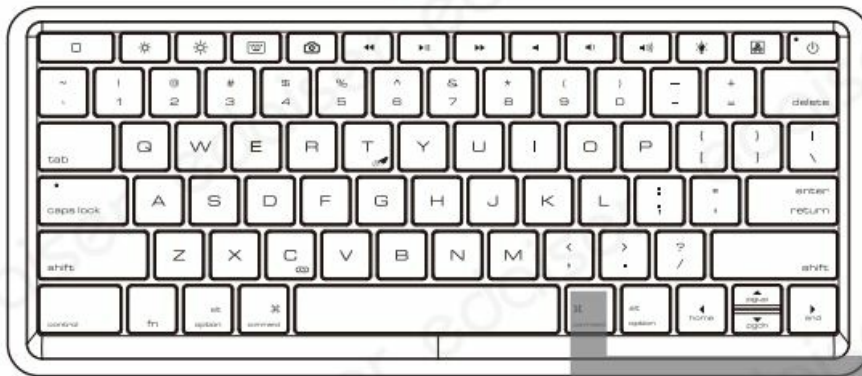



* To type the character in below grey area, hold shift and press the desired character

* Long Hold-app specific shortcut shows up (e.g. when you are in an App, hold this key and you will see all the shortcuts that can be used in this App)

	Home		Following song
	Reduce iPad brightness		Mute
	Increase iPad brightness		Decrease the volume
	Virtual keyboard		Increase the volume
	Screen capture key		Brightness adjustable(backlit)
	Previous song		Switch the backlit color
	Play/Pause		Switch

RGB BACKLIGHT:

1. 7 Backlight modes: Press  to switch 7 different backlight modes or turn off the RGB backlight.

2. 3 Brightness backlight mode: press  to adjust the brightness of the backlight or turn off the backlit.

NOTE:

For power saving, if you don't touch the keyboard for 5 seconds, the backlit would go off automatically, it will light up again when you press any key.

TRACKPAD GESTURE DESCRIPTION


One Finger



Tap: Press with one finger until it feels a little bit.
Tap and hold: Press and hold with one finger.



Open the Dock: Swipe the pointer across the bottom of the screen with one finger.
Go to the home screen: When the dock appears, swipe the pointer across the bottom of the screen again.

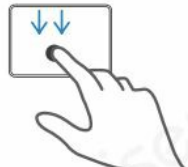


Open "Notification Center": Move the pointer to the status icon in the upper left corner of the screen with one finger, then tap or swipe up again with one finger.
Open "Control Center": Move the pointer to the status icon in the upper right corner of the screen with one finger, then tap or swipe up again with one finger.




Drag: Tap and hold the item, then slide your finger on the touch pad to move it.


Double Fingers

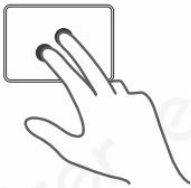

Auxiliary tap: Move the cursor to the APP icon with one finger, then tap or tap with two fingers to open the APP menu.

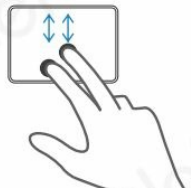

Scroll up or down: Swipe up or down with two fingers.
Scroll left or right: Swipe left or right with two fingers.

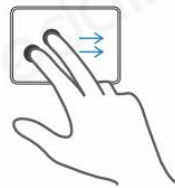


Turn on the Today view: When the home screen or lock screen is visible, swipe right with two fingers.
Open search from the home screen: Swipe down with two fingers.



Zoom: Place two fingers close together, spread to zoom in, or pinch to zoom out.


Three Fingers

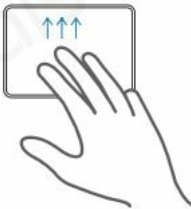

Go to the home screen: Swipe up with three fingers



GOpen the APP switcher: Swipe up with three fingers, pause and then lift your finger

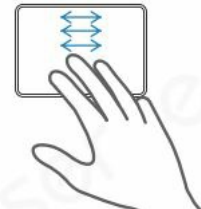

Switch between open apps! Swipe right with three fingers, then swipe left or right to switch.


BE SURE THAT THE TOUCHPAD CAN BE USED ON YOUR IPAD AS PER BELOW STEPS:

1. You need to complete the below settings: Settings/Accessibility/Touch/AssistiveTouch/ AssistiveTouch On
2. Make sure your iPad Software Version is up to 14.6 or above version.
3. Choose the right "Keyboard" on your iPad General/Keyboard/Keyboards/English(US)/QWERTY

KEYBOARD FUNCTION

Touchpad /Gesture

1. Make sure the iPadOS operation system is up to 14.6 and above.

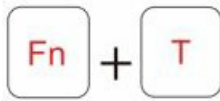

2. Press **Fn** + **T** to turn on/off the touch function.
3. After successfully turning on the touchpad, when moving the touchpad with your hand, you will see a cursor appear on the iPad screen.
4. The shortcut gestures are based on the default setting. Kindly refer to our gesture instructions manual.
5. Kindly mind your hands on the touchpad when typing, otherwise, your cursor may move randomly. you can simply to turn it on or off.
6. When every time the Bluetooth, the touchpad will a slight delay of about 3 seconds, which is normal because the touchpad needs to retrieve Bluetooth and connect to it.

You can adjust the cursor tracking speed as one of the below settings:

1. Settings/Accessibility/Touch/Assistive: Touch On the bottom of this page, you can adjust tracking sensitivity, the cursor will be slower when it's closer to the tortoise, and be more sensitive when it's close to the rabbit.
2. Settings/General/Trackpad&Mouse: You can adjust tracking sensitivity, the cursor will be slower when it's closer to the tortoise and be more sensitive when it's close to the rabbit.

How to update your iPadOS to 14.6?

To upgrade your iPadOS to the latest version:

1. Open your device's Settings > General > Software Update.
2. Tap Download and Install. (If you see Resume Download, tap that instead)



How to confirm the keyboard needs to be charged?

1. When the low battery indicator(red sign) blinks, please use the included TYPE-C cable with your iPad charger to recharge it. The red indicator stays on during recharging. After the charging is completed, the green indicator will light up.
2. If you do not use the keyboard for a long time. Please recharge your keyboard in time (once of two months).
Note: Keep at normal temperature and charge at normal voltage. If you don't use it for a long time, you need to charge your keyboard in time(once of two months).

How to do if the keyboard can't connect to your iPad?

1. Make sure a keyboard has already been paired via Bluetooth.
2. The Bluetooth keyboard is charged.

3. The Bluetooth keyboard is within 33 feet.
4. Please delete all devices on your iPad Bluetooth list, then restart your iPad Bluetooth and restart the keyboard.
5. Not compatible with multiple device connections, only supports one-by-one connection.
6. When the battery is low, the Bluetooth connection may be interrupted.

How to press the symbol buttons?

After bluetooth connected well, just press the combination Keys: "Shift" and "any symbol ". For example, "Shift" and "@" "then you will get "@" on your iPad.

Why i press A but get a Z

Go to settings/keyboard/keyboard/English(US) /QWERTY.

How to change between lowercase and uppercase on the keyboard?

1. The caps lock default function is to switch languages. So to type capital letters on the keyboard, please turn off the cap lock default function first.
2. Go to your iPad settings–Keyboards setting– hard ware keyboard–turn off the toggle of switch languages using caps lock", then you can change between lowercase and uppercase by press the caps lock key.

How to do if the space bar doesn't work?

1. You can try the below settings firstly: Settings/Accessibility/Keyboards/Fu 11 Keyboa access/Commands/
2. Then change the settings for "Space" from 'activate" to "Clear". If it comes back, then you can also turn Off Full KeyboardAccess.
3. Once it is cleared, the space bar will work fine.

What do to do if some keys don't work?

Some of the keys do not work, please try to reset the keyboard by pressing and holding the combination key" L +s+z- for 3s, you'll see the indicator flash once. It shows the keyboard has been reset. After resetting the keyboard, please pair the keyboard with your iPad again.

If there is a delay after you press the keys, please kindly check one of the iPad Settings as below:

Settings/ Accessibility/Keyboards/Slow Keys Off. Settings/Accessibility/Keyboards/Slow Keys On 0.1 Seconds.

If there is repeated characters after you press a certain key, please kindly check one of iPad Settings below:

Settings/ Accessibility/Keyboards/Key Repeat On 0.1 SecondsSettings/ Accessibility /Keyboards/Key Repeat Off.T


Be sure that touchpad can be used on your iPad as below steps:

1. You need to complete below settings: Settings/ Accessibility /Touch/ Assistive Touch/ AssistiveTouch On
2. Make sure your iPad Software Version is up to 14.6 or above version.
3. Choose right "Keyboard" on your iPad General/Keyboard/Keyboards/English(US)/QWERTY

If you have unwanted auto-correction or punctuation, please follow these steps:

1. Open Settings app > General> Keyboard > Hardware Keyboard;

2. Toggle OFF Auto-Capitalization, Auto-Correction, and"." shortcut (Please refer to the picture below).

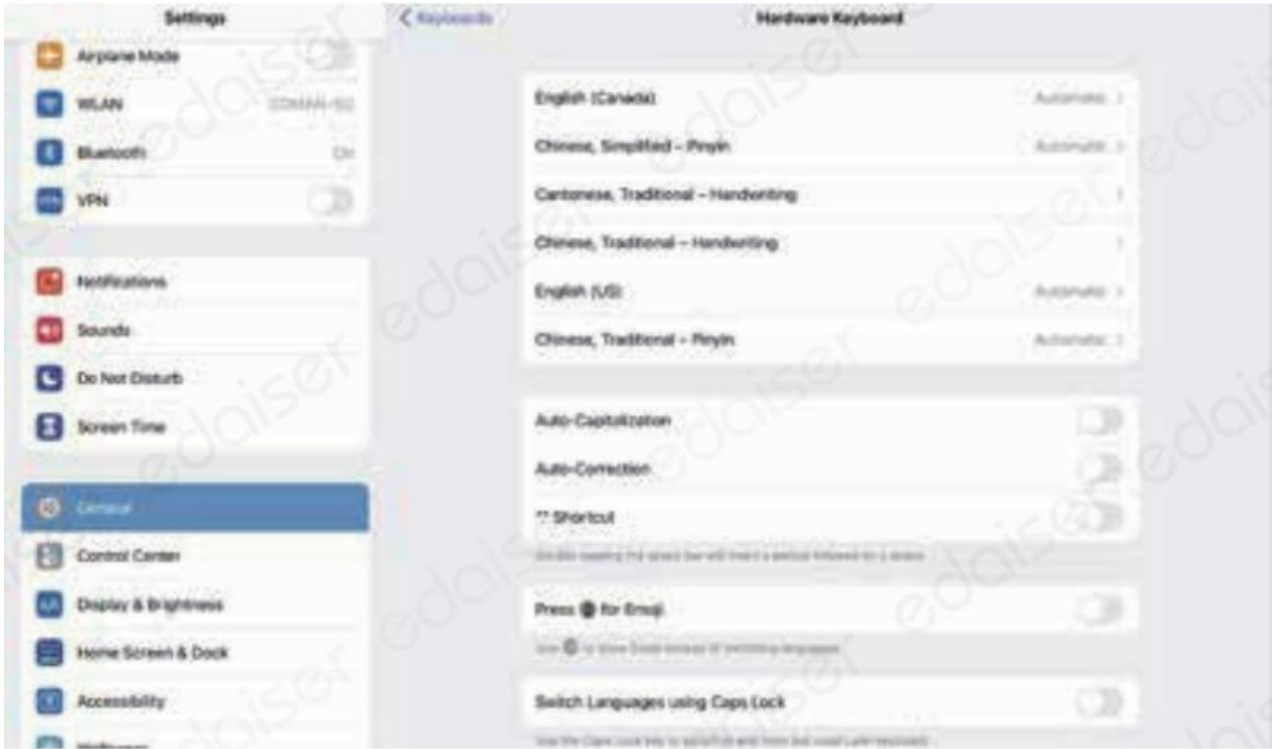

WARRANTY & TECHNICAL SUPPORT

Thanks for purchasing the Edaiser Magic Keyboard Case with trackpad series, each unit was manufactured and under strict quality control. Each product is covered by a one-year warranty. If you have any questions about the product, please contact our brand support at support@edaiser.com. And you are most welcome to contact us for the latest user manual. Thanks for your support always

Documents / Resources

<div><div>edaiser</div><div>User Manual</div><div>MAGIC SERIES</div></div>	<div>edaiser P11 Touch Magic Keyboard Case [pdf] User Manual</div> <div>P11 Touch Magic Keyboard Case, P11, Touch Magic Keyboard Case, Magic Keyboard Case, K eyboard Case, Touch Magic Keyboard, Magic Keyboard, Keyboard P11</div>
--	--

References

- [User Manual](#)