

FeinTech FPS00200 USB Fingerprint Sensor User Guide

Home » FeinTech » FeinTech FPS00200 USB Fingerprint Sensor User Guide 🖺



Contents

- 1 Preparation:
- 2 Installation
- 3 Setup
- 4 Documents /

Resources

- 4.1 References
- **5 Related Posts**

Preparation:

Start your Windows computer and make sure you have an internet connection. You need administrator rights. If your computer is part of a corporate network/domain, the use of Windows Hello and the installation of USB devices/drivers must be allowed.


Please note that the menus on your computer may look different or change over time. The setup described here refers to Windows 11. An installation under Windows 10 is just as possible.



Installation


Plug the FPS00200 into a free, easily accessible USB socket.


Normally, the appropriate driver is now automatically installed and the installation is complete. Under Accounts > Logon Options, the option Fingerprint Recognition (Windows Hello) is now available. You can then continue with the setup.

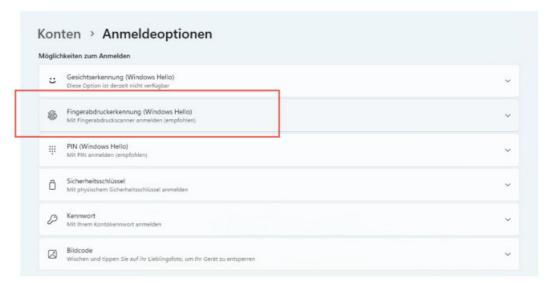

If this option is not yet available, please check these settings: Under Windows Update > Advanced Options, select Optional Updates and allow driver updates. The appropriate driver for biometric devices should be installed now at the latest.

Under Windows Update > Update History > Driver Updates you can see drivers that have already been installed.

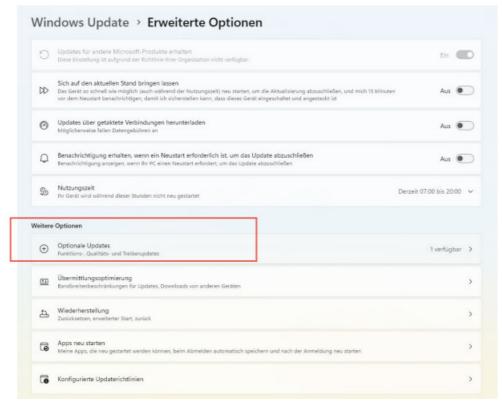


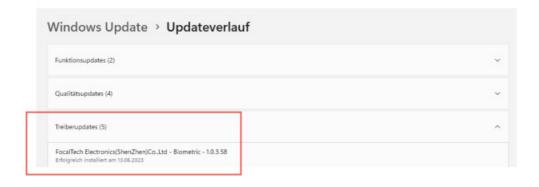

If not already done, set up PIN (Windows Hello) as an additional logon option. This allows you to log in when the fingerprint sensor is not connected.

Under Accounts > Logon Options, select Fingerprint Recognition (Windows Hello) and click Setup.

Then follow the instructions. You can enrol several fingers one after the other. To do this, click Add more fingers. Done. You can now use your fingerprint to log in to Windows, Microsoft services and other applications that support Windows Hello.

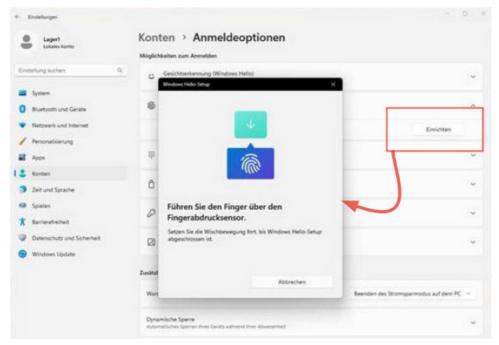







FeinTech is a registered trademark of Spreewald Kommunikationstechnik GmbH Radensdorfer Hauptstr. 45 a 15907 Lübben (Spreewald) • Germany WEEE-Reg DE15618234 Service:

> <u>service@feintech.eu</u> +49 3546 239 8855

Documents / Resources



<u>FeinTech FPS00200 USB Fingerprint Sensor</u> [pdf] User Guide FPS00200, FPS00200 USB Fingerprint Sensor, USB Fingerprint Sensor, Fingerprint Sensor, Sensor

References

• User Manual

Manuals+, Privacy Policy