

FOLLETT MC_414A Maestro Plus Ice Machine Installation Guide


Home » FOLLETT » FOLLETT MC_414A Maestro Plus Ice Machine Installation Guide 1



Contents

- 1 MC_414A Maestro Plus Ice Machine
- 2 Welcome to Follett
- **3 Getting Started**
- **4 Specifications**
- **5 Technical specifications**
- 6 Documents / Resources
 - **6.1 References**

MC_414A Maestro Plus Ice Machine

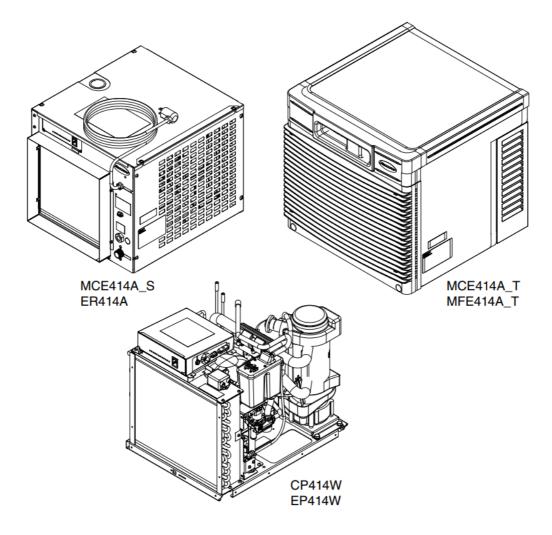

MC_414A, MF_414A Ice Machines R290, 230 V 50 Hz Installation Guide

Please visit https://www.follettice.com/technicaldocuments for the Operation and Service manual for your unit.

Welcome to Follett

Follett equipment enjoys a well-deserved reputation for excellent performance, long-term reliability and outstanding after-the-sale support. To ensure that this equipment delivers that same degree of service, review this guide carefully

before you begin your installation.

Should you have need technical help, please call our Technical Service group at (877) 612-5086 or (610) 252-7301.

Please have your model number, serial number and complete and detailed explanation of the problem when contacting Technical Service.

Getting Started

After uncrating and removing all packing material. Inspect the equipment for concealed shipping damage. All freight is to be inspected upon delivery. If visible signs of damage exist, please refuse delivery or sign your delivery receipt "damaged." Follett Customer Service must be notified within 48 hours. Wherever possible, please include detailed photos of the damage with the original packaging so that we may start the freight claim process.

Risk of fire or explosion. Flammable refrigerant used. Follow handling instruction carefully. To be repaired only by trained service Personnel.

Do not puncture Refrigerant Tubing. Do not use this product with flammable gases or flammable solvents.

Do not store flammable gases, flammable liquids or flammable solids in these units. Do not use FLAME to check for gas leak.

Do not under any circumstances try to modify or repair valves, regulator, connectors, controls or any other appliance. Doing so creates the risk of a gas leak.

Keep ventilation openings clear of obstruction.

Do not damage the refrigerant circuit.

Connect to potable water supply only.

Marning!

- Read this manual thoroughly before operating, installing or performing maintenance on the equipment. Failure to follow instructions in this manual can cause property damage, injury or death.
- The ice machine contains R290 (propane) refrigerant. R290 (propane) is flammable in concentrations of air between approximately 2.1% and 9.5% by volume. R290 (propane) may burn if exposed to a heat source above 470 °C.
- When servicing this equipment, be sure to lock the circuit breaker, and display an in-service notice.
- This equipment contains high-voltage electricity and refrigerant charge. Installation and repairs are to be
 performed by properly trained technicians aware of the dangers of dealing with high voltage electricity and
 refrigerant under pressure. The technician must also be certified in proper refrigerant handling and servicing
 procedures. All lockout and tag out procedures must be followed when working on this equipment.
- Repair on R290 systems must always be done in a well-ventilated area.
- Because R290 is highly flammable, a combustible gas leak detector is required when servicing R290 systems.
- Only use parts recommended or provided by the manufacturer.
- Routine adjustments and maintenance procedures outlined in this manual are not covered by the warranty.
- This equipment is intended for indoor use only. Do not install or operate this equipment in outdoor areas.
- We reserve the right to make product improvements at any time. Specifications and design are subject to change without notice.
- Do not tilt unit further than 30° off vertical during uncrating or installation.
- This appliance is not suitable for installation in an area where a water jet could be used.
- This appliance must not be cleaned by a water jet.
- User miniatous should not be done by children.
- Follett recommends a Follett water filter system be installed in the ice machine inlet water line (standard capacity #00130229, high capacity #00978957, carbonless high capacity #01050442).
- Do not block air intake or exhaust.
- This appliance should be permanently connected by a qualified person in accordance with application codes.
- A qualified person shall provide a readily accessible disconnect device incorporated into the fixed wiring.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory,
 or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction
 concerning use of the appliance in a safe way and understand the hazards involved. Children should be
 supervised to ensure that they do not play with the appliance.
- This appliance is designed for commercial use.
- **WARNING!** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- Warranty does not cover exterior or outside installations.
- To reduce risk of shock, disconnect power before servicing.
- · Connect to potable water supply only.
- Ice is slippery. Maintain counters and floors around dispenser in a clean and ice-free condition.
- Ice is food. Follow recommended cleaning instructions to maintain cleanliness of delivered ice.

Specifications

Electrical

- Each ice machine and dispenser requires a separate circuit with electrical disconnect within 10 ft (6 m).
- Equipment ground required.
- Standard electrical 230 V, 50 Hz, 1 phase
- · Connect to a dedicated circuit.
- Maximum ice machine amperage 5.5A.
- Cord provided on ice machine.

Plumbing

- 3/8" FPT water inlet
- 3/4" MPT drain

Notes:

- Slope to drain of 1/4" per foot (20 mm per 1 m run) with a 1/2" min. is recommended.
- Water shut-off recommended within 10 feet (3 m), drain to be hard piped and insulated.
- Separate drains for ice machine and condenser. To prevent back flow, do NOT connect drains.
- Follett recommends a Follett water filter system be installed in the ice machine inlet water line (standard capacity #00130229, high capacity #00978957, carbonless high capacity #01050442).

Ambient

Air temperature*	100 F/38 C max.	50 F/10 C min. (best performance below 80 F/27 C)
Water temperatures	90 F/32 C max.	45 F/10 C min. (best performance below 70 F/21 C)
Water pressure	70 PSIG max. (482 KpA)	10 PSIG min. (68 KpA)
Condenser water temp erature	90 F/32.2 C max.	45 F/7.2 C min
Condenser water press ure	125 PSIG (862 KpA) max.	10 PSIG (68 KpA) min.

- Ambient air temperature is measured at the air-cooled condenser coil inlet.
 - † Ambient water temperature is measured in the ice machine reservoir.

Shipping weight

• 73 kg (160 lb)

Technical specifications

Refrigeration pressure data

- Water regulating valve is factory set at 300 ±10 PSIG (2068.4 ± 69 kPA) head pressure.
- Readings within 10% of table values should be considered normal.

Compressor data

Air-cooled				
Ambient air temperature	50 F/10 C	70 F/21.1 C	90 F/32.2 C	110 F/43.3C
Amperage	2.25	2.36	2.46	2.57
High-side pressure (PSIG)	105	142	190	245
Low-side pressure (PSIG)	18.5	21	25	27

Locked rotor amps 230 V: 18.2A

Condenser water usage: @90 F/70F: 0.56 gal/min

Gearmotor data	230 V/50 Hz
Gearmotor current	1.3A (nominal)

Refrigeration system

Important: All service on refrigeration system must be performed in accordance with all federal, state and local laws that pertain to the use of refrigerants. It is the responsibility of the technician to ensure that these requirements are met.


R414 ice machine charge specifications

Model	Charge	Refrigerant type
E414 230 V, 50 Hz air-cooled	3.52 oz (100 grams)	R290


Dimensions and clearances

- Entire front of ice machine must be clear of obstructions/connections to allow removal.
- 12" (30.5 cm) clearance above ice machine for service.
- 6" (15.3 cm) minimum clearance between exhaust side of ice machine and any adjacent equipment.
- MCE414A and ER414A 18" (45.7 cm) minimum, 10 ft (3 m) maximum clearance between discharge and air intake grilles.




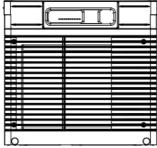

Side view — top mount

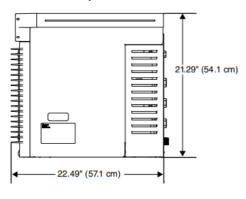


Back view — top mount

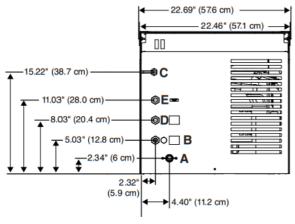


MCE414A_S ER414A

Front view - air-cooled

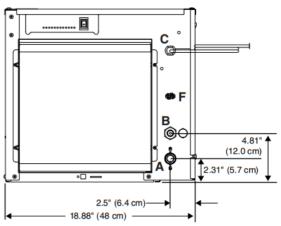

Side view — air-cooled

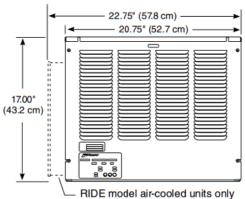

A – 3/4" MPT drain

B - 3/8" FPT water inlet

- C Electrical cord
- **D** 3/8" FPT condenser inlet
- E 3/8" FPT condenser drain
- **F** Bin signal connection (DO NOT APPLY VOLTAGE!)

Cleaning

Follett ice machines and dispensers, and their associated cleaning and sanitizing procedures, are designed for use with potable water sources. The presence, or suspected presence, of infectious agents may call for additional measures, including the replacement of components and more comprehensive disinfection measures. Follett recommends that these cleaning and sanitizing procedures be reviewed with the appropriate infectious agent subject matter experts to assure complete remediation.

Periodic cleaning of Follett's ice machine system is required to ensure peak performance and delivery of clean, sanitary ice. The recommended cleaning procedures that follow should be performed at least as frequently as recommended and more often if environmental conditions dictate.

Cleaning of the condenser can usually be performed by facility personnel. Cleaning of the ice machine system should be performed by your facility's trained maintenance staff or a Follett authorized service agent. Regardless of who performs the cleaning, it is the operator's responsibility to see that this cleaning is performed according to the schedule below. Service problems resulting from lack of preventive maintenance will not be covered under the Follett warranty.

Recommended cleaning intervals*

Maestro Plus	Frequency
Drain Line	weekly
Drain Pan/Drip Pan	weekly
Exterior, Water Station Tube	as needed
Condenser	monthly (air-cooled only)
Ice Machine	semi-annually
Transport Tube	semi-annually

^{*} Ice machine must be cleaned prior to start-up.

Weekly

The exterior may be cleaned with a stainless cleaner such as 3M[™] Stainless Steel Cleaner & Polish or equivalent.

Monthly

Condenser (air-cooled ice machine only)

- 1. Use a vacuum cleaner or stiff brush to carefully clean condenser coils of lint and debris to ensure optimal performance.
- 2. When reinstalling counter panels in front of RIDE ® model ice machines, be sure that ventilation louvers line up with condenser air duct.

Semi-Annually (more often if conditions dictate)

- A cleaning procedure should always include both the ice machine and bin/dispenser.
- · Icemaking system can be cleaned in place.

Cleaning Tool Checklist

- (1) 1.5 gallon (or larger) plastic bucket
- (2) clean cloths
- · Sanitary gloves
- Safety glasses
- Safe CLEAN™ Plus ice machine cleaner
- (2) Sani Sponge™ (PN 00131524 single sponge)



- Wear rubber gloves and safety goggles (or face shield) when handling Safe CLEAN Plus solution.
- Use only Follett approved cleaners.
- Do not use solvents, abrasive cleaners, metal scrapers or sharp objects to clean any part of the dispenser.

Safe CLEAN Plus Solution: Follow the directions on the Safe CLEAN Plus packaging to mix 1 gal. (3.8 L) of Follett Safe CLEAN Plus solution. Use 100 F (38 C) water.

Cleaning Procedure

Note: Check drains and drain cup to ensure they are open and flowing freely.

- If ice machine was running recently, ensure that the evaporator is completely free of ice before proceeding.
 If there is ice in the evaporator, complete steps 2-7 using only hot water to remove the ice, then begin Cleaning Procedure again.
- 2. Remove front or top cover.
- 3. Disconnect bin signal cable from ice machine electrical box.
- Press CLEAN switch. The MAINTENANCE light will turn on and the machine will drain. Wait for the LOW WATER light to turn on.
- 5. Remove lid from cleaning cup and fill (about 1 quart) until Safe **CLEAN** Plus solution completely fills the reservoir. Place lid back on cup.
- CLEANER FULL light will turn on and machine will start cleaning cycle then rinse three times; this process takes approximately 15 minutes.
- 7. When machine is finished cleaning, the **MAINTENANCE** light will turn off.
- 8. Remove top bearing insulation. Loosen Phillips-head screw on nozzle connected to evaporator. Remove nozzle from evaporator side only, leave other side of nozzle connected to transport tube.
- 9. Soak one Sani Sponge in remaining Safe **CLEAN** Plus solution.
- 10. Insert the sponge soaked in Sophoclean Plus solution into nozzle then insert a dry sponge into the nozzle.
- 11. Replace nozzle onto evaporator and tighten screw. Ensure drain is connected to reservoir and vent tubes are connected to evaporator drain pan. Replace top bearing insulation.
- 12. Reconnect bin signal cable. Wait for ice to push sponges through transport tube.
- 13. Collect sponges from ice storage bin.
- 14. Replace front or top cover.
- 15. After 10 minutes, dispense all ice and discard.
- 16. Clean the dispenser/bin.

Exterior Cabinet

Clean stainless steel panels with stainless steel cleaner.

Electrical system




To prevent circuit breaker overload, wait 15 minutes before restarting this unit. This allows the compressor to equalize and the evaporator to thaw.


Normal control board operation

The PC board indicator lights provide all the information necessary to determine the machine's status. Green indicator lights generally represent "go" or normal operation; Yellow indicators represent normal off conditions; Red indicators generally represent alarm conditions, some of which will lock the machine off.

A flashing green light labeled POWER indicates power to the machine. All other normal operation status indicators are covered as follows:

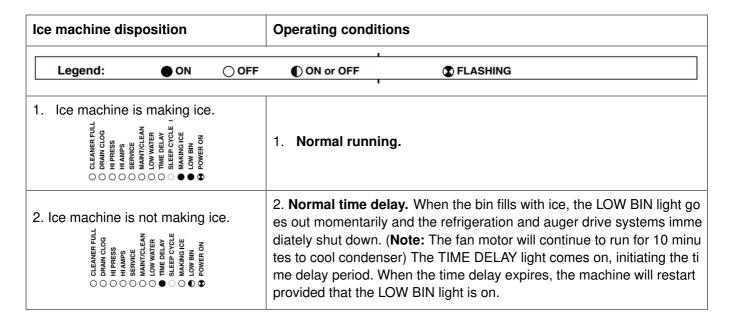


DIP Switch Settings




MCE414A/W_T, MCE414A/W_S, ER414A/W

OFF ON Not used Not used Sleep cycle enabled Sleep cycle disabled SensorSAFE Lever Sleep cycle Sleep cycle dispense duration _dispense duration_ 20 min. time delay 60 min. time delay Flush enabled Flush disabled Maint. timer OFF Maint. timer ON

414A/W installed in Symphony Plus 25/50/110 CI, CT, or FB

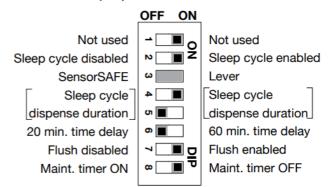


Replacement P425A/W installed in Symphony dispenser

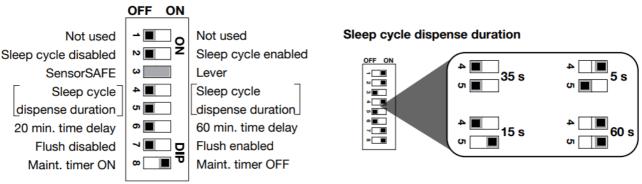

^{*} Flush can be enabled on Symphony CT and FB models. Flush should be disabled on Symphony CI units due to risk of internal leak if drain line is blocked. All Symphony Plus models should be set to Flush enabled.

Electrical control system schematic – 230 V 50 Hz

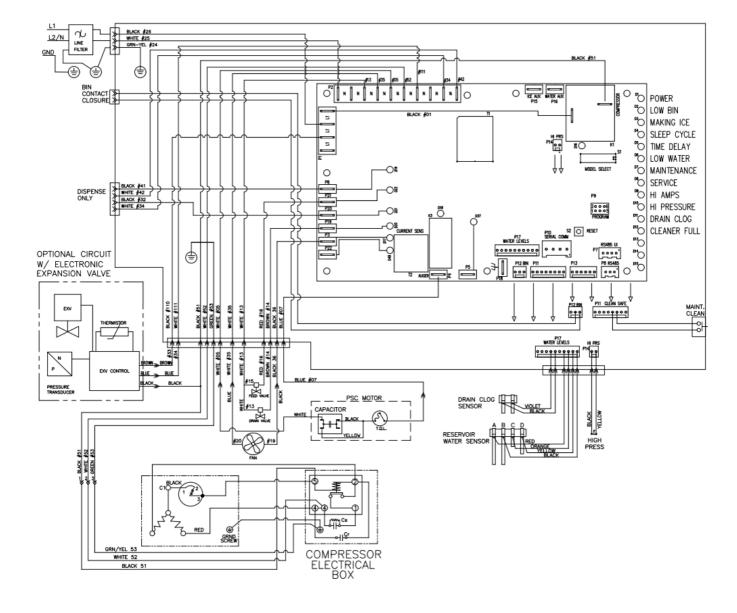

Warranty Registration and Equipment Evaluation

Thank you for purchasing Follett ® equipment. Our goal is to deliver high value products and services that earn your complete satisfaction by delivering high-value products and services backed by outstanding customer and technical support.

Please review the installation instructions thoroughly. It is important that the installation be performed to factory specifications so your equipment operates at its maximum efficiency.

Follett Products, LLC will not be liable for any consequential damages, expenses, connecting or disconnecting charges, or any losses resulting from a defect of the machine. For full warranty details, visit our website www.follettice.com/productwarranties.

Registering your equipment's helps Follett track your equipment's service history should you need to contact us for technical support, and your feedback helps us improve our products and services. Please visit www.follettice.com/support to complete the Warranty Registration form.

Should you have any questions, please contact Follett's technical support group at (877) 612-5086 or (610) 252-7301 and we will be happy to assist you.

Calgon is a licensed trademark distributed by Nu-Calgon, in the United States.

3M is a trademark of 3M Company.

Sophoclean, Sani Sponge, and Symphony Plus are trademarks of Follett Products, LLC. Follett is a registered trademarks of Follett Products, LLC, registered in US.



801 Church Lane • Easton, PA 18040, USA Toll free (877) 612-5086 • +1 (610) 252-7301

www.follettice.com

Follett Europe Polska Sp. z o.o.

Murky Dowry 26 c • 83-021 Willena, Poland
+48 (58) 785-6140 • Fax +48 (58) 785-6159

www.folletteurope.com

01518992R02 © Follett Products, LLC 11/22

Documents / Resources



FOLLETT MC_414A Maestro Plus Ice Machine [pdf] Installation Guide

MC_414A Maestro Plus Ice Machine, MC_414A, Maestro Plus Ice Machine, Plus Ice Machine, I ce Machine

References

- F Product Warranties | Follett Ice
- F Technical Support | Follett Ice
- F Technical Support | Follett Ice

Manuals+,