



## Furneet 2 Pack Wireless Lavalier Microphone User Manual

[Home](#) » [Furneet](#) » **Furneet 2 Pack Wireless Lavalier Microphone User Manual** 


### Furneet 2 Pack Wireless Lavalier Microphone User Manual




#### Introduction

“Thanks for choosing our product, “This product is a smart wireless microphone that provides professional-grade recording output. Plug and play, no app required. Multiple uses: It can be used in online live broadcast, video Vlog shooting, program interview, recording, video teaching and other occasions.

The wireless Microphone consists of two parts, one is Microphone transmitter , the other one is receiver. (See as

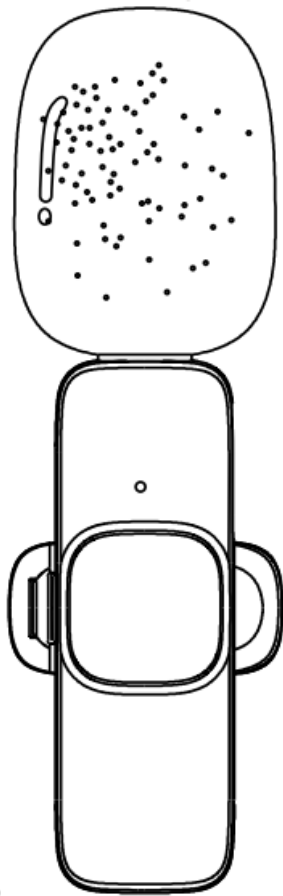


below picture)  
(Microphone transmitter)

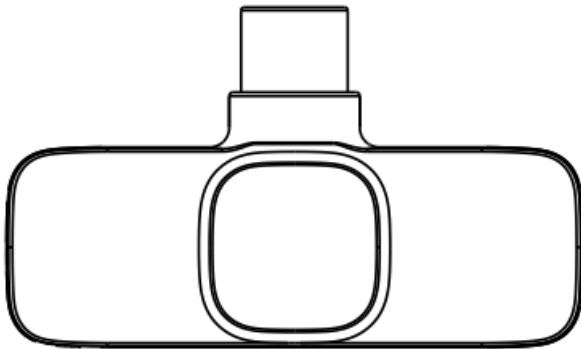

(receiver)


ID Diagram

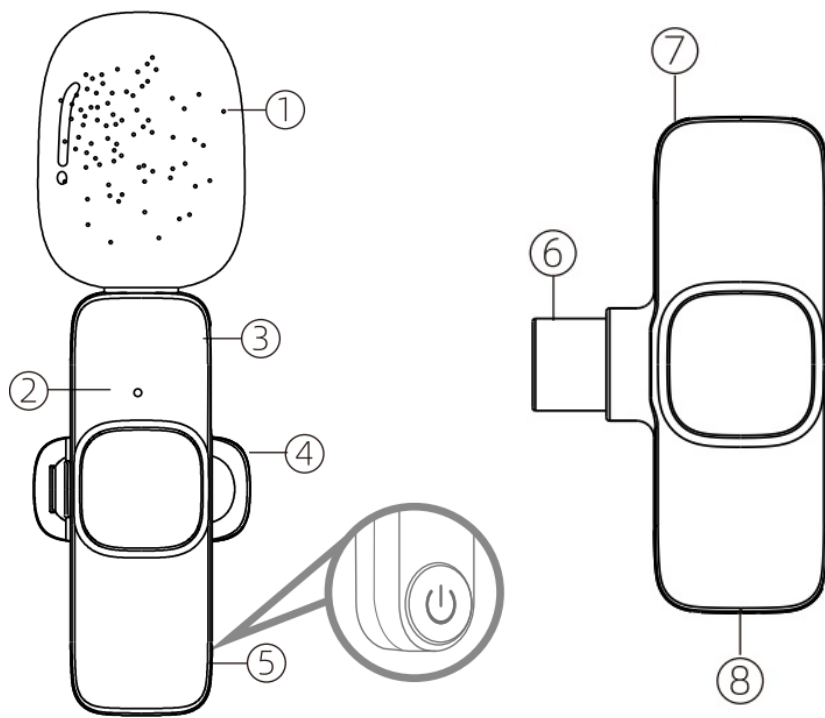

1. Windproof net
2. Microphone indicator
3. Microphone charging port
4. Microphone clip
5. Switch key
6. port to connect phone
7. Receiver indicator
8. Type-C port of receiver


#### How to use

**Step 1:** Connect the receiver to phone with port.

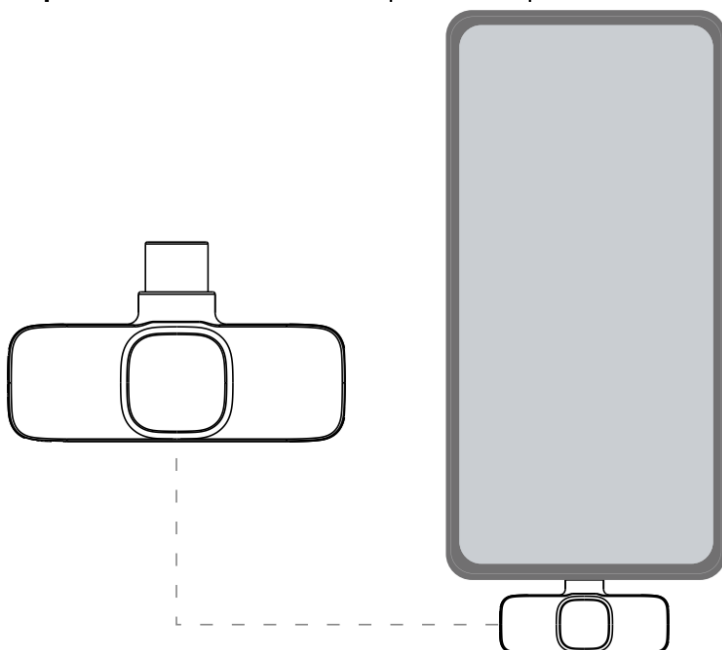


**Note:** Oppo /vivo / iqoo / realm brand mobile phones can be used normally only when they go to the settings. (search "OTG" – turn on DTG power supply)

**Step 2:** press switch key of microphone, the indicator light turns green, and then power is turned on,

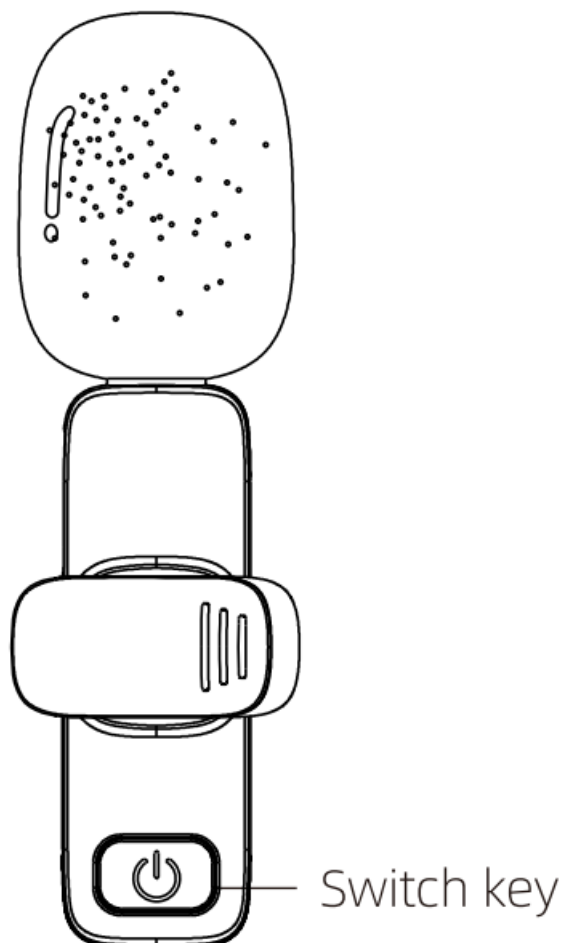


**Step 3:** The indicator red light of receiver keeps always on, then open the phone camera, live App or other Apps, and then to use the microphone to receive sound.

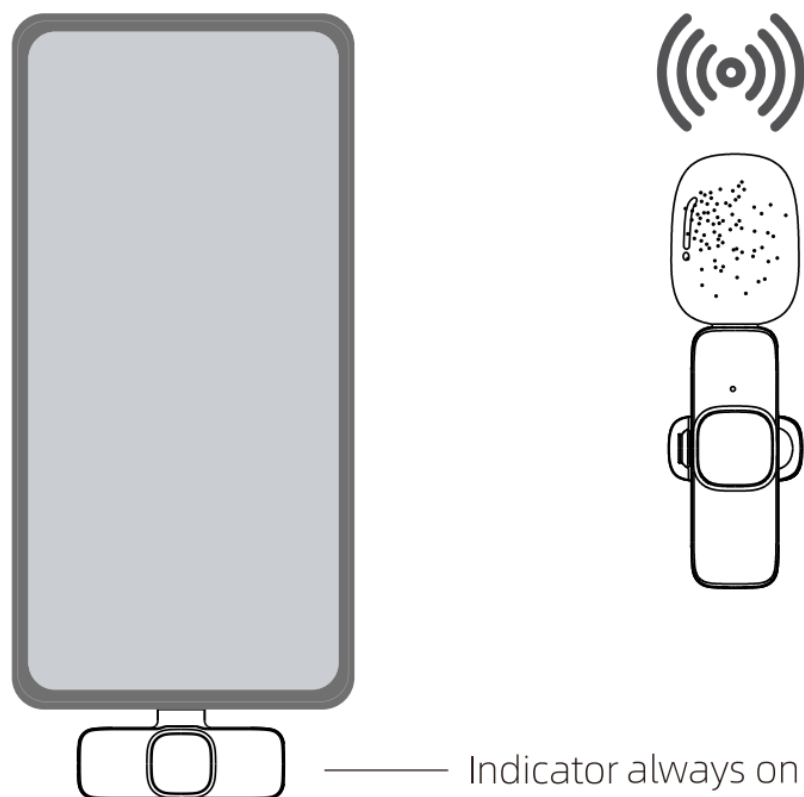

**Special Note:**

For the use of port: there is no battery in receiver, and no need to recharge during live. If the phone is low power during Live, it can be recharged directly through port.

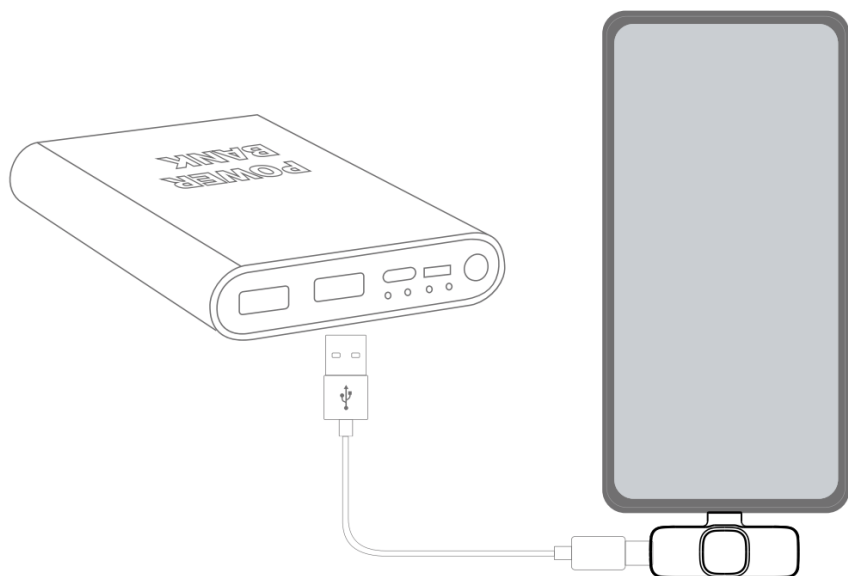

About UI

## Microphone Transmitter

Function	How to use	Light
Power on	Press switch key about 3seconds	Red and green flash alternately
Power off	Press switch key about 3seconds	Light off
Pairing		Red and green flash alternately
Paired		Green light keeps on
Mute	switch once	Green light flashes
	Press key	
Unmute	Press switch key once	Green light keeps on
No connection	No connection for more than 3 minutes, Automatic shutdown	Light off
Low battery alarm	<b>Power on state</b>	The red and green lights come on every 10 seconds
Charging	Charging with Type-C cable	The red light goes out when it is fully charged

Receiver

Function	How to use	Light
Power on	Plug in the device	Red light on
Power off	Plug off the device	Light off
Pairing		Red light flashes slowly
Paired		Red light on

**Note:** if one of the two microphones is flashing and not connected, turn off the microphone that has been successfully connected, then unplug the receiver, then turn on the microphone that has not been connected, and then press and hold the switch for 8 seconds until it flashes quickly, and then plug in the receiver. The connection is successful (there is no need to use too much force to switch on and off).

## Contents

[1 Packing List](#)

[2 Documents / Resources](#)

[2.1 References](#)

[3 Related Posts](#)

## Packing List

### Content of packing

1. Microphone transmitter
2. receiver
3. charging cable
4. User manual



# Furneet

## Documents / Resources

	<a href="#">Furneet 2 Pack Wireless Lavalier Microphone</a> [pdf] User Manual 2 Pack Wireless Lavalier Microphone, 2 Pack, Wireless Lavalier Microphone, Lavalier Microphone, Microphone
--	---

## References

- [User Manual](#)

